# Quick start guide






Step A Connect


Step B Setup


Step C Enjoy

### What's in the Box?

You should find these items upon opening the box.

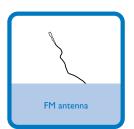

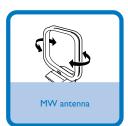

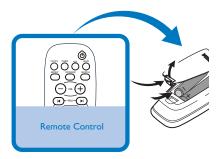










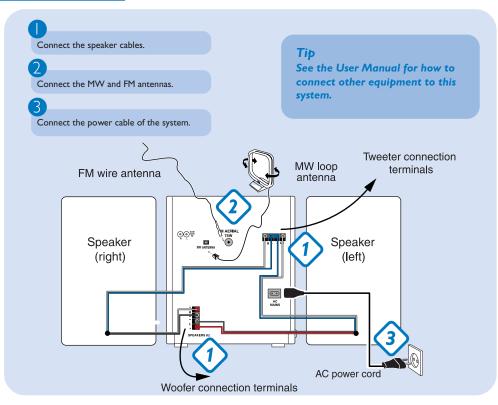






In standby or view clock mode, press CLOCK•TIMER once. In other source mode, press CLOCK•TIMER twice.

Press ≪ or ➤ repeatedly to set the hour.

Press ✓ or ➤ repeatedly to set the minute.

Press CLOCK•TIMER again to store the setting.

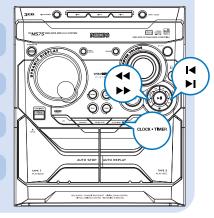

### Playing a disc

0

Press OPEN•CLOSE to open the disc tray and load up to two discs on the individual disc trays. To load the third disc, press DISC CHANGE.

→ Make sure the label side of each loaded disc is facing up.

2


Press OPEN•CLOSE again to close the disc tray.


3

Use DSC 1/2/3 (or CD 1/2/3 on the remote control) to select a disc for playback and then press ▶ ■ to start playback.

4

To stop playback, press STOP■.

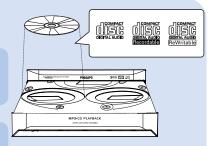

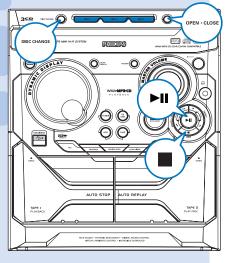

## Programming and tuning to radio stations

0


Press **TUNER** to select the tuner source.

2

Press PROGRAM for more than two seconds to program all available stations in order of waveband.

3

Press or until the desired preset station is displayed.

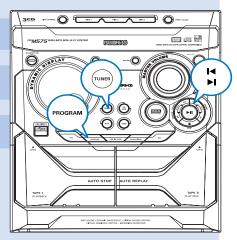



### Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- Insert the USB device's USB plug into the socket \*\*> on the set.
- Press CD/USB once or more to select USB (or USB DIRECT on the remote control).
- Play the USB's audio files as you do with the albums/tracks on a CD,

#### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



2006 © Koninklijke Philips Electronics N.V. All rights reserved.

http://www.philips.com

