

# Quick Start Guide

 
 
 


Step A	Setup
--------	-------

Step B	Enjoy
--------	-------

## What's in the Box?

You should find these items upon opening the box.

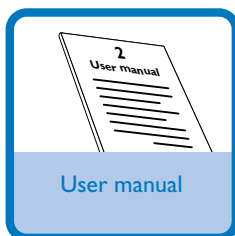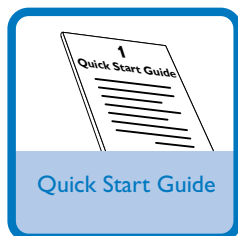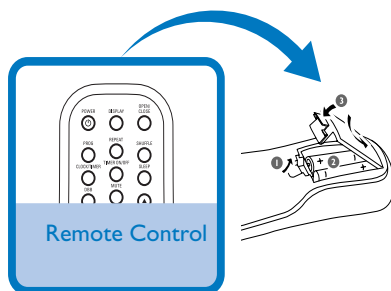


# PHILIPS

## Connection

- 1 Connect the speaker wires to the **SPEAKERS** terminals.
- 2 After ensuring all the above connections have been made, connect the power cord of the system to the AC power outlet.


### Tip

 *It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.*

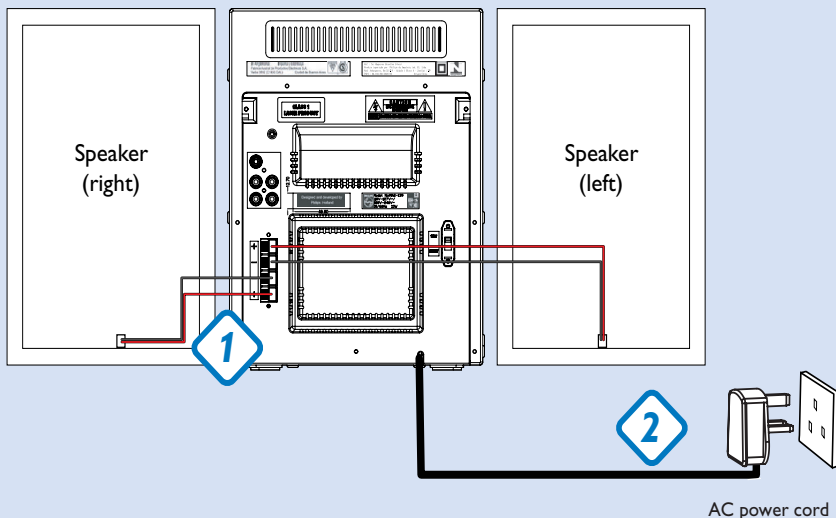

## Setting the clock

 
- 1 In any mode, press **CLOCK/TIMER** twice. The clock digits for the hours flash.
- 2 Press **SEARCH**  $\ll \ll \gg \gg$  ( $\ll / \gg$  on the remote) to set the hours.
- 3 Press **CLOCK/TIMER** again. The clock digits for the minutes flash.
- 4 Press **SEARCH**  $\ll \ll \gg \gg$  ( $\ll / \gg$  on the remote) to set the minutes.
- 5 Press **CLOCK/TIMER** to confirm the time.

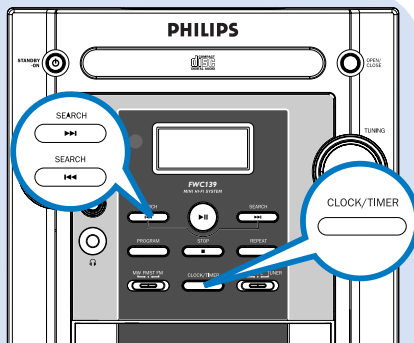

## Step B *Enjoy*

### Playing a disc

 - 1 Adjust the source selector to select CD source.
- 2 Press **OPEN/CLOSE** on the system to open the CD compartment.
- 3 Insert a disc with printed side facing up and press down on **OPEN/CLOSE** to close the CD door.
- 4 Press ►|| to start playback.
- 5 Press ■ to stop playback.

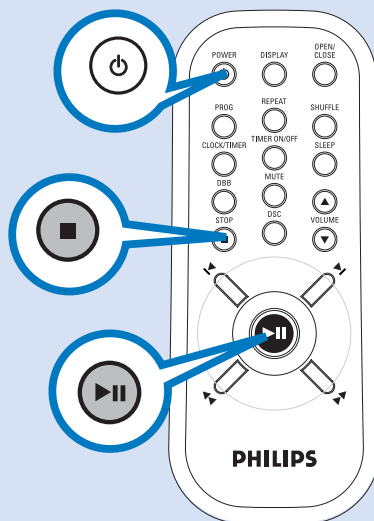

#### *Tip*

*Detailed playback features and additional functions are described in the accompany user's manual.*



© Royal Philips Electronics N.V. 2007  
All rights reserved.

<http://www.philips.com>

