

CD Clock Radio

AJ3916

 
 
 
Register your product and get support at

www.philips.com/welcome

User manual



PHILIPS

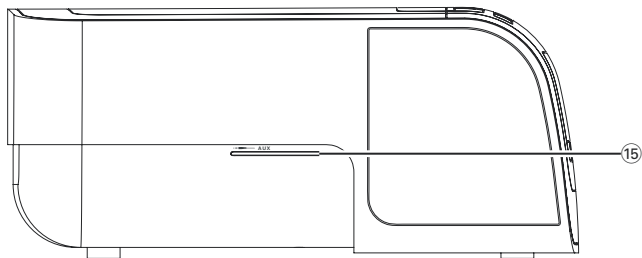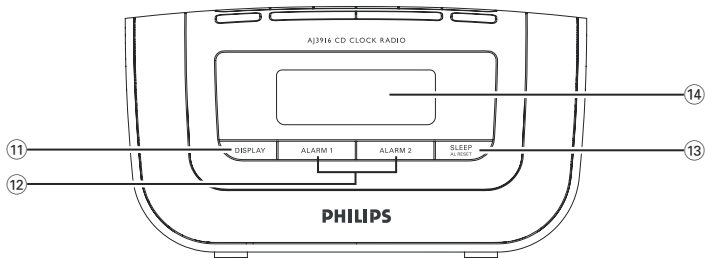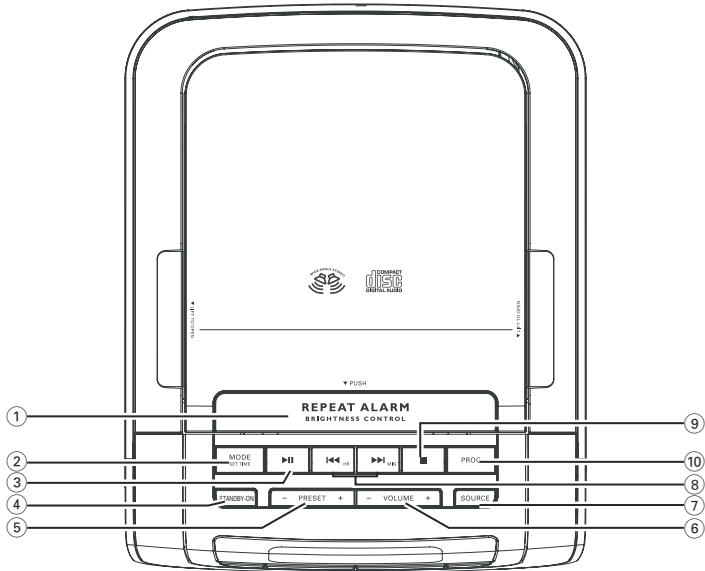


2




6




 
3

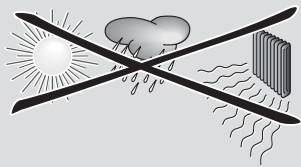

4

 

5

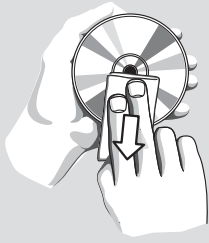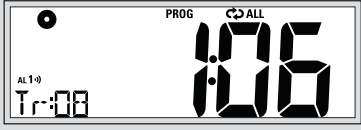  

AUSTRALIA - Philips Manufacturers Warranty for Australia only

These warranty conditions are valid for the following consumer electronics products: Colour Televisions, Projection TV, Plasma & LCD TV, Video Cassette Recorders, CD Recorders & Players, DVD Players, DVD Recorders, DVD Recorders with HDD, Audio Systems, Home Theatre systems, Digital Set Top Box & Portable Audio products.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

1 Year Free Repair Service - at Philips ASC

Colour Television, Plasma Television, LCD Television, Projection Television, DVDR/VCR, Combo, DVD Recorders with Hard Drive, LCD Projectors, Wireless Audio Systems, Audio Systems, Home Theatre Systems & Digital Set-Top-Box.

1 Year free Replacement – at your Retailer

Portable Audio, MP3 Infotainment products, Video Cassette recorders, DVD Player, DVD/VCR Combo Player, DVD Recorder without HDD & Portable DVD/LCD players.

Conditions of Repair Warranty

1. All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Reasonable evidence of date of purchase must be provided.
2. This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
3. If a replacement product is supplied under the repair policy it is warranted, under this warranty, for the remainder of the warranty of the original purchased product only.
4. Home service is provided only within the normal service area of one of our recommended Authorised Service Centres (ASC). It will be provided for television receivers only with a screen size of 67cms or above (product includes CRT, LCD TV, PTV, and Plasma TV). Televisions with screen side less than 67cms and all other products types are to be taken or sent by the consumer to the workshop of your nearest Authorised Service Centre, at the Consumer's expense.
5. This Manufacturers Warranty is limited to 3 months for the above listed Consumer Electronics products if used in commercial applications.
6. Philips may, at its discretion choose to replace rather than repair any product covered by this warranty.
7. Product accessories are covered by the same warranty period. Please contact the Philips Technology

Care Centre for free replacement of faulty accessories.

8. This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.

This warranty does not cover:

- a) Mileage or travel outside the normal service area covered by selected Authorised Service Centre.
- b) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
- c) Product failures caused by misuse, neglect, accidental breakage, transit damage, inexpert repairs or modification by un-authorised persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.
- d) Cleaning of video or audio heads.
- e) Inadequate receiving antennae.
- f) Replacement of worn or used batteries or other consumables.
- g) Consumer products used in commercial applications (This warranty is limited to 3 months only).
- h) Second hand products.

The conditions contained in this warranty card replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Service is provided through more than 100 accredited Authorised Service Centres throughout Australia. For direct contact with the nearest recommended Authorised Service Centre in capital & regional cities/towns

Authorised Service Centre Network

1300 361 392

Customer support is provided in Australia by our trained call centre staff. For assistance with product features and specifications, please call

Technology Care Centre

1300 363 391

Please record the following information for your records and keep in a safe place. We recommend retaining your purchase receipt to assist with any warranty claim.

Model number:.....

Serial number:.....

Date of purchase:.....

Retailer:.....

Philips Consumer Electronics

a division of **Philips Electronics Australia Limited**
ABN 24 008 445 743,
Level 1, 65 Epping Road NORTH RYDE NSW 2113.

Warranty valid for all new products purchased after **1st January 2007**

NEW ZEALAND - Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

- 1.** The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
- 2.** The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
- 3.** The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
- 4.** Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
- 5.** In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

The Guarantee Controller
Philips New Zealand Ltd.

✉ **P.O. Box 41.021**

Auckland

☎ **(09) 84 94 160**

fax ☎ **(09) 84 97 858**

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Controls (see 1)

- ① **REPEAT ALARM/BRIGHTNESS CONTROL** – pushes to switch off alarm for a 9-minute period/changes the brightness of the display illumination.
- ② **MODE**
 - selects different play modes: e.g. REPEAT or SHUFFLE (random order)
 - sets clock time
- ③ **▶II** – starts/ pauses CD playback
- ④ **STANDBY-ON**
 - switches the set on or to standby
- ⑤ **PRESET +/-**
 - selects a preset radion station.
- ⑥ **VOLUME** – adjusts sound level
- ⑦ **SOURCE**
 - selects CD, relaxation music, radio or AUX source of sound
- ⑧ **◀◀ / ▶▶**
 - adjusts clock / alarm time
 - skips CD tracks/ searches for a particular passage
- ⑨ **■** – stops CD playback
 - erases a CD program
- ⑩ **PROG** – programs CD tracks
- ⑪ **DISPLAY** – displays clock for a few second during CD/Radio/AUX mode.
- ⑫ **ALARM1/ALARM2**
 - sets, activates and deactivates alarm of ALARM1/ALARM2
 - switches off the active buzzer; radio or CD alarm

- ⑬ **SLEEP**
 - switches on/off or adjusts timer options for radio, CD playback or relaxation music.
 - stops the active buzzer; radio or CD alarm for 24 hours
- ⑭ **LCD Display** – shows the clock/ alarm time or CD/radio information
- ⑮ **AUX** – 3.5mm line-in for audio input

Power supply

- 1 Check if the power voltage as shown on the type plate on the base of the set corresponds to your local power supply. If it does not, consult your dealer or service center.
- 2 Connect the power plug to the wall outlet. The power supply is now switched on and the numbers on the display shows 0:00. You will need to set the correct time.
- 3 To disconnect the set from the power supply completely, unplug from the wall outlet.

The type plate is located on the bottom of the set.

Setting the clock

The clock uses 24-hour time format. You may set the clock from 0:00 if the set is disconnected from the wall outlet.

- 1 Press and hold **MODE** until clock digit for hour flashes.
- 2 Hold down **◀ / ▶** to adjust the hours.
- 3 Press **MODE** to confirm the hour setting.
→ The clock digits for minute flash.
- 4 Hold down **◀ / ▶** to adjust the minutes.
- 5 Press **MODE** to confirm the setting.

Standby power consumption

(clock mode) **2.4W**

Radio

Tuning to radio station

- 1 Press **STANDBY-ON** to switch on from clock mode.
 - 2 Press repeatedly **SOURCE** to select **FM** or **MW**.
→ The radio station frequency, waveband will be displayed briefly, then clock is displayed. **Ⓜ** is also displayed. (See [2])
 - 3 Press and hold **◀** or **▶** until the frequency in the display starts running.
→ The radio automatically tunes to a station of sufficient reception.
 - 4 Repeat step 2 if necessary until you find the desired station.
- To tune to a weak station, press **◀** or **▶** briefly and repeatedly until you have found optimal reception.

Programming radio stations

You can store 20 FM and 10 MW radio stations in the memory manually or automatically.

Autostore

Autostore automatically starts programming radio stations from preset 1. Any previous presets e.g. manually programmed will be erased.

- 1 Press repeatedly **SOURCE** to select **FM** or **MW**.
- 2 Press and hold **PROG** until the frequency in the display starts running.
→ Available stations are programmed (MW or FM).

To listen to a preset or autostore station

Press the **PRESET +/-** once or more until the desired preset station is displayed.

Manual programming

- 1 Tune to your desired station (see **Tuning to radio stations**).
- 2 Press **PROG** to activate programming.
→ Display: **Ⓜ** ! flashes.
- 3 Press **PRESET +/-** once or more to allocate a number (FM: from 1 to 20; MW: from 1 to 10).
- 4 Press **PROG** to confirm.
- 5 Repeat steps 1-4 to store other stations.

Helpful hints:

- You can erase a preset station by storing another frequency in its place.

To improve reception:

FM: Extend and adjust the pigtail for optimum reception.

MW: Uses a built-in antenna. Direct the antenna by adjusting the position of your unit.

This set complies with the radio interference requirements of the European Community.

CD Player

CD playback

This CD clock radio supports audio discs including CD-R (CD-recordable), CD-RW (CD-rewritable). Do not try to play a MP3-CD, CD-ROM, CDI, VCD, DVD or computer CD.

- 1 Press **STANDBY-ON** to switch on from clock mode.
- 2 If CD is not selected, press **SOURCE** once or more to select it.
→ ● is displayed.
- 3 Lift the CD door to open.
- 4 Insert a CD with printed side facing up, and close the CD door.
→ Flashing ---- is displayed briefly, then total CD track number and the clock are displayed. (See [3])
- 5 Press **▶II** to start playback.
→ During the playback, the current track number is displayed instead of the total track number.
- 6 To view Clock, press **DISPLAY**.
→ The clock time is displayed for several seconds, then it will switch back to playback time information.
- 7 To adjust the sound, press **VOLUME**.
- 8 To interrupt, press **▶II**. To resume playback, press **▶II** again.
- 9 To stop playback, press ■.
- 10 To switch off CD playback and back to standby, press **STANDBY-ON**.
→ The clock is displayed.

Selecting a different track

- Press **◀◀/▶▶** once or repeatedly until the desired track number appears on the display.
- In the stop position, press **▶II** to start playback.

Finding a passage within a track

- 1 During playback, press and hold down **◀◀** or **▶▶**.
→ The CD is played at high speed and low volume.

- 2 Release **◀◀** or **▶▶** when you recognize the passage you want.
→ Normal CD playback resumes.

Programming tracks

You may store up to 20 tracks in the desired sequence for playback. If you like, store any track more than once.

- 1 In the stop position, press **PROG** to enter programming mode.
→ **PROG 1** is displayed (See [4]).
- 2 Press **◀◀** or **▶▶** to select desired track.
- 3 Press **PROG** to store the track.
→ **PROG 2** is displayed
- 4 Repeat steps **2** to **3** to select and store all desired tracks.
→ If you attempt to store more than 20 tracks, no tracks can be stored.
- 5 Press **▶II** to play the program.
→ **PROG** is displayed (See [5])

To erase a program, select any of the following.

- In stop position press **PROG** to enter program mode and press ■.
- Open the CD door.
- Press **STANDBY-ON** to standby;
- Select other sources.

Selecting different play modes: REPEAT and SHUFFLE

You can select and change the various play modes before or during playback, and combine REPEAT modes with program.

SHUFFLE **✕** – plays all tracks in random order.

REPEAT **↺** – plays the current track continuously.

REPEAT ALL **↺ALL** – plays the entire disc/program continuously.

- 1 To select play modes, press **MODE** once or more.
→ The selected play mode will be displayed.
- 2 Press **▶II** to start playback if in the stop position.

CD Player

→ When SHUFFLE mode is selected, the disc will play automatically around few seconds later:

- 3 To return to normal playback, press **MODE** repeatedly until the various modes are no longer displayed.
– You can also press **■** once to cancel your play modes.

Notes:

- During playback, when shuffle mode is selected, shuffle play will begin only when playback of current track comes to an end.
- Selection of shuffle mode is not available in the program mode.

Connecting an external device

You can listen to the sound of the connected external device through your AJ3916's speakers.

- 1 Press **SOURCE** to switch to AUX mode
→ **⊕** **AUX** is displayed
- 2 Connect an external equipment such as MP3 player to AJ3916's AUX-in

Helpful hints:

- AJ3916 cannot control playback or any function on the external equipment
- Ensure the external equipment is powered on.

Using the alarm

Two different alarm times can be set. This can be useful when you and your partner need to be woken up at different time. Besides, you can set different alarm sounds respectively among: CD(⊕), tuner(⊕), buzzer(⊕), or sound of nature(⊕).

SETTING THE ALARM

- 1 Press and hold **ALARM 1** until hour digits start flashing.
- 2 Hold down or press **⏪ / ⏩** repeatedly to set the desired hour.
- 3 Press **ALARM 1** to confirm.
→ Minute digits start flashing.
- 4 Hold down or press **⏪ / ⏩** repeatedly to

Auxiliary connection/Alarm

set the desired minute.

- 5 Press **ALARM 1** to confirm.
→ **⊕** is displayed.
- 6 Press **SOURCE** repeatedly to select the desired alarm sound.
→ when sounds of nature is selected, press **PRESET +/-** to select any one of the 5 provided sounds (⊕⊕⊕⊕⊕).
→ when CD is selected, press **⏪ / ⏩** to select the desired track.
- 7 Press **ALARM 1** to confirm.
- 8 Repeat the steps above but press **ALARM 2** instead of **ALARM 1** to set the other alarm.

Helpful hints:

- Insert a CD if you select CD source as alarm mode. CD will play from the first track, or the track you have selected during the alarm setting. If a CD is not loaded, Church Bell (sound of nature) will auto turn on.
- To check the alarm time setting for **ALARM 1** or **ALARM 2**, press **ALARM 1** or **ALARM 2**.

Switching off the alarm

Daily alarm reset

If you want the alarm to be stopped immediately but also wish to repeat the alarm call at the same time for the following day:

- During the alarm call, press **SLEEP**.

Repeat alarm

This repeats your alarm call at 9 minute intervals.

- During the alarm call, press **REPEAT ALARM / BRIGHTNESS CONTROL**.
→ Alarm sound indicator flashes during a repeat alarm.
- Repeat if desired.

Deactivating the alarm completely

- Press once or more corresponding **ALARM1** or **ALARM2** until **⊕** disappears.

Sleep

About Sleep

This set has a built-in sleep timer, which enables -

- the gradual turning-down of the volume during playback of CD, Radio or preloaded relaxation music;
- the auto switch-off of the set after the desired period of time.

Setting and switching off SLEEP

- 1 Press **SLEEP**.
→ SLEEP flashes.
- 2 Press **SLEEP** repeatedly to switch between: 15->30->60->90->120->OFF.
- 3 Press **PRESET +/-** repeatedly to select next or previous in-built relaxation music, or press **SOURCE** to select CD or Radio.
- 4 To cancel sleep, switches the timer to OFF.

Note:

–The sleep function does not affect your alarm time setting(s).

Safety and general maintenance

- If you do not intend to use the CD clock radio for a long time, withdraw the power cord from the wall outlet.
- Place the set on a hard and flat surface so that the system does not tilt.
- Do not expose the set, batteries, CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Do not cover the set. Adequate ventilation with a minimum gap of 6 inches between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a soft dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.
- Mains powered equipment not exposed to dripping or splashing
- The main plug is a disconnect device, it shall remain readily operable.

CD player and CD handling

- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation to form and the lens of your CD player to cloud over. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always shut the CD door to keep the CD compartment dust-free. To clean, dust the compartment with a soft dry cloth.
- To clean the CD, wipe in a straight line from the center towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service center.

WARNING: Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

No sound.

- Volume not adjusted.
- Adjust the VOLUME.

CD playback does not work.

- CD badly scratched or dirty.
- Replace/ clean CD.
- Laser lens steamed up.
- Wait until lens has adjusted to room temperature
- Laser lens dirty.
- Clean lens by playing a CD lens cleaning disc.
- CD-R is non-finalized.
- Use a finalized CD-R.

Occasional crackling sound during FM broadcast.

- Weak signal.
- Extend the pigtail antenna fully.

Continuous crackling/ hiss disturbance during MW broadcast.

- Electrical interference from TVs, computers, fluorescent lamps, etc.
- Move set away from other electrical equipment

The alarm does not function.

- Alarm time not set.
- See section on **Setting alarm time.**

Environmental information

All necessary packing material has been omitted to make the packing easy to separate into 2 categories: cardboard and paper pulp.

Your unit consists of materials which can be recycled if disassembled by a specialized company. Please observe local regulations on the disposal of packing materials and old equipment.

CAUTION

 
Visible and invisible laser radiation. If the cover is open, do not look at the beam.

High voltage! Do not open. You run the risk of getting an electric shock. The machine does not contain any user-serviceable parts.

Modification of the product could result in hazardous radiation of EMC or other unsafe operation.

English

Meet Philips at the Internet
<http://www.philips.com>

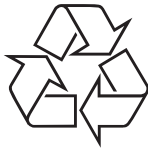

AJ3916



Printed in China

Jason 0809

