

3 Enjoy

Start recording

A Recording from TV or a connected external device

- 1 Insert a recordable DVD disc in the tray.




- 2 Press **LIVE TV** or **CAM** to select the source to record from.
 - To record a TV programme, use **P + / -** to scroll through the channels, or press **0 - 9** to select the channel that you want to record.
- 3 Press **REC** to start recording, press **REC** again to automatically record 30 minutes. Each subsequent press increases the recording time by 30 minutes.
- 4 To end recording, press **STOP**. 'UPDATING MENU' will be displayed on the recorder.
- 5 To playback the recording, press **DISC**, select the title and press **▶||**.

Start playback

A Playback from disc

- 1 Press **OPEN/CLOSE** to open the disc tray. Load a disc and close the disc tray.

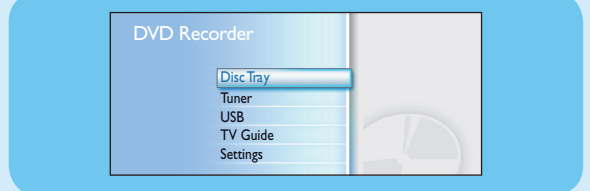


(TV Guide is not available in some countries).

- 2 Press **HOME** and select { **Disc Tray** }.
- 3 Press **OK** to confirm.
- 4 Use **◀▶▲▼** keys to reach the title/file you want to play and press **▶||** to start playback.

B Playback from USB device

- 1 Insert the USB device to the USB port.
- 2 Press **USB** to show the contents list.

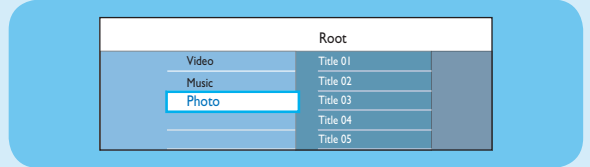

- 3 Select the contents type and press **▶ right**.
- 4 Select a data file (MP3, WMA, DivX and JPEG) and press **▶||** to start playback.

Select a record mode

Selecting an appropriate recording mode is important as it determines the picture quality and recording time.

- 1 Before recording, press **HOME** on the remote control.
- 2 Select { **Settings** } in the menu and press **OK**.
- 3 Move to { **Recording** } and press **▶ right**.
- 4 Move to { **Record Mode** } and press **▶ right**.
- 5 Select a record mode and press **OK** to confirm.

Record Mode	Hours of recording that can be stored on an empty DVD recordable disc.	
	DVD±R/ DVD±RW	DVD+R Double Layer
HQ (high quality)	1	1 hr 55 mins
SP (standard play)	2	3 hrs 40 mins
SPP (standard play plus)	2.5	4 hrs 35 mins
LP (long play)	3	5 hrs 30 mins
EP (extended play)	4	7 hrs 20 mins
SLP (super long play)	6	11 hrs 5 mins
SEP (super extended play)	8	14 hrs 45 mins

User Manual

See the user manual that came with your Philips recorder.

Online

Go to www.philips.com/welcome.



2007 © Koninklijke Philips N.V. All rights reserved.


12 NC 3139 245 2571 | www.philips.com

Quick Start Guide




- 1 Connect
- 2 Set up
- 3 Enjoy

 
What's in the box?



DVD Recorder/ Player

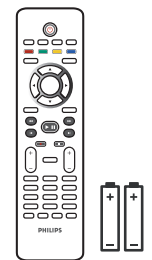


Remote Control and 2 batteries

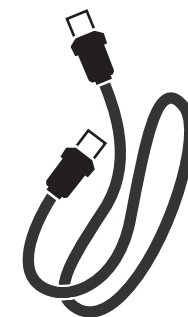


RF antenna cable (connect between recorder and TV)



Scart cable

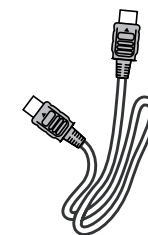

HDMI cable

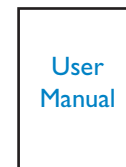

User Manual




1 Connect

Before connecting

Select the most suitable connection (A or B) based on your home set up. Refer to the accompanying User Manual for other possible connections.

A Connecting Recorder and TV with antenna only

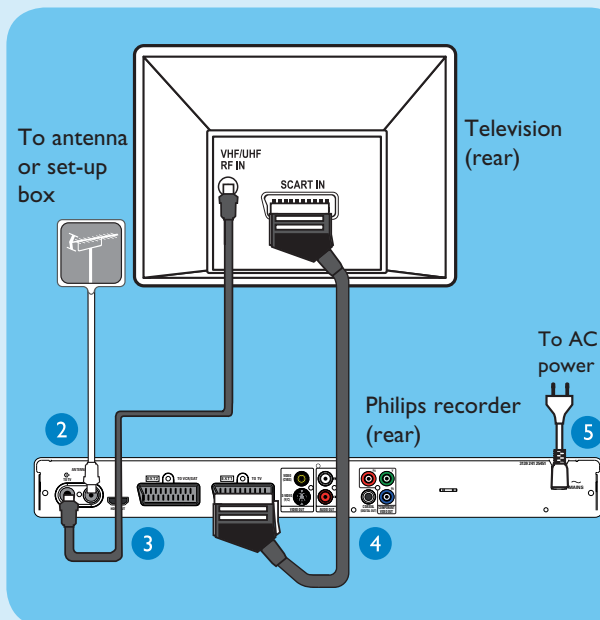


- 1 Unplug the antenna cable that is currently connected to your TV.
- 2 Connect the antenna cable to the **ANTENNA-IN** socket on the recorder.
- 3 Use the supplied RF antenna cable to connect the **ANTENNA TO-TV** socket on this recorder to the Antenna In socket on the TV.
- 4 Use the SCART cable to connect the **EXT1 TO TV-I/O** socket on this recorder to the corresponding SCART input socket on the TV.

Note If you have a HDMI TV, connect the supplied HDMI cable from the recorder to your HDMI TV set. See the chapter "Step I: Basic Recorder Connections – Connecting the video cable" in the accompanying user manual.

- 5 Connect the power cable from the recorder to an AC power outlet.

B Connecting Recorder, TV and Satellite Receiver/Cable Box

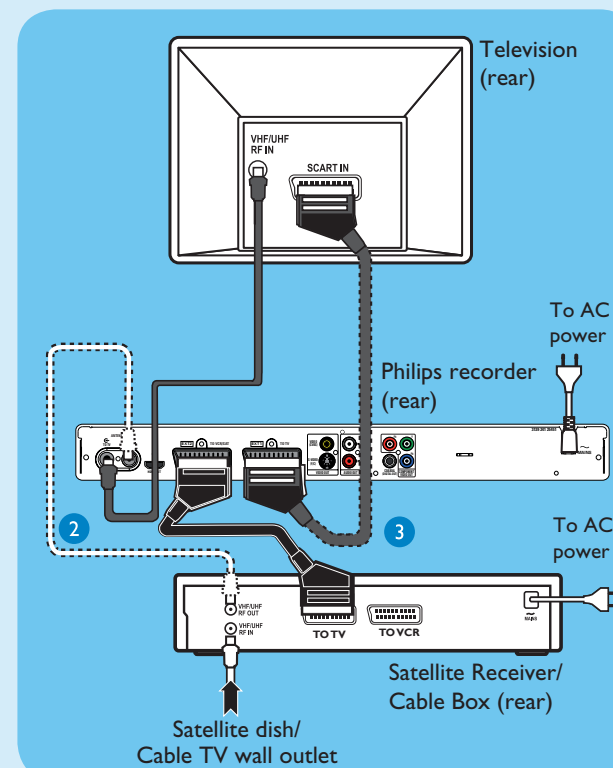

- 1 Follow steps 3-5 of connection A before you proceed to step 2 below.
- 2 Use an antenna cable to connect the Antenna Output (RF OUT) socket on the Cable Box to the **ANTENNA-IN** socket on this recorder. (optional)
- 3 Use another SCART cable (not supplied) to connect the **EXT2 TO VCR/SAT** scart socket on this recorder to the SCART OUT (TO TV) socket on your Satellite Receiver/Cable Box.

Note The antenna connection can be different depending on the Satellite Receiver/Cable Box. Refer to its user manual for proper antenna connection.

- 3 Use another SCART cable (not supplied) to connect the **EXT2 TO VCR/SAT** scart socket on this recorder to the SCART OUT (TO TV) socket on your Satellite Receiver/Cable Box.

For additional connection diagrams, see the accompanying User Manual.

2 Set up

A Finding the viewing channel

- 1 Switch on the TV set. The installation menu is displayed.



- 2 In case you don't see the recorder's setting menu, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, ⏪ button) until you see the menu. This is the correct viewing channel for the recorder.

Note To access the colour functions shown on the bottom of the menu, press the matching colour coded buttons on the remote control.

B Start initial installation

Use the recorder's remote control and follow the on-screen instructions to complete the installation.

Note Use the up ▲ or down ▼ keys to toggle through the options. To confirm a setting, press **OK** on the remote control. To return to the previous screen, press the **Red** button.


- 1 **Select the desired on-screen menu language.** Press **OK** to confirm.



- 2 **Select the country of your residence.** Press **OK** to confirm.




- 3 **Select the suitable TV shape.** Press **OK** button to confirm.

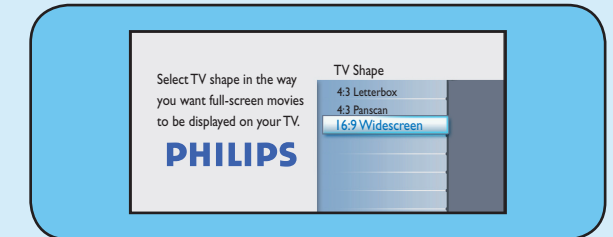


- 4 **Automatic channel search begins.** Once complete, the total number of stored channels screen appears. Press **OK** to continue.

- 5 **Set the time.** Use the **alphanumeric keypad 0-9** or **▲▼◀▶** keys to enter the correct time. Press **OK** to confirm and continue.

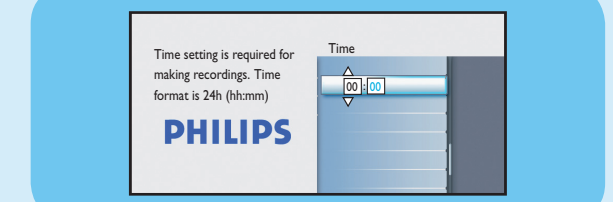

- 6 **Set the date.** Use the **alphanumeric keypad 0-9** or **▲▼◀▶** keys to enter the correct date. Press **OK** to confirm and continue.

- 7 **Installation is complete.**

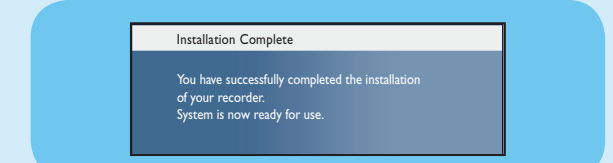

Press **OK** to exit the menu.

The recorder is now ready for use.