




Portable MP3-CD Player
EXP5463
User manual
Manuel d'utilisation
Manual del usuario
Gebruikershandleidingen


Meet Philips at the Internet
http://www.philips.com

EXP5463


CLASS 1
LASER PRODUCT

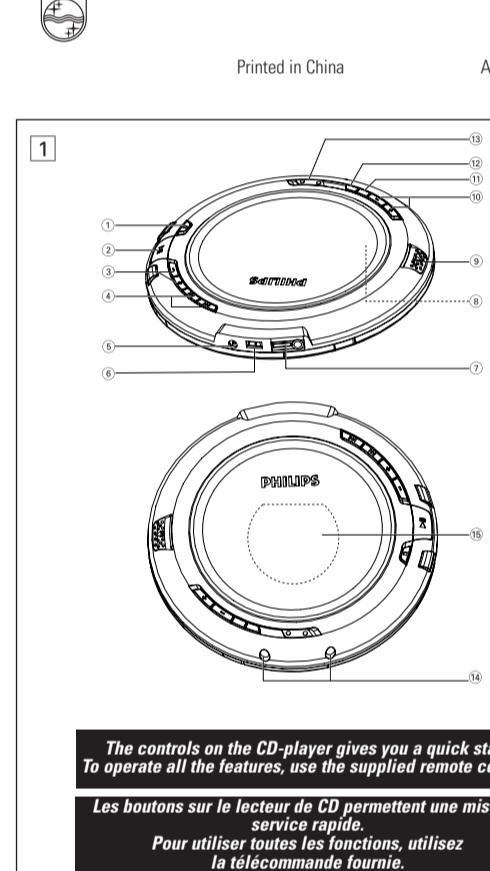

The controls on the CD-player gives you a quick start.
To operate all the features, use the supplied remote control.
Les boutons sur le lecteur de CD permettent une mise en route rapide.
Pour utiliser toutes les fonctions, utilisez la télécommande fournie.

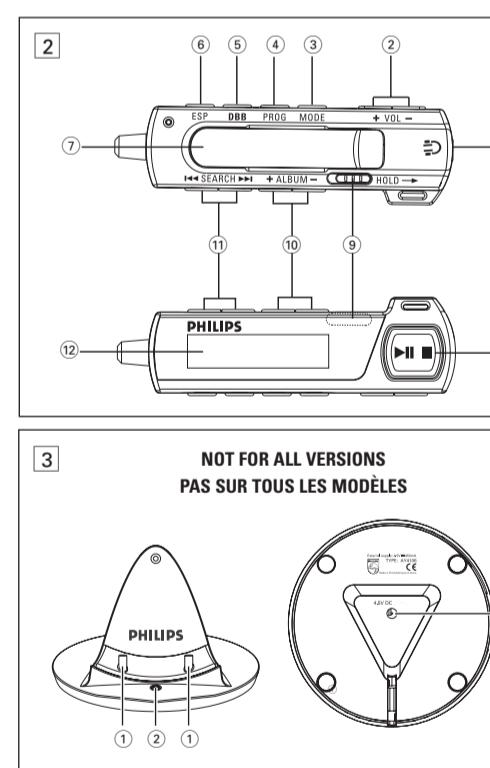

NOT FOR ALL VERSIONS
PAS SUR TOUS LES MODELES

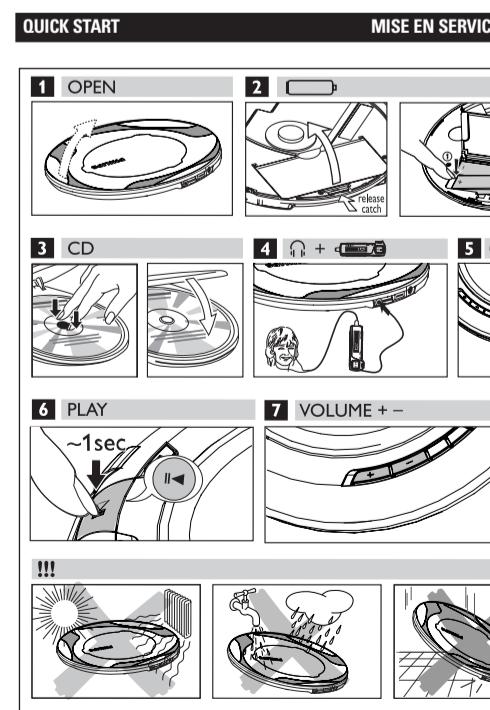

English

CONTROLS

Supplied Accessories:
1 x headphones HES50 / SHE75
1 x remote control AV3802
1 x external battery case AV3802
1 x AC/DC adapter power supply (for some versions only)
1 x rechargeable batteries AY3365 (for some versions only)
2 x rechargeable batteries AY3365 (for some versions only)

Controls (see figure 1)

- ① ■ stops playback/clears programmed tracks / switches off the set
- ② ■ starts the player on, starts or pauses CD playback, MP3/WMA, CD only; selects the next/previous album or skips forward/backward tracks
- ③ +/- selects playback options. To select and enter the display function, press and hold MODE for 3 seconds.
- ④ PROG programs tracks and reviews the program
- ⑤ DBB switches the bass enhancement on and off. When pressed for more than 2 seconds, the button switches audio feedback.
- ⑥ ESP selects between the battery power-saving mode and Electronic Skip Protection (ESP). ESP prevents playback interruptions caused by shocks.
- ⑦ clip jack for AC/DC adapter power supply
- ⑧ EXT BATT external battery case
- ⑨ volume +/ - volume control
- ⑩ volume +/+ - volume control
- ⑪ 4.5V DC jack for AC/DC adapter power supply
- ⑫ HOLD remote control lock
- ⑬ the remote control here and your headphones to the remote control
- ⑭ rechargeable battery compartment inside the CD player; opens the door to the battery compartment
- ⑮ volume +/+ - volume control
- ⑯ DBB switches the bass enhancement on/off. When pressed for more than 2 seconds, the button switches audio feedback.
- ⑰ ESP selects between the battery power-saving mode and Electronic Skip Protection (ESP). ESP prevents playback interruptions caused by shocks.
- ⑱ OFF RESUME holds all buttons (on the set only)
- ⑲ HOLD locks all buttons (on the set only)
- ⑳ Docking pin connects to the docking pins on your AV106 charge cradle (for some versions only)
- ㉑ Docking jack connects to the docking pins on your AV106 charge cradle (for some versions only)
- ㉒ typeplate

BATTERIES

Batteries (supplied or optionally available)

You can use the following batteries with this CD player:

• Normal battery type LR6 UM3 or AA

• Alkaline batteries, type LR6 UM3 (preferably Philips)

• Philips rechargeable batteries, type AY3365

Helpful Hints:

- Old and new batteries should not be combined.

- Remove batteries in the order (1, 2) as shown if they are empty or if the player is not going to be used for a long time.

♦ For battery case only

Inserting rechargeable batteries

1 Push + to open the lid.

2 Open the battery compartment (inside the CD player) and insert 2 x PHILIPS rechargeable batteries, type AY3365.

Battery indication

The approximate power level of your batteries is shown in the remote control display.

♦ Battery full

♦ Battery two-thirds full

♦ Battery one-third full

♦ Battery low or empty. When the batteries are low, LOU BATT flashes, and the beep tone sounds repeatedly.

Average playing time of batteries under normal conditions

Battery type Audio CD Power Save MP3-CD

Alkaline AA + rechargeable 50 hours 80 hours

Alkaline AA 30 hours 50 hours

Rechargeable 20 hours 30 hours

Power Save

MP3-CD

Alkaline AA + rechargeable 50 hours 80 hours

Alkaline AA 30 hours 50 hours

Rechargeable 20 hours 30 hours

ABOUT MP3/WMA

The music compression technology MP3 (MP3/Music Audio Layer 3) and WMA (Windows Media Audio) significantly reduce the digital data of an audio CD while maintaining CD quality sound.

• Getting MP3/WMA files: you can either download music files from the internet to your computer's hard disc, or copy such files by recording audio CDs onto them. You can also burn MP3/WMA files onto a blank audio CD using a CD burner. Visit www.microsoft.com for details about Windows Media Player and Windows DR (Windows Media Rights Management).

• Creating a MP3/WMA-CD: burn the music files from your computer hard disc onto a CD or burn MP3/WMA files onto a blank audio CD.

• Helpful Hint:

- Make sure that the file names of the MP3 files end with .mp3 and WMA files with .wma.

- Total number of music files and albums around 350 (with a typical file length of 20 characters)

- The length of file names affects the number of tracks for playback. With shorter file names, more files can be burned on a disc.

Windows Media® is a registered trademark of Microsoft Corporation.

All trademarks used are owned by their respective owners.

PLAYING A CD

Helpful Hint:
When playing a disc with CD Audio tracks and MP3 files, the CD Audio tracks will be played first.

"I" is shown as your album number, if you have not organized your MP3/WMA files into any albums on your disc.

• Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packing materials, dead batteries and old equipment.

Batteries contain chemical substances, so they should be disposed of properly.

Volume adjustment

Adjust the volume by pressing VOLUME +/ -

(00 - 30, or VOL +/- on the remote control).

Helpful Hint:
Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Bass adjustment

These are DYNAMIC BASS (Dynamic Bass Boost) options:

- PROG: moderate bass enhancement

- DBB: strong bass enhancement

- PROG or DBB once or more to select your option.

PROG appears if DBB is activated.

Volume and sound

Helpful Hint:
When playing a disc with CD Audio tracks and MP3 files, the CD Audio tracks will be played first.

Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume adjustment

Adjust the volume by pressing VOLUME +/ -

(00 - 30, or VOL +/- on the remote control).

Helpful Hint:
Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume and sound

Helpful Hint:
When playing a disc with CD Audio tracks and MP3 files, the CD Audio tracks will be played first.

Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume adjustment

Adjust the volume by pressing VOLUME +/ -

(00 - 30, or VOL +/- on the remote control).

Helpful Hint:
Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume and sound

Helpful Hint:
When playing a disc with CD Audio tracks and MP3 files, the CD Audio tracks will be played first.

Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume adjustment

Adjust the volume by pressing VOLUME +/ -

(00 - 30, or VOL +/- on the remote control).

Helpful Hint:
Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume and sound

Helpful Hint:
When playing a disc with CD Audio tracks and MP3 files, the CD Audio tracks will be played first.

Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume adjustment

Adjust the volume by pressing VOLUME +/ -

(00 - 30, or VOL +/- on the remote control).

Helpful Hint:
Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume and sound

Helpful Hint:
When playing a disc with CD Audio tracks and MP3 files, the CD Audio tracks will be played first.

Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume adjustment

Adjust the volume by pressing VOLUME +/ -

(00 - 30, or VOL +/- on the remote control).

Helpful Hint:
Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume and sound

Helpful Hint:
When playing a disc with CD Audio tracks and MP3 files, the CD Audio tracks will be played first.

Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume adjustment

Adjust the volume by pressing VOLUME +/ -

(00 - 30, or VOL +/- on the remote control).

Helpful Hint:
Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume and sound

Helpful Hint:
When playing a disc with CD Audio tracks and MP3 files, the CD Audio tracks will be played first.

Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume adjustment

Adjust the volume by pressing VOLUME +/ -

(00 - 30, or VOL +/- on the remote control).

Helpful Hint:
Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume and sound


Helpful Hint:
When playing a disc with CD Audio tracks and MP3 files, the CD Audio tracks will be played first.

Volume level resume at:

- Default level 12 when starting playback from standby/sober off mode.

- Previous level when starting playback from the stop position.

Volume adjustment

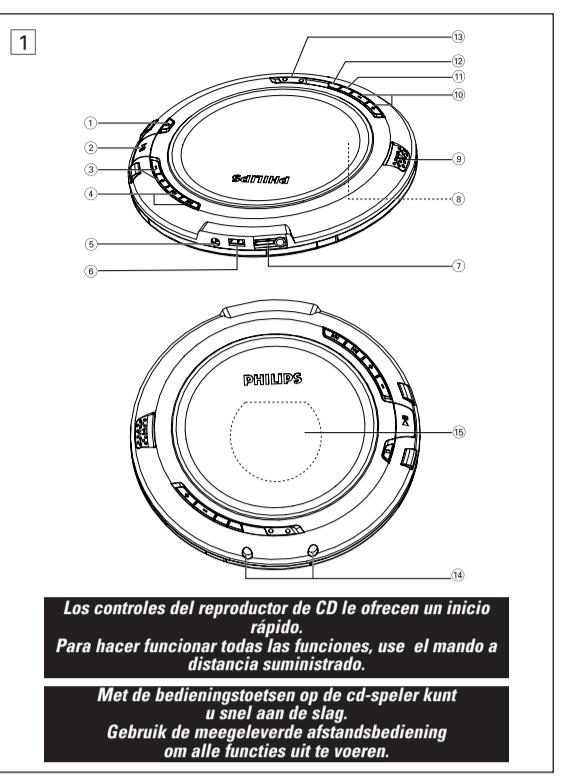

Español **CONTROLES**
Accesos incluidos:
1 x auricular AY375
1 x cable a distancia, AY3802
1 x compartimento extra para pilas, AY3805
1 x base de carga, AY4105 (sólo en algunos modelos)
2 x pilas recargables, AY3365 (sólo en algunos modelos)

Controles (Véase la figura 1)
① **mando a distancia AY3802 / auriculares HE570 / SHE75**
② **mando a distancia**
③ **VOL +/ -** **aumenta o disminuye el volumen**
④ **MODE** **selecciona las diferentes posibilidades de reproducción para seleccionar y activar la función del display, mantenga pulsado para activar la retroalimentación acústica (BEEP) y mantener la reproducción**
⑤ **PROG** **para programar pistas y pausar el programa**
⑥ **DBB** **activa y desactiva la retroalimentación de graves. Este botón también activa y desactiva la retroalimentación acústica (el tipo de retroalimentación se separa)**
⑦ **ESP** **para seleccionar entre el modo de ahorro en el consumo de pilas y Protección Electrónica frente Saltos (ESP). No utilice productos de limpieza, ya que pueden tener efectos dañinos**
⑧ **4.5V DC** **clavija para el adaptador de alimentación eléctrica de CA/CC**
⑨ **EXT BATT** **clavija para la alimentación externa aquí y los auriculares al mando a distancia**
⑩ **conector de auriculares** **dentro del reproductor de CD.**
⑪ **OFF RESUME HOLD** **apaga el equipo (modo principal) guarda la última posición de una pista en memoria**
⑫ **Clavija de ensamblaje** **conecta el equipo de ensamblaje a la base de carga AY4105 (sólo en algunos modelos)**
⑬ **4.5V DC** **placa de características técnicas**

PILAS

Pilas (incluidas o disponibles de forma opcional)

Con este equipo puede utilizar:

• pilas AA de Philips, tipo AY385

• pilas recargables Philips, tipo AY3365

• pilas NiMH de Philips, tipo AY385

• pilas recargables AY3365

• pilas recargables AA de Philips, tipo AY385

• pilas recargables AA de Philips, tipo AY385