

# Always there to help you

Register your product and get support at  
[www.philips.com/support](http://www.philips.com/support)

D4550



## Extended user documentation

**PHILIPS**



# Contents

---

<b>1</b>	<b>Important safety instructions</b>	<b>3</b>
----------	--------------------------------------	----------

---

<b>2</b>	<b>Your phone</b>	<b>4</b>
	What is in the box	4
	Overview of the phone	4

---

<b>3</b>	<b>Get started</b>	<b>6</b>
	Connect the charger	6
	Install the supplied batteries	6
	Configure your phone (country dependent)	7
	Charge the handset	8
	Check the battery level	8
	What is standby mode?	8
	Display icons	8
	Check the signal strength	9
	Switch the handset on or off	9

---

<b>4</b>	<b>Calls</b>	<b>10</b>
	Make a call	10
	Answer a call	10
	End a call	10
	Adjust the earpiece/speaker volume	11
	Mute the microphone	11
	Turn the speaker on or off	11
	Make a second call	11
	Answer a second call	11
	Switch between two calls	11
	Make a conference call with the external callers	11

---

<b>5</b>	<b>Intercom and conference calls</b>	<b>13</b>
	Make a call to another handset	13
	Make a conference call	13

---

<b>6</b>	<b>Text and numbers</b>	<b>15</b>
	Enter text and numbers	15
	Switch between uppercase and lowercase	15

---

---

<b>7</b>	<b>Phonebook</b>	<b>16</b>
----------	------------------	-----------

---

<b>8</b>	<b>Call log</b>	<b>17</b>
----------	-----------------	-----------

---

<b>9</b>	<b>Redial list</b>	<b>18</b>
----------	--------------------	-----------

---

<b>10</b>	<b>Phone settings</b>	<b>19</b>
	Sound settings	19
	Eco mode	20
	ECO+ mode	20
	Name the handset	21
	Set the date and time	21
	Set the display language	21
	Auto answer	21
	Activate/Deactivate auto hang up	21

---

<b>11</b>	<b>Alarm clock</b>	<b>22</b>
	Set the alarm	22
	Turn off the alarm	22

---

<b>12</b>	<b>Services</b>	<b>23</b>
	Call list type	23
	Auto conference	23
	Call barring	23
	Blacklist	24
	Network type	24
	Auto prefix	24
	Select the recall duration	25
	Dial mode	25
	Auto clock	25
	Register additional handsets	26
	Unregister the handsets	26
	Restore default settings	26

---

<b>13</b>	<b>Technical data</b>	<b>27</b>
-----------	-----------------------	-----------

---

<b>14</b>	<b>Notice</b>	<b>28</b>
	Declaration of conformity	28
	Use GAP standard compliance	28
	Compliance with EMF	28
	Disposal of your old product and battery	28

---

---

**15** Frequently asked questions 30

---

**16** Appendix 32  
Text and number input tables 32

---

**17** Index 34

# 1 Important safety instructions

## Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.



## Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

## To avoid damage or malfunction



## Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Do not dispose of batteries in fire.
- Always use the cables provided with the product.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Metallic objects may be retained if placed near or on the handset receiver.
- Do not use the product in places where there are explosive hazards.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not allow the product to come into contact with liquids.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Active mobile phones in the vicinity may cause interference.

## About operating and storage temperatures

- Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity).
- Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity).
- Battery life may be shorter in low temperature conditions.

## 2 Your phone

Congratulations on your purchase and welcome to Philips!

 
To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

---


### What is in the box




Handset\*\*



Charger

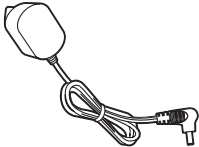

Power adapter

 

2 x AAA batteries





Guarantee



Short user manual

---

### Overview of the phone

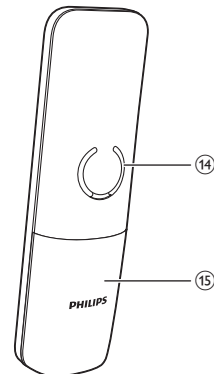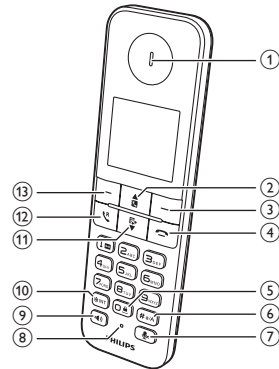

① Earpiece



- Scroll up on the menu.
- Increase the earpiece/speaker volume.



- Delete text or digits.
- Cancel operation.
- Change the sound profile during a call.



- End the call.
- Exit the menu/operation.
- Press and hold to switch the handset on or off.



- Press to enter a space during text editing.
- Press and hold to lock/unlock the keypad in standby mode.



- Press and hold to enter a pause when making a call.
- Switch to upper/lower case during editing.



- Mute or unmute the microphone.

## 8 Microphone



- Turn the speaker phone on/off.
- Make and receive calls through the speaker.



- Press and hold to make an intercom call (for multi-handset version only).
- Set the dial mode (pulse mode or temporary tone mode).



- Scroll down on the menu.
- Decrease the earpiece/speaker volume.



- Make and receive calls.
- Recall key (This function is network dependent.)



- Access the main menu in standby mode.
- Confirm selection.
- Enter the options menu.
- Select the function displayed on the handset screen directly above the key.

## 14 Loudspeaker

## 15 Battery door

# 3 Get started

## Caution

- Make sure that you have read the safety instructions in the 'Important safety instructions' section before you connect and install your handset.

## Connect the charger

## Warning


- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone.
- Use only the supplied power adapter to charge the batteries.

## Note


- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the charging cradle.

Connect each end of the power adapter to:

- the DC input jack at the bottom of the extra handset charger.
- the power socket on the wall.

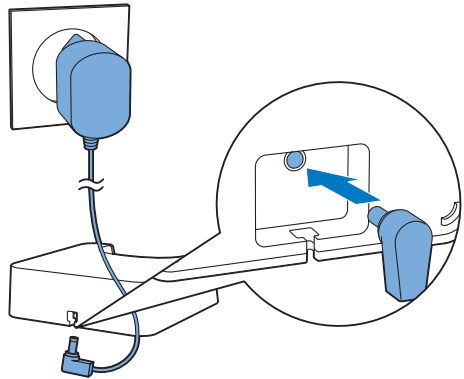

## Install the supplied batteries

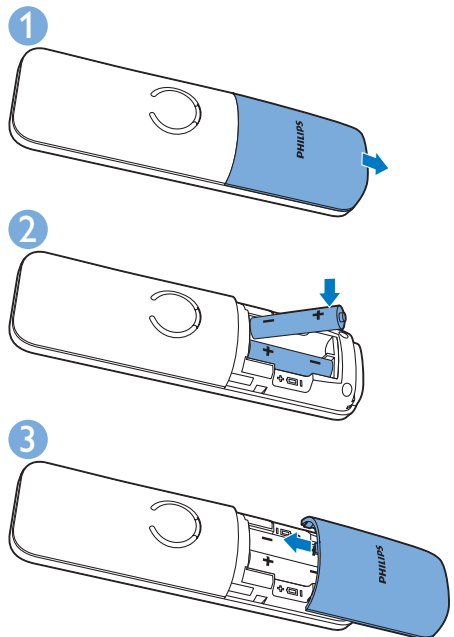



## Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.

## Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are charging, it is normal.

## Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

## Configure your phone (country dependent)

- 1 When using your phone for the first time, you see a welcome message.
- 2 Press **[OK]**.

### Set the country/language

Select your country/language, then press **[OK]** to confirm.

↳ The country/language setting is saved.

## Note

- The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country. Then you can set the date and time.

To reset the language, see the following steps.

- 1 Select **[Phone setup] > [Language]**, then press **[OK]** to confirm.
- 2 Select a language, then press **[OK]** to confirm.

↳ The setting is saved.

### Set the date and time

- 1 Select **[Menu] > [Phone setup] > [Date & time]**, then press **[OK]** to confirm.
- 2 Press the numeric buttons to enter the date, then press **[OK]** to confirm.  
↳ The time setting menu is displayed on the handset.
- 3 Press the numeric buttons to enter the time.
  - If the time is in 12-hour format, press **⏰ / ⏱** to select **[am]** or **[pm]** (Country dependent).
- 4 Press **[OK]** to confirm.

### Register your handset

Register your handset to the base station before use.

#### Auto registration

Extra handsets of the same model can be auto-registered. Place the unregistered handset on the base station.

↳ The handset detects the base station and registers automatically.

↳ Registration is complete in less than two minutes. The base station automatically assigns a handset number to the handset.

#### Manual registration

If auto registration fails, register your handset manually to the base station.

- 1 Select **[Menu] > [Services] > [Register]**, then press **[OK]** to confirm.
- 2 Press and hold **Ⓜ** on the base station for 5 seconds.
- 3 Enter the system PIN. Press **[Clear]** to make corrections. Then press **[OK]** to confirm the PIN.  
↳ Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset.

## Note

- If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.
- The preset PIN is 0000. No change can be made on it.

## Charge the handset

Place the handset on the charging cradle to charge the handset. When the handset is placed correctly on the charging cradle, you hear a docking sound.

↳ The handset starts charging.


## Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.




You can activate or deactivate the docking tone (see 'Set the docking tone' on page 19).

Your phone is now ready to use.
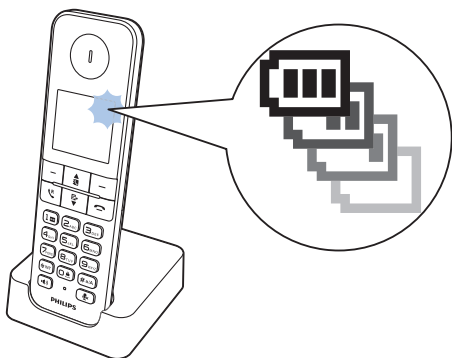
## Check the battery level



The battery icon displays the current battery level.

	When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low).
	When the handset is on the base station/charger, the bars flash until charging is complete.
	The empty battery icon flashes. The battery is low and needs recharging.





The handset turns off if the batteries are empty. If you are on the phone, you hear warning tones when the batteries are almost empty. The call gets disconnected after the warning.












## What is standby mode?

Your phone is in standby mode when it is idle. The handset name, date and time, and handset number are displayed on the standby screen.

## Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
	When the handset is off the base station/charger, the bars indicate the battery level (from full to low).
	When the handset is on the base station/charger, the bars keep scrolling until charging is complete.
	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
	It shows the connection status between the handset and base station. The more bars are shown, the better the signal strength is.


	It remains steadily on when browsing incoming calls in the call log.
	It remains steadily on when browsing outgoing calls in the redial list.
	It flashes when there is a new missed call or when browsing unread missed calls in call log. It remains steadily on when only old call log exists or when browsing the read missed calls in call log.
	It remains steadily on when browsing blocked calls in call log.
	It flashes when receiving incoming call. It remains steadily on when you are in a call.
	The speaker is on.
	The ringer is off. The silent mode is set and within active period (the phone does not ring).
	It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message.
	The silent mode is set, but is outside of active period.
	The alarm is activated.
	It is displayed when you scroll up / down a list or increase / decrease the volume.
<b>ECO</b>	The <b>Eco</b> mode is activated.
<b>ECO+</b>	The <b>ECO+</b> mode is activated.

- Make sure the handset is connected to the base station before you make or receive calls and carry out the phone functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.


#### Note

- When **ECO+** is on, the signal strength is not displayed.

## Switch the handset on or off

Press and hold  to switch the handset on or off.

## Check the signal strength

	The number of bars indicates the connection status between the handset and base station. The more bars are shown, the better the connection is.
---	---

## 4 Calls

### Note

- When the power fails, the phone cannot access emergency services.

### Tip

- Check the signal strength before you make a call or when you are in a call (see 'Check the signal strength' on page 9).

Make sure that all the handsets registered to the base station are **Philips D45** models in order to have this feature functioning properly.

## Make a call

You can make a call in these ways:



- Normal call
- Redial call

You can also make a call from the redial list, phonebook list and call log.

### Tip

- For information of how to make a call from the redial list, phonebook list and call log, see the base station's user manual.



## Normal call

- 1 Press  or .
- 2 Dial the phone number.
  - ↳ The number is dialed out.
  - ↳ The duration of your current call is displayed.

## Predial call

- 1 Dial the phone number

- To erase a digit, press **[Clear]**.
- To enter a pause, press and hold **#01A**.



- 2 Press  or  to dial out the call.

### Note

- The talk time of your current call is displayed on the call timer.
- If you hear warning tones, the phone is almost out of battery or out of range. Charge the battery or move the phone close to the base station.

## Answer a call

When the phone rings, you can select from the following options:

- press  or  to answer the call.
- pick up the phone to answer the call when you activate the auto answer feature (see 'Auto answer' on page 21).
- select **[Silent]** to turn off the ringer of the current incoming call.

### Warning

- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.

### Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.

### Tip

- When there is a missed call, a notification message is displayed.

## End a call

You can end a call in these ways:

- Press .

- Place the handset to the charging cradle.

### Note

- Placing the handset to the base station or charging cradle does not end the call when the auto hangup feature is turned off (see 'Activate/Deactivate auto hang up' on page 21).

## Adjust the earpiece/speaker volume

- Press / to adjust the volume during a call.
- ↳ The earpiece/speaker volume is adjusted and the phone is back to the call screen.

## Mute the microphone

- 1 Press during a call.
  - ↳ **[Mute on]** is displayed on the handset.
  - ↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press again to unmute the microphone.
  - ↳ You can now communicate with the caller.

## Turn the speaker on or off

Press .

## Make a second call

### Note

- This service is network dependent.

- 1 Press during a call.

- ↳ The first call is put on hold.

- 2 Dial the second number.
  - ↳ The number displayed on the screen is dialed out.

## Answer a second call

### Note

- This service is network dependent.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press <sup>R</sup> and to answer the call.
  - ↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press <sup>R</sup> and to end the current call and answer the first call.

## Switch between two calls

### Note

- This service is network dependent.

You can switch your calls in these ways:


- Press <sup>R</sup> and ; or
- Press **[Option]** and select **[Switch calls]**, then press **[OK]** again to confirm.
  - ↳ The current call is put on hold, and you are now connected to the other call.

## Make a conference call with the external callers

### Note

- This service is network dependent. Check with the service provider for additional charges.

When you are connected to two calls, you can make a conference call in these ways:

- Press  , then **☰<sub>DEF</sub>** ; or
- Press **[Option]**, select **[Conference]** and then press **[OK]** again to confirm.
  - ↳ The two calls are combined and a conference call is established.

# 5 Intercom and conference calls

## Note



- This feature is available for multi- handset versions only.

Make sure that all the handsets registered to the base station are **Philips D45** models in order to have this feature functioning properly. An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation between you, another handset user and the outside callers.

## Make a call to another handset

### Note

- If the base station only has 2 registered handsets, press and hold \*INT to make a call to another handset.

- 1 Press and hold \*INT.
  - ↳ For multi-handset versions, the handsets available for intercom are displayed, then go to step 2.
  - ↳ For two-handset versions, the other handset rings, then go to step 3.
- 2 Select a handset, then press [OK] to confirm.
  - ↳ The selected handset rings.
- 3 Press  on the selected handset.
  - ↳ The intercom is established.
- 4 Press  to end the intercom call.

## While you are on the phone

You can go from one handset to another during a call:

- 1 Press and hold \*INT.
  - ↳ The current caller is put on hold.
  - ↳ For multi-handset versions, the handsets available for intercom are displayed, then go to step 2.
- 2 Select a handset, then press [OK] to confirm.
  - ↳ Wait for the other side to answer your call.


## Switch between calls


Press and hold \*INT to switch between the outside call and the intercom call.

## Make a conference call

A 3-way conference call is between you, another handset user and the outside callers. It requires two handsets to share the same base station.

## During an external call

- 1 Press and hold \*INT to initiate an internal call.
  - ↳ The external caller is put on hold.
  - ↳ For multi-handset versions, the handsets available for intercom are displayed, then go to step 2.
  - ↳ For two-handset versions, the other handset rings, then go to step 3.
- 2 Select a handset, then press [OK] to confirm.
  - ↳ The selected handset rings.
- 3 Press  on the selected handset.
  - ↳ The intercom is established.
- 4 Press [Conf].
  - ↳ You are now in a 3-way conference call with an external call and a selected handset.

- 5 Press  to end the conference call and transfer the existing call to the selected handset.

#### Note

- Press  to join an ongoing conference with another handset if **[Services]** > **[Conference]** is set to **[Auto]**.

---

## During the conference call

- 1 Press **[Int.]** to put the external call on hold and go back to the internal call.  
↳ The external call is put on hold.
- 2 Press **[Conf]** to establish the conference call again.

#### Note

- If a handset hangs up during the conference call, the other handset remains connected to the external call.





# 6 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

---

## Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **[Clear]** to delete a character. Press and hold **[Clear]** to delete all characters. Press  and  to move the cursor left and right.
- 3 Press **o a** to add a space.



### Note

- For information on key mapping of characters and numbers, see the chapter 'Appendix'.

---

## Switch between uppercase and lowercase

By default, the first letter of each word in a sentence is uppercase and the rest is lowercase. Press and hold **#\*A** to switch between the uppercase and lowercase letters.

## 7 Phonebook

Make sure that all the handsets registered to the base station are **Philips D45** models in order to have this feature functioning properly. For more information, see the base station's user manual.

## 8 Call log

Make sure that all the handsets registered to the base station are **Philips D45** models in order to have this feature functioning properly. For more information, see the base station's user manual.

## 9 Redial list

Make sure that all the handsets registered to the base station are **Philips D45** models in order to have this feature functioning properly. For more information, see the base station's user manual.

# 10 Phone settings

You can customize the settings to make it your own phone.

Make sure that all the handsets registered to the base station are **Philips D45** models in order to have this feature functioning properly.

---

## Sound settings

---

### Set the handset's ringtone volume

You can select among 5 ringtone volume levels or **[Off]**.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Ring volume]**, then press **[OK]** to confirm.
- 2 Select a volume level, then press **[OK]** to confirm.  
↳ The setting is saved.

---

### Set the handset's ringtone

You can select from 10 ringtones.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Ring tones]**, then press **[OK]** to confirm.
- 2 Select a ringtone, then press **[OK]** to confirm.  
↳ The setting is saved.


---

### Silent mode

You can set your phone to silent mode and enable the silent mode for a specified duration. When the silent mode is turned on, your phone does not ring or send any alerts or sound.

#### Note

- When you press **(M)** to find your handset, or when you activate the alarm, your phone still sends alert even when the silent mode is activated.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Silent mode]**, then press **[OK]** to confirm.
- 2 Select **[On/off]** > **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.
- 3 Select **[Start & end]**, then press **[OK]** to confirm.
- 4 Set the time, then press **[OK]** to confirm.  
↳ The setting is saved.  
↳  is displayed.

---

### Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Key tone]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

### Set the docking tone

Docking tone is the sound made when you place the handset on the base station or charger.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Docking tone]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Set the battery tone

Battery tone is the sound made when the battery is low and needs recharging.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[Battery tone]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Set the sound profile

You can set the sound in the earpiece among 3 different profiles.

- 1 Select **[Menu]** > **[Phone setup]** > **[Sounds]** > **[MySound]**, then press **[OK]** to confirm.
- 2 Select a profile, then press **[OK]** to confirm.  
↳ The setting is saved.

### Access the sound profile during a call

Press **[Sound]** for once or several times to change the sound profile during a call.

---

## Eco mode

The **ECO** mode reduces the transmission power of the handset and base station when you are on a call or when the phone is in standby mode.

- 1 Select **[Menu]** > **[Phone setup]** > **[Eco mode]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, and press **[OK]** to confirm.  
↳ The setting is saved.  
↳ **ECO** is displayed in standby mode.

### Note

- When **ECO** mode is set to **[On]**, the connection range between the handset and the base station can be reduced.

---

## ECO+ mode

When the **ECO+** mode is activated, it eliminates the radiation of the handset and base station in standby mode.

- 1 Select **[Menu]** > **[Phone setup]** > **[ECO+ mode]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, and press **[OK]** to confirm.  
↳ The setting is saved.  
↳ **ECO+** is displayed in standby mode after a while.

### Note

- Make sure that all the handsets registered to the base station are D450/D455 in order to have the **ECO+** feature functioning properly.
- When **ECO+** is activated, the standby time is reduced. This is because in **ECO+** mode the base station is not transmitting any signal in standby mode; therefore the handset needs to "listen" more frequently for signals from the base station to detect incoming calls or other requests from the base station. The time it takes for the handset to access features like call setup, call log, paging, and phonebook browsing is also delayed. The handset will not alert you to link loss in case of power loss or moving out of range.

The following table shows you the current status of the handset screen with different **ECO** mode and **ECO+** mode settings.

ECO mode	ECO+ mode	Handset icon display
<b>[Off]</b>	<b>[Off]</b>	<b>eco</b> and <b>ECO+</b> are off.
<b>[Off]</b>	<b>[On]</b>	<b>ECO+</b> is displayed only after the <b>ECO+</b> mode is activated during standby mode .
<b>[On]</b>	<b>[Off]</b>	<b>eco</b> is displayed.
<b>[On]</b>	<b>[On]</b>	<b>eco</b> is displayed and changed to <b>ECO+</b> when the <b>ECO+</b> mode is activated in standby mode.

---

## Name the handset

The name of the handset can be up to 14 characters. It is displayed on the handset screen in standby mode.

- 1 Select **[Menu]** > **[Phone setup]** > **[Phone name]**, then press **[OK]** to confirm.
- 2 Enter or edit the name. To erase a character, press **[Clear]**.
- 3 Press **[OK]** to confirm.  
↳ The setting is saved.

---

## Set the date and time

For information, see 'Set the date and time (see 'Set the date and time' on page 7)'.  

---

---

## Set the display language



### Note

- This feature only applies to models with multiple-language support.
- Languages available vary from country to country.

- 1 Select **[Menu]** > **[Phone setup]** > **[Language]**, then press **[OK]** to confirm.
- 2 Select a language, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Auto answer

When you activate the auto answer feature, you can connect to the incoming call automatically once you pick up the handset. When you deactivate this feature, you have to press **⏏** or **📞** to answer the incoming call.

- 1 Select **[Menu]** > **[Phone setup]** > **[Auto answer]**, then select **[OK]** to confirm.

- 2 Select **[On]/[Off]**, and select **[OK]** to confirm.  
↳ The setting is saved.

---

## Activate/Deactivate auto hang up

You can activate the auto hang up function so that you can end a call by simply placing the handset on the base station or charge cradle.

- 1 Select **[Menu]** > **[Phone setup]** > **[Auto hang-up]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.



### Note


- When auto hang up is deactivated, you can put the handset to the base station or charging cradle and continue with your call through the speaker.

# 11 Alarm clock

Your phone has a built-in alarm clock. Check the information below to set your alarm clock.



---

## Set the alarm

- 1 Select **[Menu]** > **[Alarm]**, then press **[OK]** to confirm.
- 2 Select **[On once]** or **[On daily]**, then press **[OK]** to confirm.
- 3 Enter an alarm time, then press **[OK]** to confirm.
  - ↳ The alarm is set and  is displayed on the screen.



Tip

- Press  /  to switch between **[am]**/**[pm]** (Country dependent).

---

## Turn off the alarm

---

### When the alarm rings

Press any key to turn off the alarm.

---

### Before the alarm rings

Select **[Menu]** > **[Alarm]** > **[Off]**, then press **[OK]** to confirm.

- ↳ The setting is saved.



# 12 Services

The phone supports a number of features that help you handle and manage the calls. Make sure that all the handsets registered to the base station are **Philips D45** models in order to have this feature functioning properly.

---

## Call list type

You can set whether you can view all incoming calls or missed calls from this menu.

### Note

- This is a country dependent feature.

---

## Select the call list type

- 1 Select **[Menu]** > **[Services]** > **[Call list type]**, then press **[OK]** to confirm.
- 2 Select an option, then press **[OK]** to confirm.

---

## Auto conference

To join an external call with another handset, press **↵**.

### Note

- This feature is available only for multi-handset versions.

---

## Activate/Deactivate auto conference

- 1 Select **[Menu]** > **[Services]** > **[Conference]**, then press **[OK]** to confirm.
- 2 Select **[Auto]/[Off]**, then press **[OK]** to confirm.

↳ The setting is saved.

---

## Call barring

You can block outgoing calls to numbers, such as overseas calls or undesirable hotlines by barring calls that start with certain digits. You can create 4 sets of numbers with 4 digits at maximum for each set of numbers. When you make a call that starts with one of these 4 sets of numbers, the outgoing call is then barred.

---

## Select the barring mode

- 1 Select **[Menu]** > **[Services]** > **[Call barring]** > **[Barring mode]**, then press **[OK]** to confirm.
- 2 Enter the call barring PIN/passcode. The default PIN/passcode is 0000. Then press **[OK]** to confirm.
- 3 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Add new numbers to the barred list

- 1 Select **[Menu]** > **[Services]** > **[Call barring]** > **[Barring number]**, then press **[OK]** to confirm.
- 2 Enter the call barring PIN/passcode. The default PIN is 0000. Then press **[OK]** to confirm.
- 3 Select a number from the list, then press **[OK]** to confirm.
- 4 Edit the number, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Change the barring PIN/passcode

- 1 Select **[Menu]** > **[Services]** > **[Call barring]** > **[Change PIN]**, then press **[OK]** to confirm.

- 2 Enter the old barring PIN/passcode. The default PIN is 0000. Then press **[OK]** to confirm.
- 3 Enter the new PIN/passcode, then press **[OK]** to confirm.
- 4 Enter the new PIN/passcode again, then press **[Save]** to confirm.  
↳ The setting is saved.

---

## Blacklist

You can put numbers into the blacklist to block incoming calls to certain undesirable numbers. You can create 4 sets of numbers with 24 digits at maximum for each set of numbers. When there is an incoming call that starts with one of these 4 sets of numbers, the ringer will be muted.

### Note

- Make sure you have subscribed to the caller ID service before you use this feature.
- The contact's name in phonebook will not be displayed if this contact's number matches the record saved in the blacklist.

---

## Activate/deactivate the blacklist

- 1 Select **[Menu] > [Services] > [Blacklist]**, then press **[OK]** to confirm.
- 2 Select **[Blacklist mode]**, then press **[OK]** to confirm.
- 3 Enter the PIN/passcode. The default PIN is 0000. Then press **[OK]** to confirm.
- 4 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Add blacklist numbers

- 1 Select **[Menu] > [Services] > [Blacklist]**, then press **[OK]** to confirm.

- 2 Select **[Blacklist]**, then press **[OK]** to confirm.
- 3 Enter the PIN/passcode. The default PIN is 0000. Then press **[OK]** to confirm.
- 4 Enter the number; then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Change the blacklist PIN/passcode

- 1 Select **[Menu] > [Services] > [Blacklist] > [Change PIN]**, then press **[OK]** to confirm.
- 2 Enter the old barring PIN/passcode. The default PIN is 0000. Then press **[OK]** to confirm.
- 3 Enter the new PIN/passcode, then press **[OK]** to confirm.
- 4 Enter the new PIN/passcode again, then press **[Save]** to confirm.  
↳ The setting is saved.

---

## Network type

### Note

- This is a country dependent feature. It only applies to models with network type support.

- 1 Select **[Menu] > [Services] > [Network type]**, then press **[OK]**.
- 2 Select a network type, then press **[OK]**.  
↳ The setting is saved.

---

## Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as

6043338888, your phone changes the number to 12503338888 when it dials out.

### Note

- The maximum length of a detect number is 10 digits. The maximum length of an auto prefix number is 10 digits.
- This is a country dependent feature.

## Set auto prefix

- 1 Select **[Menu]** > **[Services]** > **[Auto prefix]**, then press **[OK]** to confirm.
- 2 Enter the detect number, then press **[OK]** to confirm.
- 3 Enter the prefix number, then press **[OK]** to confirm.  
↳ The setting is saved.

### Note

- To enter a pause, press and hold **#\*#A**.
- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.
- The feature is unavailable if the dialed number starts with \* and #.

## Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[Short]**, **[Medium]** and **[Long]**. The number of available options varies with different countries. For details, consult your service provider.

- 1 Select **[Menu]** > **[Services]** > **[Recall time]**, then press **[OK]** to confirm.
- 2 Select an option, then press **[OK]** to confirm.  
↳ The setting is saved.

## Dial mode

### Note

- This feature only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

## Set the dial mode

- 1 Select **[Menu]** > **[Services]** > **[Dial mode]**, then press **[OK]** to confirm.
- 2 Select a dial mode, then press **[OK]** to confirm.  
↳ The setting is saved.

### Note

- If your phone is in pulse dial mode, press **\*#\*#** during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals.

## Auto clock

### Note

- This service is country and network dependent.
- Make sure you have subscribed to the caller ID service before you use this feature.

It synchronizes the date and time on your phone with the public switched telephone network (PSTN) automatically. For the date to be synchronized, make sure the current year is set.

- 1 Select **[Menu]** > **[Services]** > **[Auto clock]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**. Press **[OK]**.  
↳ The setting is saved.

---

## Register additional handsets

You can register additional handsets to the base station (see 'Register your handset' on page 7).

---

## Unregister the handsets

- 1 Select **[Menu]** > **[Services]** > **[Unregister]**, then press **[OK]** to confirm.
- 2 Enter the system PIN. (The preset PIN is 0000). Press **[Clear]** to remove the number.
- 3 Select the handset number to be unregistered.
- 4 Press **[OK]** to confirm.  
↳ The handset is unregistered.



Tip

- The handset name is displayed beside the handset number in standby mode.

---

## Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Select **[Menu]** > **[Services]** > **[Reset]**, then press **[OK]** to confirm.  
↳ A confirmation request is displayed on the handset.
- 2 Press **[OK]** to confirm.  
↳ All settings (except the phonebook and direct access keys information) are reset.

# 13 Technical data

## General specification and features

- Talk time: 16 hours
- Standby time: 250 hours
- Range indoor: 50 meters
- Range outdoor: 300 meters
- Caller identification standard support: FSK, DTMF

## Battery

- Philips: 2 x AAA Ni-MH 1.2V 550 mAh rechargeable batteries

## Power adapter

- MEIC: MN-A102-E130, input: 100-240 V~, 50/60 Hz 200 mA, output: 6 Vdc 400 mA
- Tenpao: S003IV0600040, input: 100-240 V~, 50/60 Hz 150 mA, output: 6 Vdc 400 mA

## Power consumption

- Power consumption in idle mode: around 0.2W

## Weight and dimensions

- Handset: 100.2 grams  
163.6 x 48.87 x 23.90 mm (H x W x D)
- Charger: 46.0 grams  
81.8 x 79.0 x 24.0 mm (H x W x D)

# 14 Notice

## Declaration of conformity

Hereby, WOOX Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).

This product has been designed, tested and manufactured according the European R&TTE directive 1999/5/EC.

## Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

## Compliance with EMF

This product complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

## Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

### Removing the disposable batteries

To remove the disposable batteries, see section 'Install the supplied batteries'.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box),

polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

# 15 Frequently asked questions

## No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays **[Register your Handset]**, put the handset on the base until the signal bar appears.



### Tip

- For further information, see the chapter 'Services', section 'Register additional handsets'.

## If I fail to pair (register) the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.




### Tip

- For further information, see the chapter 'Services', section 'Unregister the handsets'.

## My handset is in searching status, what do I do?

- Make sure that the base station has power supply.
- Register the handset to the base station.
- Move the handset closer to the base station.

## I have chosen a wrong language which I cannot read, what do I do?

- 1** Press  to go back to the standby screen.
- 2** Press **[Menu]** to access the main menu screen.
- 3** One of the following texts appears on the screen:

---

Telefooninst. > Taal

Phone setup > Language

---

Réglages > Langue

---

Telefon-Setup > Sprache

Config. telef. > Lingua

---

**4** Select it to access the language options.

**5** Select your own language.

## The handset loses connection with the base or the sound is distorted during a call.

Check if the **ECO+** mode is activated. Turn it off to increase the handset range and enjoy the optimal call conditions.

## No dialing tone.

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

## No docking tone.

- The handset is not placed properly on the base station/charger.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

## I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

## The handset on the charger does not charge.

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The battery icon animates when charging.
- Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones with the same specifications.

## No display.

- Make sure the batteries are charged.
- Make sure there is power and the phone is connected.

## Bad audio (crackles, echo, etc.).



- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

**The handset does not ring.**

Make sure the handset ringtone is turned on.

**The caller ID does not display.**

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.



**Note**

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.



6	mno Ħ 6 PCTY
7	p q r s Ж Š 7 Ф X Ц Ч П Θ Σ Β
8	t u v L j 8 Ш Щ Ъ Ы
9	w x y z Ž 9 Ь Э Ю Я Ω Ξ Ψ

# 17 Index

---

## A

alarm	22
auto answer	21
auto clock	25
auto conference	23
auto hang up	21
auto prefix	25

---

## B

battery	6
blacklist	24

---

## C

call barring	23
call list type	23
calling	10
conference call	11, 13, 23

---

## D

date setting	7, 25
default settings	26
dial mode	25
disposal	28

---

## E

ECO mode	20
ECO+ mode	20

---

## G

GAP	28
-----	----

---

## I

intercom	13
internal call	13

---

## L

language setting	
handset	21

---

## M

mute	11
------	----

---

## N

name the handset	21
network type	24

---

## P

phone settings	19
PIN	
blacklist	24
call barring	23
registration	7

---

## R

recall time	25
register/unregister	26
ringtone	19

---

## S

safety	3
signal strength	9
silent mode	19
sounds	
docking	19
keytone	19
sound profile	20
speaker phone	11
standby mode	8

---

## T

text entry	15
time setting	25
troubleshooting/FAQ	30

two calls/call on hold 11

---

V

volume adjustment 11



2015 © WOOX Innovations Limited. All rights reserved.

Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.

UM\_D4550\_12\_EN\_V1.0  
wk1506

**CE 0168**

