

AZD102 (Black黑)
AZD102W(White白)





Quick start guide 快速啟用指南

PHILIPS


To get the detailed instructions for use, visit www.philips.com/welcome.
詳盡的使用說明請造訪 www.philips.com/welcome。




What's in the box 內容物

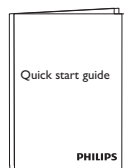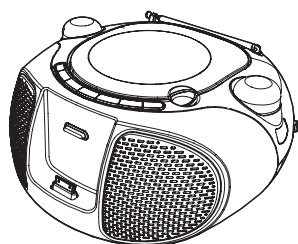

Connect power 連接電源

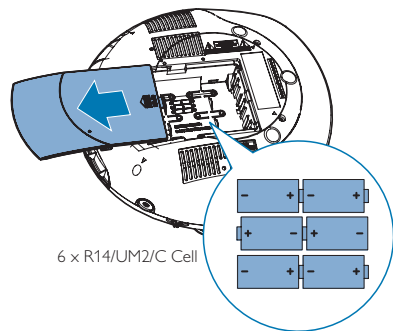


6 x R14/UM2/C Cell

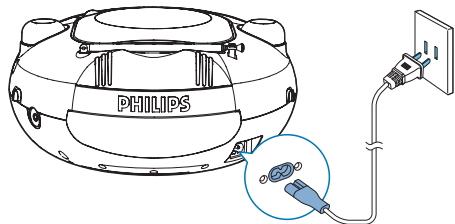


To play with the device, you can use either alkaline battery (R14) or AC power. *1




Listen to audio from iPod/iPhone 播放 iPod/iPhone 內容

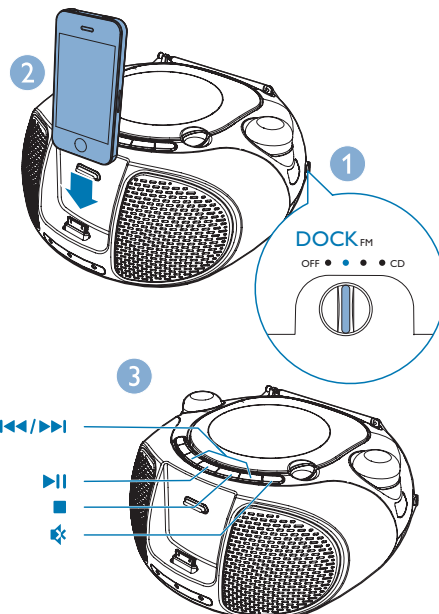


Your iPod/iPhone can only be charged in **Dock** or **MP3 link** mode, not in **FM** or **CD** mode. *2

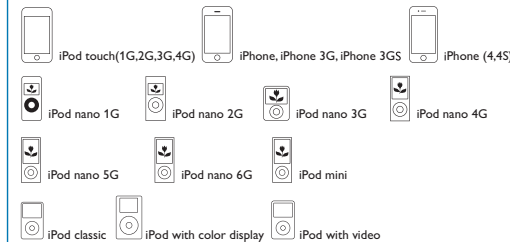

Adjust volume 調整音量

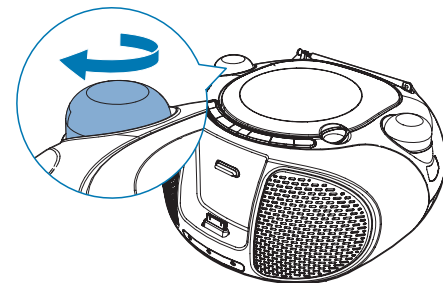

Listen to an external audio device 播放外接裝置的內容

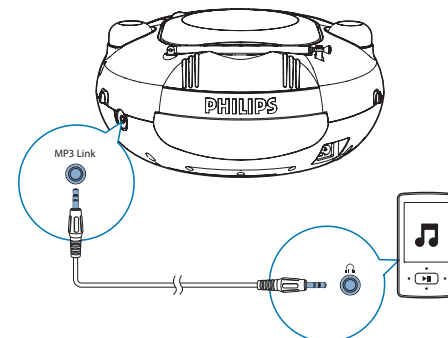


When the device is turned on and an MP3 link cable is connected, it switches to MP3 link mode automatically.


將外接裝置連接至 **MP3-LINK** 插孔時，本裝置音源將自動切換至 MP3 link (MP3 連線) 模式。



Play disk 播放光碟

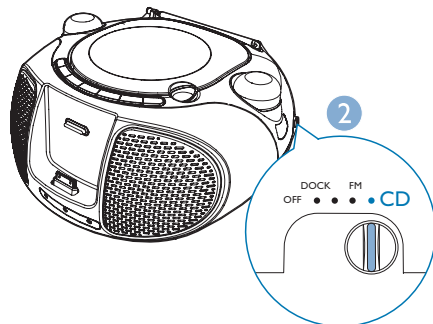


- ⏮/⏭ : Skip to the previous or next track/跳到上一個/下一個曲目 : Search within play/在播放內進行搜尋。
- 🔀 : Play tracks randomly/隨機播放曲目。
- 🔄 : Play a track or tracks repeatedly/重複播放單一曲目或所有曲目。
- ⏸ : Pause or start play/開始或暫停播放。
- : Stop play/停止播放。
- 🔇 : Mute or resume sound/靜音或恢復播放音效。

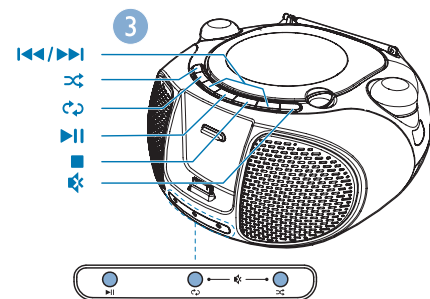


⏸/🔄/🔀 : LED indicators (for CD mode only).
LED 指示燈：僅用於 CD 模式。



Listen to FM radio 收聽 FM 廣播

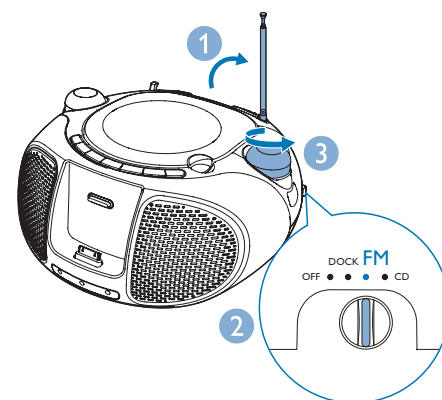

Turn DBB on/off 開啟或關閉動態低音增強

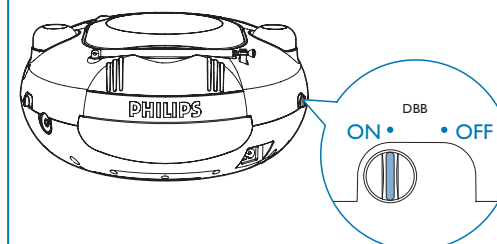

To turn dynamic bass enhancement on or off, switch **DBB** to **ON** or **OFF**. *3



Turn off 關閉

