



Register your product and get support at
www.philips.com/welcome


DC6210



Quick start guide


- 1 Connect
- 2 Setup
- 3 Enjoy

What's in the box

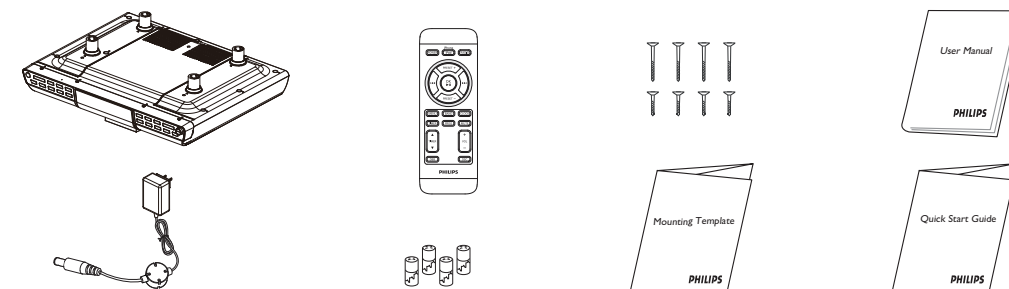


1 Connect

A Remove the protective tab

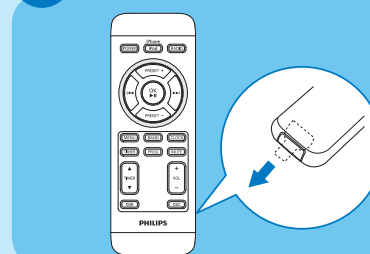

- 1 Remove the protective tab to activate the remote control battery.

B Connect power

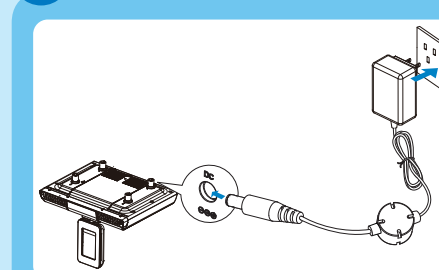

- 1 Connect one end of the AC adapter to the **DC IN** socket on the main unit.
- 2 Connect the other end of the AC adapter to the wall outlet.

2 Setup

A Set time and date


- 1 Dock the iPod / iPhone on the unit.
- 2 Open the iPod / iPhone.
→ Time and date information on the iPod/ iPhone transfers to the unit automatically.

To set time and date manually

- 1 In standby mode, press and hold **CLOCK** for 2 seconds.
→ The hour digits begin to blink.
- 2 Rotate the knob clockwise/counter-clockwise or press **◀▶** to set the hour.
- 3 Press **CLOCK** to confirm.
→ The minute digits begin to blink.
- 4 Repeat steps 2-3 to set the minute, year, month, and day.
→ The week day is displayed automatically.
- 5 Repeat steps 2-3 to select the 12/24 hour format.
- 6 Press **CLOCK** to confirm.

B Set a kitchen timer


- 1 At any operation mode, press **TIMER/VOL**.
→ The last time setting in minute or hour and minute blinks.
- 2 Rotate the knob clockwise/counter-clockwise to choose the desired timer.
- 3 Press **TIMER/VOL** to confirm.
→ The timer is set and activated.
→  is displayed and the timer starts counting down.

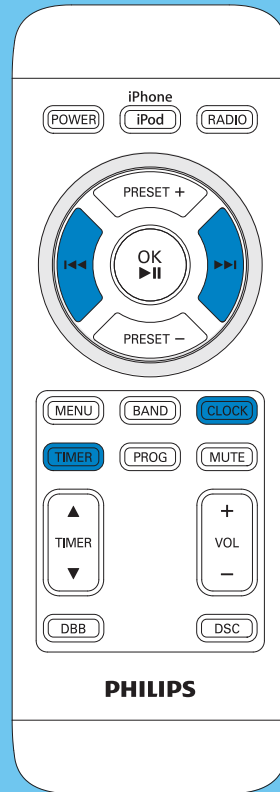

3 Enjoy

A Play from iPod/iPhone

- 1 Lift up the iPhone/iPod dock under the bottom plate.
- 2 Place the iPhone/iPod into the dock.

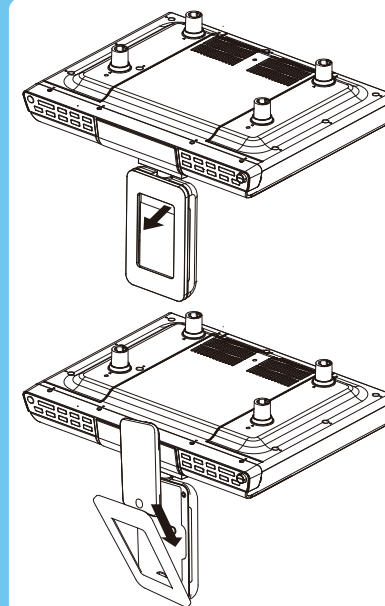

B Listen to the iPod/iPhone

- 1 Ensure that the iPod/iPhone is loaded correctly.
- 2 Press **iPod** to select iPod/iPhone source.
→ The connected iPod/iPhone plays automatically.



3 Enjoy

C Tune to a radio station

- 1 Press **RADIO** to turn on the radio.
- 2 Press **BAND** to select FM or AM tuner.
- 3 Press and hold **PROG** for more than 2 seconds.
→ [Srch] (search) is displayed.
→ The radio tunes to a station with strong reception automatically.
- 4 To tune to a weak station, press **◀▶** repeatedly until you find optimal reception.

