



MCD 299





 



# Quick start guide



- Step A *Connect*
- Step B *Setup*
- Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

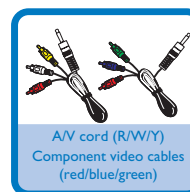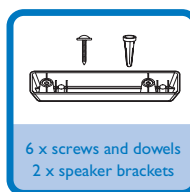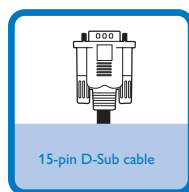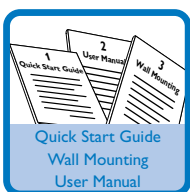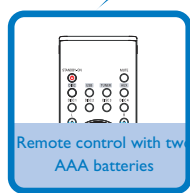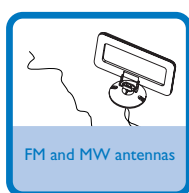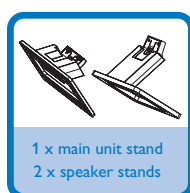

# PHILIPS


## Step A Connect

### Tips

- See the User Manual for other TV connection options.
- See Wall Mounting for detailed instructions if you want to mount the system on the wall.

**WARNING:** When you are holding the speakers for mounting them on the stands, please **DO NOT** press on the speaker cloth directly to avoid any speaker damage!



- 1 Attach the supplied stands to the main unit and speakers respectively so that they can stand firmly on a desktop.
- 2 Connect the speaker and subwoofer cables.
- 3 Connect the MW and FM antennas.
- 4 Connect the A/V cord.
- 5 Connect the power cords of the system and TV.

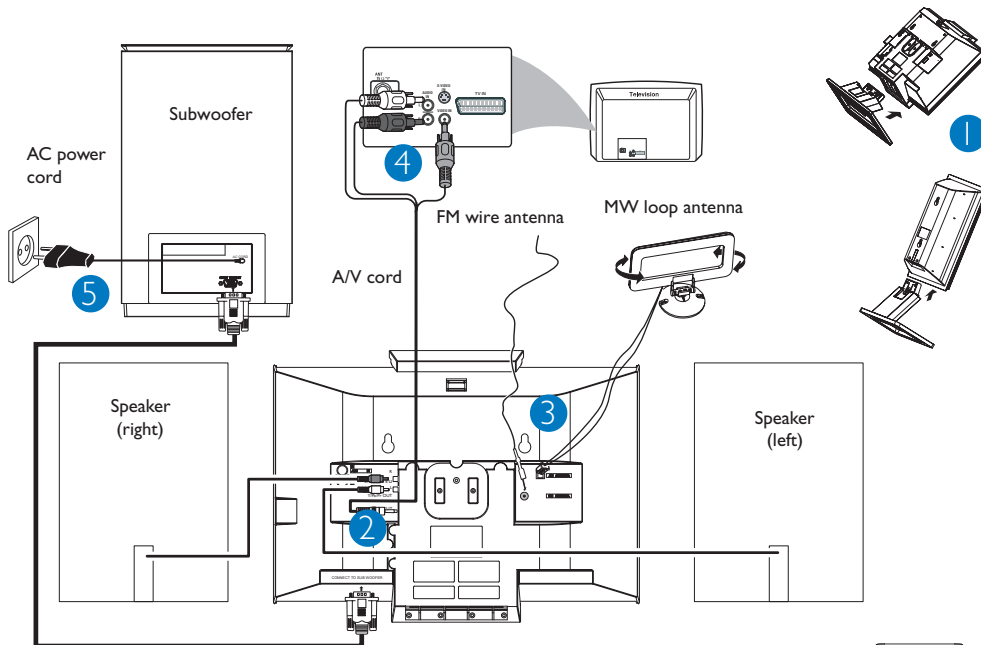

## Step B Setup

### Setting up the TV

- 1 Press **SOURCE (DISC)** on the remote to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

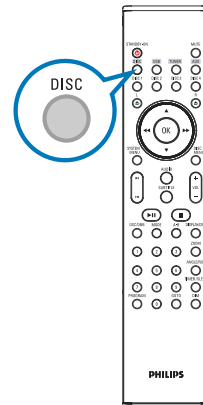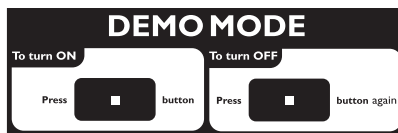



## Step B Setup

### Setting the clock


- 1 In standby mode, press and hold **CLOCK** on the front panel.
- 2 Press **◀/▶** to set the hours.
- 3 Press **⏪/⏩** to set the minutes.
- 4 Press **PROGRAM** to select clock mode.
- 5 Press **CLOCK** to confirm the time.

### Setting DVD menu options

**IMPORTANT!**

*If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup.*

**Tip**  
See chapters "Preparation" and "System Menu Options" in the User Manual for detailed descriptions.

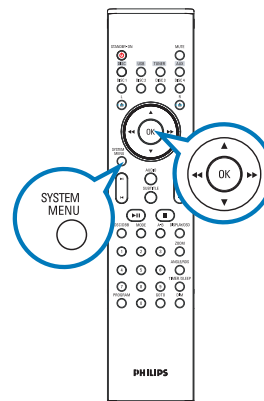




## Step C Enjoy


### Playing a disc

- 1 Press **LEFT ▲** or **RIGHT ▲** on the front panel (**L ▲** or **R ▲** on the remote control) to open the left or right disc door respectively.
- 2 Insert one or more discs with the printed side facing you. Press **LEFT ▲** or **RIGHT ▲** on the front panel (**L ▲** or **R ▲** on the remote control) again to close the disc door.
- 3 Use **DISC 1/2/3/4** to select a disc for playback.  
→ Playback will start automatically. If not press **▶||**.
- 4 To stop playback, press **■**.

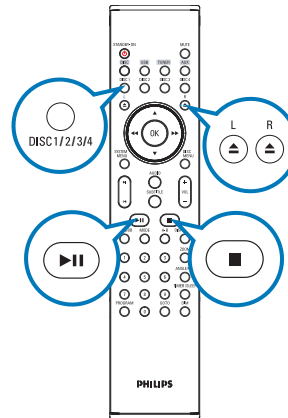


### Programming and tuning to radio stations

- 1 Press **SOURCE** on the front panel of the system repeatedly or **TUNER** on the remote to select the tuner source.
- 2 Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.
- 3 Press **◀ / ▶** until the desired preset station is displayed.

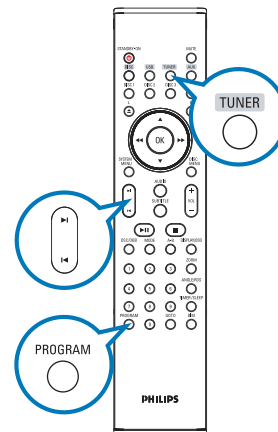

### Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

#### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



PDCC-JS/JW-0740

