

Quick Start Guide



Step A [Setup](#)


Step B [Enjoy](#)

What's in the Box?


You should find these items upon opening the box.




PVD778

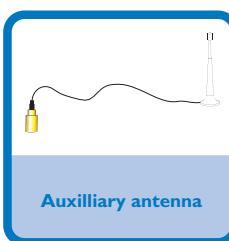


Auxilliary antenna

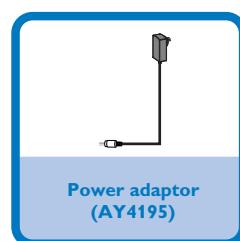

Power adaptor
(AY4195)

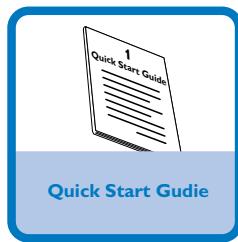

Quick Start Guide

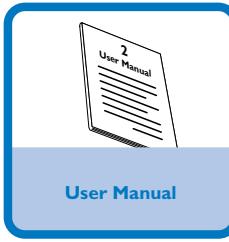


User Manual

PHILIPS

Step A Setup


Place the TV on a flat surface

Pull out the stand on the backside of the TV set.

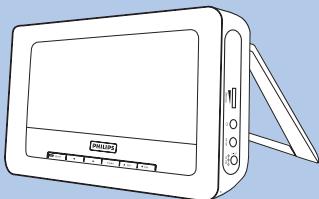

Connect antenna

Insert the aerial plug firmly into the antenna socket on the right side of the TV.

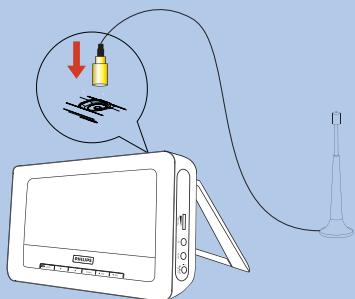


Tips

- For best reception, please connect PVD778 to the home antenna.
- Auxiliary antenna is used when there is excellent signal coverage. There is magnet at the bottom of the auxiliary antenna. Fix it onto a metallic surface.

Connect AC power


Connect the supplied AC/DC adaptor to the DC IN jack of the TV and a power outlet.

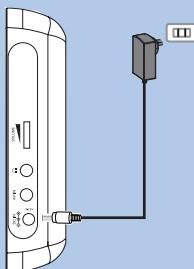

Step B Enjoy

Switch on the TV

To switch on the TV, slide the POWER ON OFF switch to ON position. The green LED aside the **MENU** button lights up.

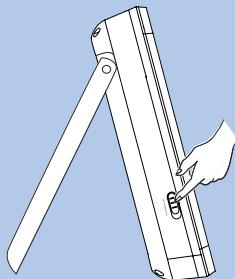

Set OSD (On-Screen-Display) language

- 1 Press **SETUP** repeatedly until the **SETUP** menu is highlighted.
- 2 Press **▲** or **▼** to select **LANGUAGE**.

TV MENU	
SETUP	PICTURE
LANGUAGE	ENGLISH
AREA	CHINA
AUTO SEARCH	
TV SYSTEM	PAL
TV SOUND	DK
FINE TUNE	
DELETE CH	YES

- 3 Press **◀** or **▶** to select language.
- The selected OSD language will be applied immediately.

Set Area

You need to select your country before starting to search for TV channel.

- 1 Press **SETUP** repeatedly until the **SETUP** menu is highlighted.
- 2 Press **▲** or **▼** to select **AREA**.

TV MENU	
SETUP	PICTURE
LANGUAGE	ENGLISH
AREA	CHINA
AUTO SEARCH	
TV SYSTEM	PAL
TV SOUND	DK
FINETUNE	
DELETE CH	YES

- 3 Press **◀** or **▶** to select your area: China, Russia, USA, India, Hongkong, Singapore.
 - With the change of area, TV system (e.g. PAL, NTSC) and TV sound setting will be changed automatically. You can change TV system and TV sound settings manually by refer to chapter 4.4.

Set TV channels

- 1 Press **SETUP** repeatedly until the **SETUP** menu is highlighted.
- 2 Press **▲** or **▼** to select **AUTO SEARCH**.

TV MENU	
SETUP	PICTURE
LANGUAGE	ENGLISH
AREA	CHINA
AUTO SEARCH	
TV SYSTEM	PAL
TV SOUND	DK
FINETUNE	
DELETE CH	YES

Tip

Detailed playback features and additional functions are described in the accompany user's manual.

- 3 Press **◀** or **▶** to start auto search.
 - Auto channel search starts.
- 4 When Auto channel search is complete, the screen displays the total number of TV channels found.
- 5 Press **▲** or **▼** to skip through the found channels.

