




Quick Start Guide






- Step A **Connect**
- Step B **Setup**
- Step C **Enjoy**

What's in the Box?

You should find these items upon opening the box.

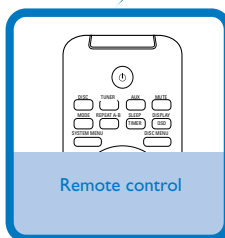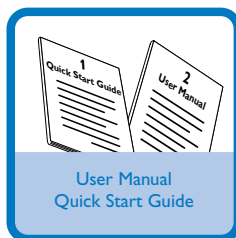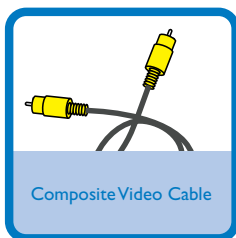

Pull out the plastic protective sheet before use.

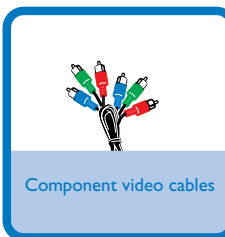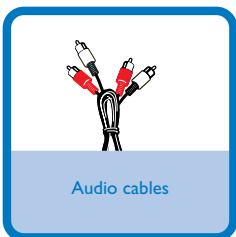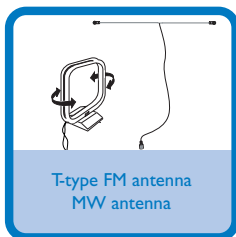

Step A Connect

Tips

- See the User Manual for other TV connection options.
- For better FM reception, please make sure that the two prongs of the T-type antenna are in alignment with each other.

1

Connect the speaker cables.

2


Connect the MW and T-type FM antennas.

3

Connect the component video cables (red/blue/green) and audio cables (white/red) a TV.

4

Connect the power cords of the system and TV.

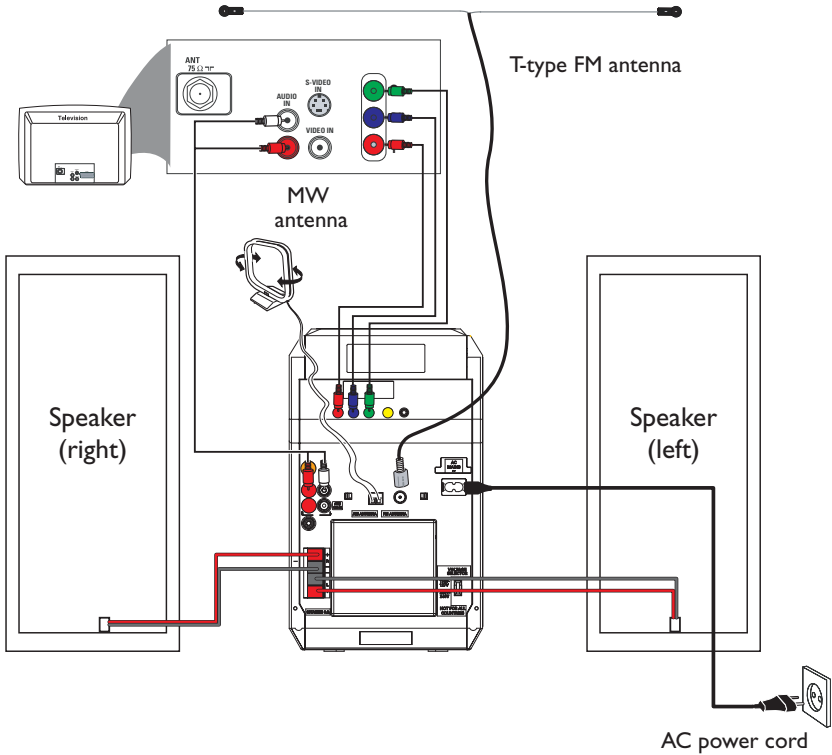

Step B Setup


Setting up the TV

1

Press **SOURCE** (DISC on the remote) to select disc source.

2


Turn on the TV and set it to the correct Video In channel.

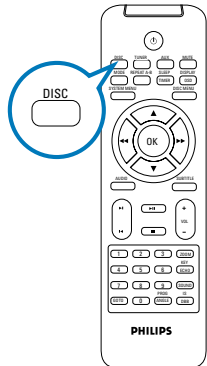






Step B Setup

Setting the clock

- 1 In standby mode, press and hold **CLOCK SET** on the system.
- 2 When the hour digits flash, press **SEARCH** <<>> (<|> on the remote) to set the hours.
- 3 Press **CLOCK SET** again and the minute digits flash. Then press **SEARCH** <<>> (<|> on the remote) to set the minutes.
- 4 Press **CLOCK SET** again to confirm the time setting.

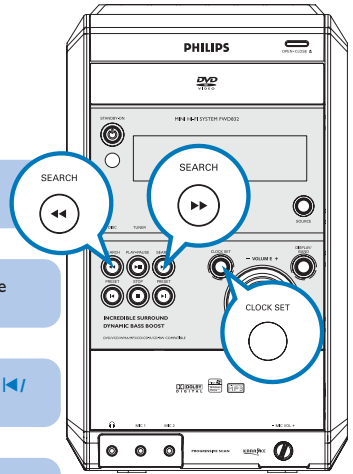

Setting system menu options

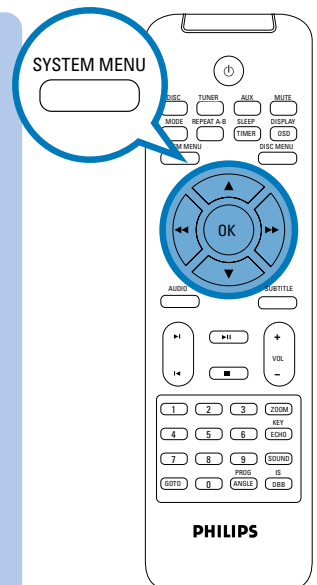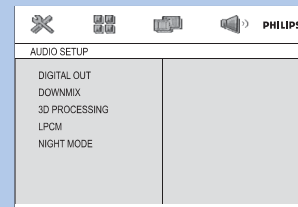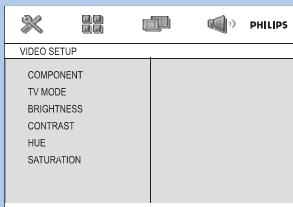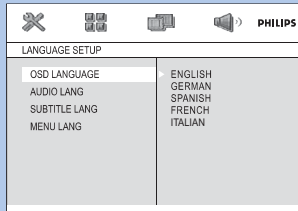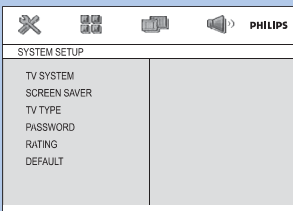

Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

