

Always there to help you

Register your product and get support at
www.philips.com/welcome

SPA7380



User manual

PHILIPS

Contents

1	Important	2
	Safety	2
	Notice	3

2	Your multimedia speaker	4
----------	--------------------------------	----------

3	Installation	4
----------	---------------------	----------

4	Get started	5
	Optional function	5

5	Product information	5
----------	----------------------------	----------

6	Troubleshooting	6
----------	------------------------	----------

1 Important

Safety

Important safety instructions

- Read and follow all these instructions.
- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
- To completely disconnect the power input, the mains plug of the product shall be disconnected from the mains.
- The mains plug of the product should not be obstructed or should be easily accessed during intended use.
- Keep this product away from direct sunlight, naked flames or other heat sources.
- Unplug the product from the power outlet during lightening storms or when unused for long periods of time.
- When you disconnect the power cord, always pull the plug instead of the cable.
- Only use attachments/accessories specified by the manufacturer.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.

Note

- The type plate is located on the back of the apparatus.

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Class II equipment symbol:



CLASS II apparatus with double insulation, and no protective earth provided.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information


All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

2 Your multimedia speaker

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

3 Installation

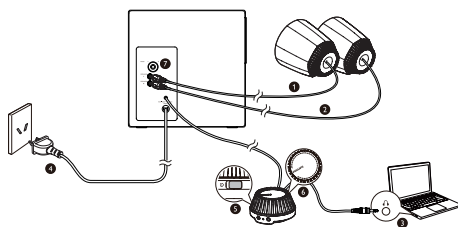

- 1 Insert the left speaker plug into **SPEAKER L** socket (①).
- 2 Insert the right speaker plug into **SPEAKER R** socket (②).
- 3 Connect the audio input plug on remote control to the audio output socket of your computer (③).
- 4 Connect the AC plug to AC power socket (④).

4 Get started



Note

- Make sure that the multimedia speaker is installed properly before using.

- 1 Slide on the remote control to switch on the multimedia speaker ().
↳ The indicator on the remote control (between the and the AUX sockets) lights up.
- 2 Adjust the volume by the remote control () or by the computer application.
- 3 Rotate **BASS** knob to adjust the bass ().
- 4 After use, switch off the multimedia speaker and unplug.

Optional function

- **To listen through a headphone:**

Connect a headphone (not supplied) to the socket.

- **To play music from an external audio device such as an MP3 player:**
- 1 Connect an MP3 link cable (not supplied) to the **AUX** socket and the headphone socket on the device.
 - 2 Play music from the device.

5 Product information

Specifications:

AC power input	100-240V ~ 50/60Hz, 700mA
Operation power consumption	20W, 1/8 rated power output
Standby power consumption	0.5W
Dimensions (W x H x D)	Subwoofer: 230 x 230 x 255 mm Speakers: 133 x 133 x 151 mm

System requirements

PC	Mac
Windows® 98SE, Windows® ME, Windows® 2000, Windows® XP, or Windows® Vista™, Windows 7	Mac OS9/ OS® X, or later

6 Troubleshooting

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the product, check the following points before requesting service. If the problem remains unsolved, register your product and get support at www.philips.com/support.

No sound

- Make sure that the speakers are correctly installed.
- Make sure that the indicator on the remote control lights up.



Specifications are subject to change without notice
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

SPA7380_77_UM_EN_V1.0

