 


Quick start guide

1 Charge your battery

This portable DVD player is designed with a built-in lithium battery to supply power to the player when you are on travel.

- Slide the **POWER** switch to the **OFF** position (charging of the DVD player only possible in the power-off mode).



- Connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) to start charging.
→ The **CHG** indicator turns red.
→ When the battery is fully charged, the indicator turns off.
- Disconnect the power adaptor cord (or the car adaptor) when the CHG indicator turns off.

Note:

– You can also connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) directly wherever possible.

2 Enjoy (Disc operation)



- Open the lid of the player.
- Slide the **POWER** switch to **ON** to switch on the DVD player.
→ The **POWER** indicator turns on.
- Press **OPEN** to open the disc door.
- Remove the protective card (if any) and load a disc with the label side facing up.
- Close the disc door. Playback will start automatically. If not, press **▶II**.
- To stop playback, press **■**.

 
Note:

– Once the battery is fully discharged, immediately recharge it (regardless of whether you plan to use the battery or not) in order to maximize the battery life. When the power is low, the battery icon will be shown on the upper-right corner of the TFT for warning.

2 Enjoy (AV OUT)


Connecting additional equipment (TV for example)

- Connect the AV OUT socket on the set to the video and audio sockets on a TV as shown directly.
- Switch on the TV and set to the correct video-in channel.
→ You can consult the owner's manual of your TV. (If your TV does not have Audio and Video inputs, you will need to purchase a RF modulator. Please consult your dealer.)

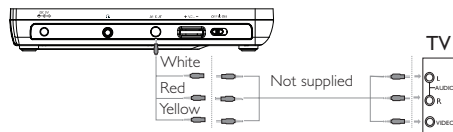

2 Enjoy (TV)

 - Connect the DVD player to the antenna as shown.

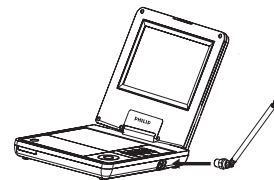

- In TV mode, press **MENU**.
- Press **◀▶** to switch to **PAL I**.

TV MENU	
TV SYSTEM	PAL I
AUTO SEARCH	
SEARCH	
FINE TUNE	
CHANNEL NO	001
SKIP	OFF
STORE	OK

- In the TV menu, when **AUTO SEARCH** is highlighted, press **OK** on the remote (**▶II** on the set).
→ “**AUTO SEARCH**” is displayed.

AUTO SEARCH	001
	VHFL
PRESS MENU TO EXIT	

→ All available TV channels will be auto searched and stored.

- To stop searching, press **MENU**.

For details, see the user manual.