

# Quick start guide



Step A *Connect*

Step B *Setup*

 
Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.




FM antenna




MW antenna



 Remote Control

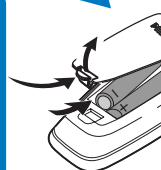

Quick Start Guide

 

User manual


# PHILIPS
 
## Step A *Connect*

- 1 Connect the speaker cables.
- 2 Connect the MW and FM antennas.
- 3 Connect the power cable of the system.

### Tip


See the User Manual for how to connect other equipment to this system.

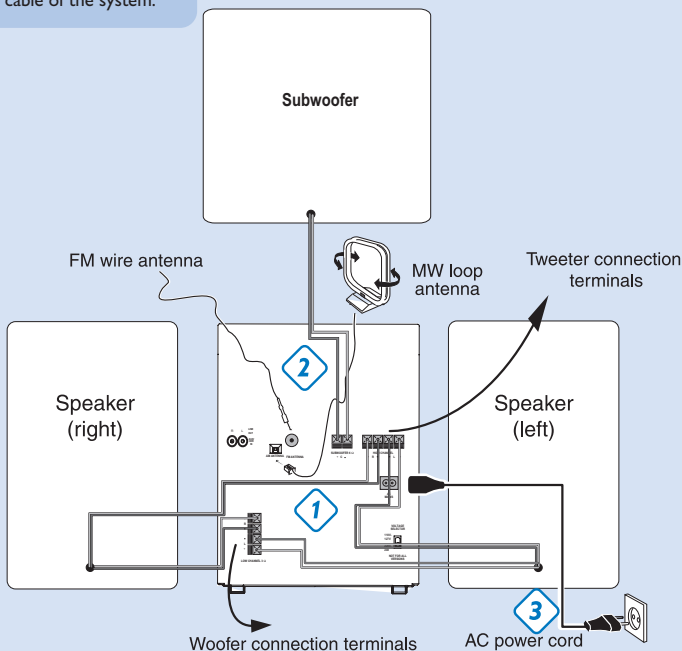

## Step B *Setup*

### Setting the clock

 - 1 In standby or view clock mode, press **CLOCK•TIMER** once. In other source mode, press **CLOCK•TIMER** twice.
- 2 Press **◀** or **▶** repeatedly to set the hour.
- 3 Press **◀** or **▶** repeatedly to set the minute.
- 4 Press **CLOCK•TIMER** again to store the setting.

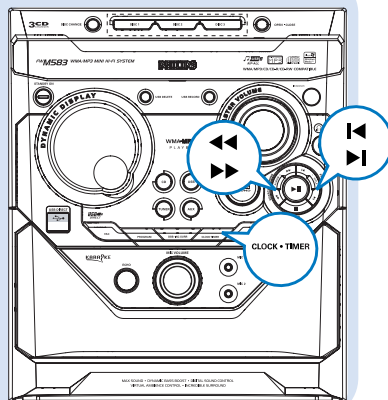


## Playing a disc

- 1 Press **OPEN•CLOSE** to open the disc tray and load up to two discs on the individual disc trays. To load the third disc, press **DISC CHANGE**.  
→ Make sure the label side of each loaded disc is facing up.

- 2 Press **OPEN•CLOSE** again to close the disc tray.


- 3 Use **DSC 1/2/3** (or **CD 1/2/3** on the remote control) to select a disc for playback and then press **▶ II** to start playback.

 - 4 To stop playback, press **STOP ■**.

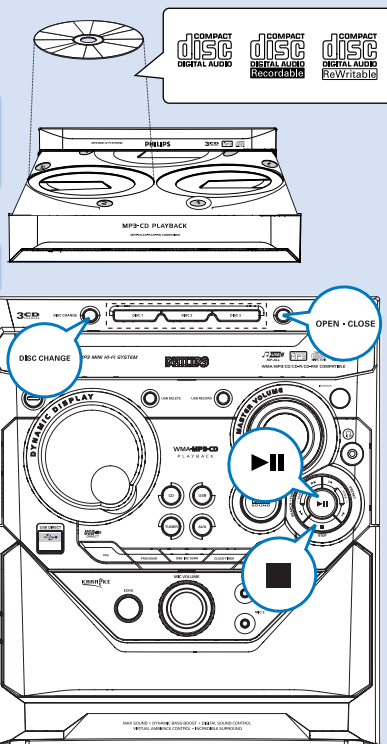


## Programming and tuning to radio stations

 - 1 Press **TUNER** to select the tuner source.
- 2 Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.
- 3 Press **◀** or **▶** until the desired preset station is displayed.

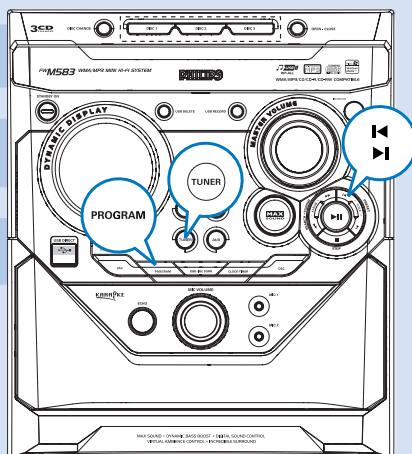

## Playing a USB mass storage device


With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

1 Insert the USB device's USB plug into the **USB DIRECT**  socket on the set.

2 Press **USB** to select the USB source.


3 Play the USB's audio files as you do with the albums/tracks on a CD.

## Ripping function

1 Insert a USB device with sufficient free space to the **USB DIRECT**  socket on the set.

2 Prepare the source to record from.

3 Press **USB RECORD** to start ripping.

4 At any moment, simply press **STOP**  to stop ripping.

### Tip

*Detailed playback features and additional functions are described in the accompany owner's manual.*

