Always there to help you

Register your product and get support at www.philips.com/welcome



AJ3275D



User Manual



Contents

1	Important	3
	Risk of swallowing batteries	3
2	Your clock radio	4
	What's in the box	4
3	Get started	4
	Install battery	4
	Connect power	5
	Set clock	5
4	Play from iPod/iPhone	6
	Compatible iPod/iPhone	6
	Listen to audio from iPod/iPhone	6
	Charge the iPod/iPhone	6
	Adjust volume	6
5	Listen to FM radio	7
	Tune to FM radio stations	7
	Store FM radio stations automatically	7
	Store FM radio stations manually	7 7
	Select a preset radio station	/
6	Other features	8
	Set alarm timer	8
	Set sleep timer	8
	Adjust display brightness	9
7	Product information	9
	Specifications	9
8	Troubleshooting	10
9	Notice	10

1 Important

A

Warning

- · Never remove the casing of this clock radio.
- Never lubricate any part of this clock radio.
- Never place this clock radio on other electrical equipment.
- Keep this clock radio away from direct sunlight, naked flames or heat.
- Make sure that you always have easy access to the power cord, plug or adaptor to disconnect the clock radio from the power.
- Make sure that there is enough free space around the product for ventilation.
- The clock radio shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

Risk of swallowing batteries

- The product or remote control may contain a button cell battery, which is possible to be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.


 If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

2 Your clock radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

What's in the box



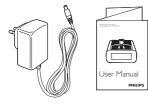

3 Get started

Always follow the instructions in this chapter in sequence.

Install battery



Warning

- Risk of explosion! Keep the battery away from heat, sunshine or fire. Never discard the battery in fire.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery contains chemical substances, so it should be disposed of properly.




Note


- You can only use AC power as power supply. The lithium CR2032 battery can only back up time and alarm settings.
- When power is disconnected, the display backlight turns off.

For first-time use:

Remove the protective tab to activate the battery.

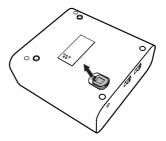

To replace the battery:

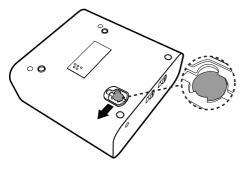


Connect power



Caution

- Risk of product damage! Make sure that the power voltage corresponds to the voltage printed on the back or underside of the clock radio,
- Risk of electric shock! When you unplug the AC adapter, always pull the plug from the socket. Never pull the cord.

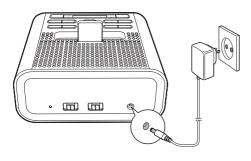

Set clock

- In standby mode, press and hold SETTIME for two seconds.
- Press HR/HR + (or MIN/MIN +) to select 12/24 hour format.
- 3 Press SET TIME to confirm.→ The hour and minute digits blink.

- 4 Press HR/HR + and MIN/MIN + to set the hour and minute respectively.
- 5 Press **SET TIME** again to confirm.



SCAN/ PROG

2 - HR HR + / - MIN | MIN +

SET TIME

3 SCAN/ PROG

4 - HR HR +

5 — MIN MIN +

SET TIME

SCAN/
PROG



When iPod/iPhone is connected, the clock radio synchronizes time with the iPod/iPhone automatically.

4 Play from iPod/ iPhone

You can enjoy audio from iPod/iPhone through this clock radio.

Compatible iPod/iPhone


The clock radio supports these iPod and iPhone models:

Made for:

- iPod touch (5th generation)
- iPod nano (7th generation)
- iPhone 5

Listen to audio from iPod/iPhone

1 Place the iPod/iPhone in the dock. (Fig. 5)

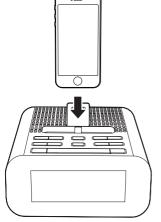

Press **iPhone** to enter iPod/iPhone mode.

- **3** Play audio on the iPod/iPhone.
 - To skip to a track, press HR/HR + (or - MIN/MIN +).
 - To search during play, press and hold
 HR/HR + (or MIN/MIN +), then release to resume normal play.



· Press iPhone again to switch to standby mode.

To remove the iPod/iPhone:

Pull the iPod/iPhone out of the dock.

Charge the iPod/iPhone

When the clock radio is connected to power, the docked iPod/iPhone starts charging.

Adjust volume




5 Listen to FM radio

Tune to FM radio stations



Tip

- Position the antenna as far as possible from TV,VCR, or other radiation source.
- For better reception, fully extend and adjust the position of the antenna.

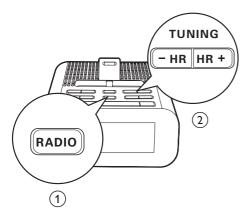



Note

To turn the radio on or off, press RADIO.

Store FM radio stations automatically

You can store a maximum of 20 FM radio stations.

- 1 Press RADIO to turn on the radio.
- Press and hold SCAN/PROG for two seconds
 - → The clock radio stores all the available FM radio stations, and then broadcasts the first available station automatically.

Store FM radio stations manually

- 1 Tune to an FM radio station.
- 2 Press SCAN/PROG.
 - → The preset number begins to blink,
- 3 Press PRESET +/- repeatedly to select a number:
- 4 Press SCAN/PROG again to confirm.
- **5** Repeat steps 1-4 to store other stations.



Note

 To remove a pre-stored station, store another station in its place.

Select a preset radio station

In tuner mode, press **PRESET +/-** to select a preset radio station.

6 Other features

Set alarm timer

You can set two alarms to ring at different time.




Note

- Make sure that you have set the clock correctly.
- 1 Press and hold AL1/AL2 for 2 seconds to enter alarm setting mode.
 - → The hour and minute digits blink.
 - → or is displayed accordingly.
- Press HR/HR + and MIN/MIN + to set hour and minute respectively.
- 3 Press AL1/AL2 again to confirm.

Select alarm sound

For the alarm sound, you can select buzzer, your last heard radio or played track on the iPod/iPhone. (Fig. 8)

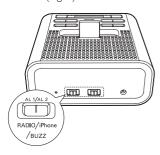



Tip

- When alarm time arrives and you are listening to radio or audio from the iPod/iPhone, buzzer can only be activated as alarm sound.
- If you have selected iPod/iPhone as the alarm source, yet no iPod/iPhone is connected, buzzer will sound when alarm time comes.

Activate/deactivate alarm timer

- 1 Press AL1/AL2 to view alarm settings.
- Press AL1/AL2 again to activate or deactivate the alarm timer.
 - → ♠ or ♠ appears if alarm timer is on and disappears if it is off.
 - To stop alarm, press the corresponding AL1/AL2.
 - → The alarm repeats ringing for the next day.

Snooze the alarm

When alarm sounds, press SNOOZE.

→ The alarm snoozes and repeats ringing nine minutes later.

Set sleep timer

This clock radio can switch to standby mode automatically after a preset period.

- Press **SLEEP** repeatedly to select the sleep timer period (in minutes).
 - When the sleep timer is activated, zZ appears.


To deactivate the sleep timer:

Press SLEEP repeatedly until [OFF] (off) appears.

$$15 \rightarrow 30 \rightarrow 60 \rightarrow 90 \rightarrow 120$$

$$\bigcirc OFF$$

Adjust display brightness

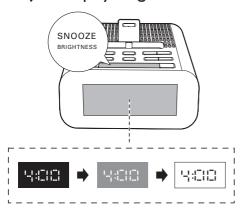

7 Product information



Note

 Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power 2W RMS

Tuner

Tuning Range	FM: 87.5 - 108 MHz		
Tuning Grid	FM: 50 KHz		
Sensitivity			
- Mono, 26dB S/N Ratio	FM: <22 dBf		
Total Harmonic Distortion FM: <3%			
Signal to Noise Ratio	FM: >50 dBA		

General information

AC Power	Model: AS100-050-	
	AE200; Input: 100-	
	240 V ~, 50/60Hz,	
	0.5A;Output: 5 V == 2 A	
Operation Power		
Consumption	<10 W	
Standby Power		
Consumption	<2 W	
Max. Load for iPod/		
iPhone	5 V == 1 A	
Dimensions - Main Unit		
$(W \times H \times D)$	$130 \times 76 \times 145 \text{ mm}$	
Weight - Main Unit	0.6 kg	

8 Troubleshooting

A

Warning

Never remove the casing of this device

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact the Consumer Care, make sure that the product is nearby and the model number and serial number are available.

No response from the unit

 Disconnect and reconnect the AC power plug, then turn on the unit again.

Poor radio reception

- Increase the distance between the unit and yourTV orVCR.
- Fully extend the FM antenna.

9 Notice

ϵ

This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.



Note

 The type plate is located on the bottom of the apparatus.



"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



This is CLASS II apparatus with double insulation, and no protective earth provided.



2014 © WOOX Innovations Limited. All rights reserved.

This product was brought to the market by WOOX Innovations Limited or one of its affiliates, further referred to in this document as WOOX Innovations, and is the manufacturer of the product. WOOX Innovations is the warrantor in relation to the product with which this booklet was packaged, Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.

