
 





DVP 3020  
DVD Video Player

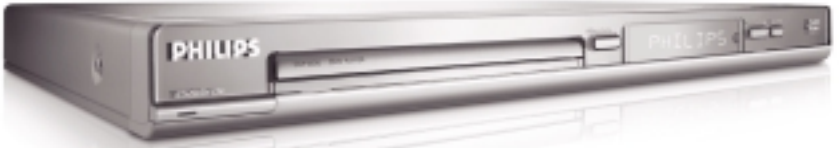

?



  DVD

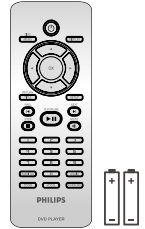


2 AAA

( ) ( & )

1

TV  
Video In

TV  
Audio In

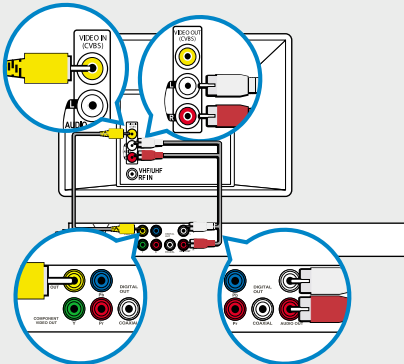

DVD  
Video Out

DVD  
Audio Out

Ⓐ TV /  
DVD Video Out (CVBS) TV Video  
In ( A/V In, Video In, Composite Baseband  
TV DVD  
{AUDIO OUT L/R} TV DVD  
Audio In  
DVD AC

주의

# 2

(A)

DVD ⏻  
 TV  
 DVD SETUP



TV '0'  
 DVD  
 DVD

주의 TV  
 AV SELECT  
 TV

(B)

DVD On-Screen  
 Language(OSD ), Audio Language( ),  
 Subtitle Language( ), Menu Language( )

OSD  
 {General Setup Page}  
 {OSD Language}



OK

 
주의 OSD

?

DVD

(Online)

[www.philips.com/support](http://www.philips.com/support)




# 3

(A)

주의 TV 가  
 1) DVD  
 가  
 2) PLAY/PAUSE ▶K

PLAY/PAUSE ▶K

STOP  
 L  
 가 DISC MENU

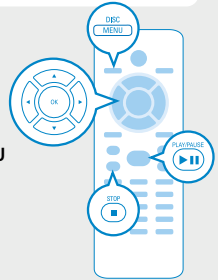

· AC 가  
 · DVD  
 STANDBY-ON  
 · TV 가  
 가  
 가  
 가  
 · DVD  
 IR



2005 © Koninklijke Philips N.V.  
 All rights reserved.  
[www.philips.com](http://www.philips.com)  
 SL0604/61\_02