

Always there to help you  
Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)



SPA7355



# User manual

**PHILIPS**



# Contents

---

<b>1 Important</b>	<b>2</b>
Safety	2
Notice	3
<hr/>	
<b>2 Your Multimedia Speaker</b>	<b>5</b>
<hr/>	
<b>3 Installation</b>	<b>5</b>
<hr/>	
<b>4 Get started</b>	<b>6</b>
Optional function	6
<hr/>	
<b>5 Product information</b>	<b>7</b>
<hr/>	
<b>6 Troubleshooting</b>	<b>7</b>

# 1 Important

---

## Safety



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.



### Warning

- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
- To completely disconnect the power input, the mains plug of the product shall be disconnected from the mains.
- The mains plug of the product should not be obstructed OR should be easily accessed during intended use.
- No naked flame sources, such as lighted candles, shall be placed on the products.

## Hearing safety



### Caution

- To avoid hearing damage, limit the time you use the headphones at high volume and set the volume to a safe level. The louder the volume, the shorter is the safe listening time.

### Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume continuously upwards as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Excessive sound pressure from earphones and headphones can cause hearing loss.

---

## Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.



This product complies with the radio interference requirements of the European Community.

---

## Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.


### **Environmental information**

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

## 2 Your Multimedia Speaker

Congratulations on your purchase and welcome to Philips!  
To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

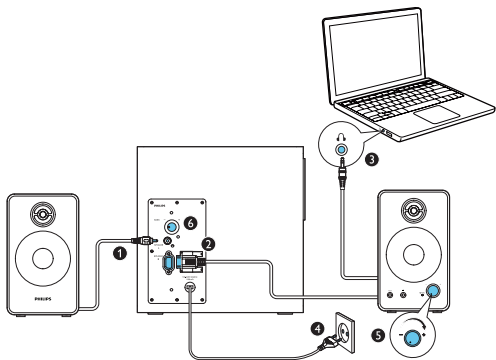

## 3 Installation

- 1 Insert the left speaker plug into **SPEAKER L** socket (①).
- 2 Insert the right speaker plug into **SPEAKER R** socket (②).
- 3 Connect the audio input plug on right speaker to the audio output socket of your computer (③).
- 4 Connect the AC plug to AC power socket (④).

## 4 Get started




### Note

- Make sure that the Multimedia Speakers are installed properly before using.

- 1 Rotate **VOL** knob clockwise to switch on the Multimedia Speakers (5).  
↳ Amber LED is on.
- 2 Adjust the volume by **VOL** knob or by the computer application.
- 3 Rotate **BASS** knob to adjust the bass (6).
- 4 After use, switch off the speakers and unplug.

---

## Optional function

- **To listen through a headphone:**  
Connect a headphone (not supplied) to the  socket.
- **To play music from an external audio device such as an MP3 player:**
  - 1 Connect an MP3 link cable (not supplied) to the **AUX** socket and the headphone socket on the device.
  - 2 Play music from the device.



## 5 Product information

AC power

---

Model: SPA7355

---

Input: 100-240V ~, 50/60Hz, 550mA

---

### System Requirements:

---

PC	Mac
Windows® 98SE, Windows® ME, Windows® 2000, Windows® XP, or Windows® Vista™, Windows 7	Mac OS9/OS® X, or later

---

## 6 Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using the product, check the following points before requesting service. If the problem remains unsolved, register your product and get support at [www.philips.com/support](http://www.philips.com/support).

- Make sure that the speakers are correctly installed.
- Make sure the LED lights up.



Specifications are subject to change without notice

2013 © WOOX Innovations Limited. All rights reserved.

This product was brought to the market by WOOX Innovations Limited or one of its affiliates, further referred to in this document as WOOX Innovations, and is the manufacturer of the product. WOOX Innovations is the warrantor in relation to the product with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.

