

Register your product and get support at
www.philips.com/welcome

AE2330



EN User manual

PHILIPS

1 Important

- Read these instructions.
- Heed all warnings.
- Follow all instructions.
- Clean only with dry cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
- Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

2 Your Bathroom Radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

This bathroom radio has passed splash-proof test (IPX4) and can be used near water:

With this radio, you can:

 
- know the time
 - listen to FM/MW radio stations
-

What's in the box

Check and identify the contents of your package:

- Main unit
- User manual

Overview of the main unit

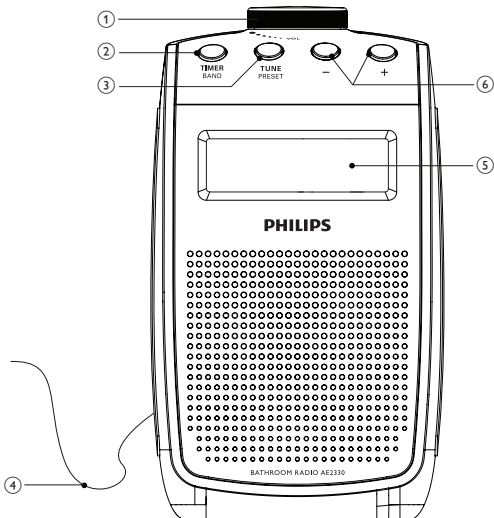

- ① **⏻ /VOL**
 - Turn on/off radio.
 - Adjust volume.
 - Program radio stations automatically.
 - Tune to the previous or next radio station.
 - Select the previous or next preset radio station.
 - Adjust hour/minute digits.

- ② **TIMER/BAND**
 - Set time.
 - Activate or deactivate sleep timer.
 - Select FM or MW waveband.

- ③ **TUNE/PRESET**
 - Tune to a radio station.
 - Program radio stations manually.

- ④ **Antenna**
 - Improve radio reception.

- ⑤ **Display panel**
 - Show time and radio information.

- ⑥ **+/-**
 - Select the previous or next preset radio stations.
 - Adjust hour and minute digits.

3 Get started

Always follow the instructions in this chapter in sequence.

Modification of the product could result in hazardous radiation of EMC or other unsafe operation.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. _____

Serial No. _____

 
Install battery



Caution

- Batteries contain chemical substances, so they should be disposed of properly.

- 1 Open the battery compartment.
- 2 Insert 3 AA batteries (not supplied) with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

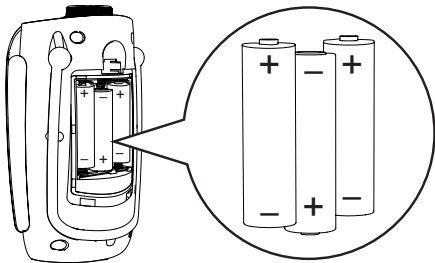



Placement

You can place the unit on a flat surface or hang it in your bathroom through the strap.



Tip

  - The strap is detachable.

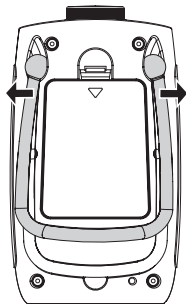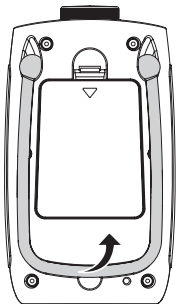

Turn on

Press  to turn on the radio.

Switch to standby mode


Press  again to switch to standby mode.

Set time


- 1 In standby mode, press and hold **TIMER** for 3 seconds.
↳ The hour digits blink.
- 2 Press +/- to adjust the hour.
- 3 Press **TIMER** to confirm.
↳ The minute digits blink.
- 4 Press +/- to adjust the minute.
- 5 Press **TIMER** to confirm.

4 Listen to radio

Select FM/MW waveband

- 1 Press  to turn on the radio.
- 2 Press and hold **BAND** for 3 seconds to select FM or MW waveband.

Tune to a radio station

- 1 In tuner mode, press **TUNE**.
↳ **[FM]** or **[MW]** begins to blink.
- 2 Rotate  clockwise or counter-clockwise to tune to a radio station.
- 3 Press **TUNE** again to confirm.

Program radio stations automatically




Note

- You can program a maximum of 20 preset FM radio stations and 20 preset MW radio stations.

In tuner mode, press and hold  for 2 seconds.

- ↳ All available stations are programmed in the order of waveband reception strength.
- ↳ The first programmed radio station broadcasts automatically.

Program radio stations manually

- 1 In tuner mode, tune to a radio station.
- 2 Press and hold **PRESET** for 3 seconds.
 - ↳ The number begins to blink.
- 3 Rotate  to select a preset number.
- 4 Press **PRESET** to confirm.
- 5 Repeat steps 1 - 4 to program more stations.



Tip

- To overwrite a programmed station, program another station in its place.

Select a preset radio station

In tuner mode, press +/- to select a preset radio station.


Set the sleep timer

The clock radio can be turned off automatically after a preset period of time.

Press **TIMER** repeatedly to select a time period (in minutes).

To turn off the sleep timer:

Press **TIMER** repeatedly until **[OFF]** (off) appears or press .

- ↳  is displayed when the sleep timer is on and disappears when it is off.

5 Product information



Note

- Product information is subject to change without prior notice.

Tuner

Tuning Range	FM: 87.5 - 108 MHz MW: 531 - 1602 kHz
Tuning Grid	50 KHz (FM); 9 KHz (MW)
Number of Presets	FM: 20 MW: 20

General

Power Supply	3 x AA batteries
Maximum Power Output	300 mW
Operation Power Consumption	100 mW
Dimensions	
- Main Unit (H x W x D)	155 x 89 x 62 mm
Weight	
- With Packing	0.4 kg
- Main Unit	0.3 kg

6 Troubleshooting



Warning

- Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Ensure that the battery is installed properly.
- Replace the exhausted battery.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

No sound

- Adjust the volume.

Clock/timer setting erased

- Replace the exhausted battery.
- Reset the clock/timer.

No response from the unit

- Take out the batteries and turn on the unit again.

7 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



This product complies with the radio interference requirements of the European Community.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



© 2012 Koninklijke Philips Electronics N.V.

All rights reserved.

AE2330_02_UM_V1.0

