Enjoy

About the Time Shift Buffer

Once you turn on the recorder, the selected TV programme will be stored in a temporary hard disk storage called Time Shift Buffer '**TSB**'. The '**TSB**' can store up to 10 hours of programmes temporarily in Standard Play (SP) mode.

Press **DISPLAY** to display the Time Shift video bar.



During play of :



• To go to current play position of connected device, press 🔳 .

Note:

- The contents in the time shift video bar will be cleared when you press (), USB, TIMER or REC LIST.

Start recording

- A Record from TV or an external device
- To record a TV programme, Press 0 - 9 to select the preset channel to record.

Note If you have used Option B in 'Basic Connection', press **SOURCE** repeatedly to select 'CVBS'. Use the remote control of your cable box to select the TV programme to record.

- To record from a connected device, press **SOURCE** repeatedly to select the video source to record (CVBS or YPbPr).
- 1 Press to start recording. Press again to extend the recording time.
- 2 To end recording, press ■
- **3** To playback the recording, press **REC LIST**, use \blacktriangle keys to select the title and press \triangleright II.

Need help?

User Manual See the user manual that came with your Philips recorder.



Start playback

- A Play a recording
- Press **REC LIST**.
- 2 Use $\blacktriangle \nabla$ keys to select a title and press $\triangleright II$. To stop play, press

B Play a media file

• To play from a USB device Insert the USB device to the USB socket, then press **USB**. OR, if a confirmation screen is displayed, select [Confirm] to view the USB contents menu.

Note:

- This recorder supports USB devices which conform to the USB Mass Storage Device class standard.

• To play from media files

Press HOME, then select [Media Files], then press **OK**.



- 1 Press ► to select the media type [Music], [Photos] or [Movies],
- 2 Select the title and press ►II. To stop play, press ■.

Register your product and get support at: www.philips.com/welcome

Quick Start Guide



What's in the box?









2008 © Koninklijke Philips N.V. All rights reserved. sgpjl_822/97EN02 www.philips.com

DVR2008







Basic Connection

Before Connecting

Select one of the following basic connections (A or B) according to the type of connecting devices you have.



Option A

Use this connection if you are connecting the antenna cable directly from the antenna wall socket or from a cable TV socket.

- Unplug the antenna cable that is connected to your TV and plug it into the ANTENNA-IN G socket on this recorder.
- 2 Connect the supplied RF antenna cable from the TV-OUT ↔ socket on the recorder to the Antenna In socket on the TV.
- 3 Connect a composite video cable (yellow end) from the **CVBS OUTPUT** socket on the recorder to the video input socket on your TV.
- Connect an audio cable (red/white ends) from the AUDIO OUTPUT sockets on the recorder to the audio input sockets on your TV.
- 5 Plug in the power cord from the recorder to an AC power outlet.



Option **B**

Use this connection if your current antenna cable is connected to a cable box.

- 1 Keep the existing antenna connection from the cable box to your TV.
- Connect the supplied RF antenna cable from the ANTENNA-IN G socket on the recorder to the RF Out socket on the cable box/ satellite receiver.
- 3 Follow steps 3 to 4 under 'Option A' before you proceed to step 4 below.
- Connect a composite video cable (yellow end) from the VIDEO INPUT socket on the recorder to the video output socket on your cable box/satellite receiver.
- Connect an audio cable (red/white ends) from the AUDIO INPUT sockets on the recorder to the audio output sockets on your cable box/satellite receiver.
- 6 Plug in the power cord from the recorder to an AC power outlet.

Note See the accompanying user manual for other possible connections (e.g. Component Video or S-VIDEO).



A Finding the viewing channel

- Press () on the recorder.
- 2 Switch on the TV and other connected devices (e.g. Cable box, Satellite receiver). The installation menu is displayed.

TV Region TV Shape	简体中文 敏體中立
TV Shape	敏體由立
Auto Casa	彩胆
Auto Scan	
Clock	

③ In case you don't see the recorder's installation menu, press the channel down button on the TV's remote control repeatedly (or AV, SELECT, ⊕ button) until you see the menu. This is the correct viewing channel for the recorder.

B Start basic setup

Use the recorder's remote control and follow the onscreen instructions to complete the installation.

> Note Press ▲▼ keys to toggle between options. To confirm your selection, press OK.

1 Select the menu display language.

Thist mistaliation	
Menu Language	✓ English
TV Region	简体中文
TV Shape	繁體中文
Auto Scan	
Clock	
Clock	

- 2 Select the country of your residence. Use ▲▼ keys to select the option. Press OK to confirm.
- Select the TV aspect ratio.
 Use ▲▼ keys to select the option. Press OK to confirm.

