Always there to help you

Register your product and get support at www.philips.com/welcome



AJ3275D



User Manual



Contents

1	Important	
	Risk of swallowing batteries	3
2	Your clock radio What's in the box	4 4
3	Get started Install battery Connect power Set clock	4 4 5 5
4	Play from iPod/iPhone Compatible iPod/iPhone Listen to audio from iPod/iPhone Charge the iPod/iPhone Adjust volume	6 6 6 6
5	Listen to FM radio Tune to FM radio stations Store FM radio stations automatically Store FM radio stations manually Select a preset radio station	7 7 7 7 7
6	Other features Set alarm timer Set sleep timer Adjust display brightness	8 8 9
7	Product information Specifications	9 9
8	Troubleshooting	10
9	Notice Disposal of your old product and	10
	batteries	10

1 Important

Warning

- Never remove the casing of this clock radio.
- Never lubricate any part of this clock radio.
- Never place this clock radio on other electrical equipment.
- Keep this clock radio away from direct sunlight, naked flames or heat.
- Make sure that you always have easy access to the power cord, plug or adaptor to disconnect the clock radio from the power.
- Make sure that there is enough free space around the product for ventilation.
- Only use attachments/accessories specified by the manufacturer.
- Use only power supplies listed in the user manual.
- The clock radio shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

Risk of swallowing batteries

- The product or remote control may contain a button cell battery, which is possible to be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of

reach of children. Ensure that the battery compartment is completely secure after you replace the battery.

• If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

2 Your clock radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

What's in the box





3 Get started

Always follow the instructions in this chapter in sequence.

Install battery

Warning


- Risk of explosion! Keep the battery away from heat, sunshine or fire. Never discard the battery in fire.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery contains chemical substances, so it should be disposed of properly.

- Note


- You can only use AC power as power supply. The lithium CR2032 battery can only back up time and alarm settings.
- When power is disconnected, the display backlight turns off.

For first-time use:

Remove the protective tab to activate the battery.

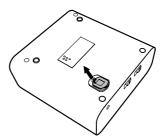


To replace the battery:

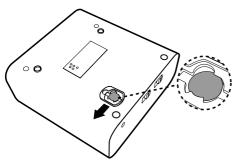

Connect power

Caution


- Risk of product damage! Make sure that the power voltage corresponds to the voltage printed on the back or underside of the clock radio.
- Risk of electric shock! When you unplug the AC adapter, always pull the plug from the socket. Never pull the cord.

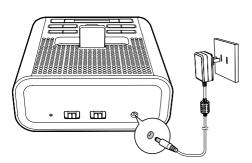

Set clock

- 1 In standby mode, press and hold **SET TIME** for two seconds.
- 2 Press HR/HR + (or MIN/MIN +) to select 12/24 hour format.
- Press SET TIME to confirm.
 → The hour and minute digits blink.

- 4 Press HR/HR + and MIN/MIN + to set the hour and minute respectively.
- 5 Press SET TIME again to confirm.

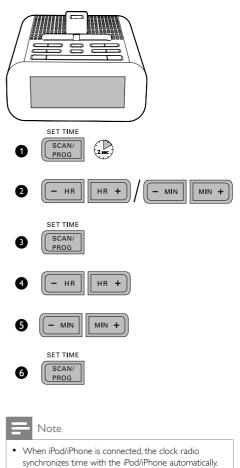

4 Play from iPod/ iPhone

You can enjoy audio from iPod/iPhone through this clock radio.

Compatible iPod/iPhone

The clock radio supports these iPod and iPhone models:


Made for:

- iPod touch (5th generation)
- iPod nano (7th generation)
- iPhone 5

Listen to audio from iPod/ iPhone

1 Place the iPod/iPhone in the dock. (Fig. 5)



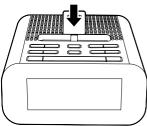

2 Press iPhone to enter iPod/iPhone mode.

- **3** Play audio on the iPod/iPhone.
 - To skip to a track, press HR/HR + (or - MIN/MIN +).
 - To search during play, press and hold - HR/HR + (or - MIN/MIN +), then release to resume normal play.

🔆 Tip

• Press iPhone again to switch to standby mode.

To remove the iPod/iPhone:

Pull the iPod/iPhone out of the dock.

Charge the iPod/iPhone

When the clock radio is connected to power, the docked iPod/iPhone starts charging.

Adjust volume




5 Listen to FM radio

Tune to FM radio stations

⊁ Тір

- Position the antenna as far as possible from TV,VCR, or other radiation source.
- For better reception, fully extend and adjust the position of the antenna.

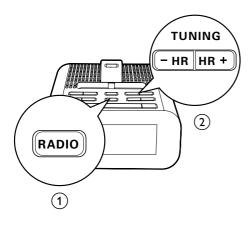

• To turn the radio on or off, press RADIO.

Store FM radio stations automatically

You can store a maximum of 20 FM radio stations.

- 1 Press RADIO to turn on the radio.
- 2 Press and hold SCAN/PROG for two seconds.
 - → The clock radio stores all the available FM radio stations, and then broadcasts the first available station automatically.

Store FM radio stations manually

- **1** Tune to an FM radio station.
- 2 Press SCAN/PROG.
 - \hookrightarrow The preset number begins to blink.
- 3 Press **PRESET +/-** repeatedly to select a number:
- 4 Press SCAN/PROG again to confirm.
- 5 Repeat steps 1-4 to store other stations.

Note

• To remove a pre-stored station, store another station in its place.

Select a preset radio station

In tuner mode, press **PRESET +/-** to select a preset radio station.

6 Other features

Set alarm timer

You can set two alarms to ring at different time.

=	Note

• Make sure that you have set the clock correctly.

- 1 Press and hold AL1/AL2 for 2 seconds to enter alarm setting mode.
 - \mapsto The hour and minute digits blink.
 - \mapsto **4** or **4** is displayed accordingly.
- 2 Press HR/HR + and MIN/MIN + to set hour and minute respectively.
- 3 Press AL1/AL2 again to confirm.

Select alarm sound

For the alarm sound, you can select buzzer, your last heard radio or played track on the iPod/ iPhone.



🔆 Тір

- When alarm time arrives and you are listening to radio or audio from the iPod/iPhone, buzzer can only be activated as alarm sound.
- If you have selected iPod/iPhone as the alarm source, yet no iPod/iPhone is connected, buzzer will sound when alarm time comes.

Activate/deactivate alarm timer

- 1 Press AL1/AL2 to view alarm settings.
- 2 Press AL1/AL2 again to activate or deactivate the alarm timer.
 - → 4 or 4 appears if alarm timer is on and disappears if it is off.
 - To stop alarm, press the corresponding AL1/AL2.
 - → The alarm repeats ringing for the next day.

Snooze the alarm

When alarm sounds, press SNOOZE.

→ The alarm snoozes and repeats ringing nine minutes later.

Set sleep timer

This clock radio can switch to standby mode automatically after a preset period.


- Press **SLEEP** repeatedly to select the sleep timer period (in minutes).
 - → When the sleep timer is activated, **zZ** appears.

To deactivate the sleep timer:

Press SLEEP repeatedly until [OFF] (off) appears.

$$15 \rightarrow 30 \rightarrow 60 \rightarrow 90 \rightarrow 120$$

Adjust display brightness

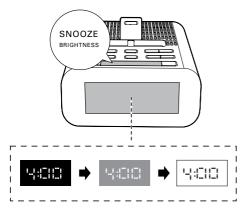

7 Product information

Note

Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power 2W RMS

Tuner

Tuning Range	FM: 87.5 - 108 MHz		
Tuning Grid	FM: 50 KHz		
Sensitivity			
- Mono, 26dB S/N Ratio	FM: <22 dBf		
Total Harmonic Distortion	FM: <3%		
Signal to Noise Ratio	FM: >50 dBA		

General information

AC Power	Model: AS100-050-	
	AB200; Input: 100-	
	240 V ~, 50/60Hz, 0.5A;	
	Output: 5 V === 2 A	
Operation Power		
Consumption	<10 W	
Standby Power		
Consumption	<2 W	
Max. Load for iPod/		
iPhone	5 V === 1 A	
Dimensions - Main Unit		
$(W \times H \times D)$	130 x 76 x 145 mm	
Weight - Main Unit	0.3 kg	

8 Troubleshooting

Warning

• Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No response from the unit

• Disconnect and reconnect the AC power plug, then turn on the unit again.

Poor radio reception

- Increase the distance between the unit and yourTV or VCR.
- Fully extend the FM antenna.

9 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Made for

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



This is CLASS II apparatus with double insulation, and no protective earth provided.



 The type plate is located on the bottom of the apparatus.



Specifications are subject to change without notice \circledast 2013 Koninklijke Philips Electronics N.V. All rights reserved.

AJ3275D_93_UM_V1.0

