Register your product and get support at www.philips.com/welcome


XL300 XL305



Quick start guide



1 Connect

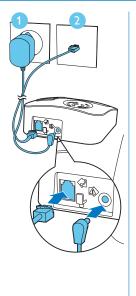



Multi-handset version only.


2 Get started

Configure your phone



- 1 When using your phone for the first time, you see a welcome message (country dependent).
- 2 Set the country and language if prompted.
- 3 Set the date and time.
 - If the time is in 12-hour format, press A/MENU /
 - **v** to select **[AM]** or **[PM]** (country dependent).

Charge your phone

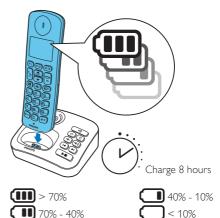

Flashing: low battery Scrolling: charging in progress

3 Enjoy

Call

- To make a call, press (/OK or ()) and dial the phone number.
- To answer a call, press (/OK or ••) when the phone rings.
- To end a call, press </

Adjust the earpiece volume

Press + or - on the left side of the handset to increase/decrease the volume.

Set the direct keys

 
- Enter the number, then press and hold M1, M2 or M3.
- 2 Follow on-screen instructions.
- 3 To make a quick call from the record pre-saved in the direct key, press √/OK or I(1), then press M1, M2 or M3.

Add a contact in the phonebook

- 1 Press A/MENU or V.
- 2 Select [PHONEBOOK] > [ADD NEW].
- 3 Follow on-screen instructions.

Telephone answering machine (XL305 only)

Listen to recorded messages



(1) To turn the answering machine on or off in standby mode, press (1).
(2) To delete the current message, press ¹/₁.
(3) To adjust the volume, press ¹/₁ (1)).
(4) To play the next message, press ▶.
(5) To play the previous message/replay the current message, press ▶.
(6) To start/stop listening, press ▶.

- Note

• For more information, see the Telephone answering machine section in the user manual.

Record an announcement

- 1 Press ▲/MENU or ▼. 2 Select [ANSW MACHINE] >
- [ANNOUNCEMENT].
- 3 Follow on-screen instructions.

1



Refer to the user manual that came with your new phone or download the latest version from www.philips.com/support.

C€0168



Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. All rights reserved. © 2013 Koninklijke Philips Electronics N.V.



QSG_XL300-305 05 90_EN_V1.0 WK13084