## PHILIPS



# User manual

### Playing the speakers and subwoofer



### System positioning :

The subwoofer is recommended to be put on the floor to get a better acoustic effect.

The soundbar is recommended to be put on the flat desktop to get a better acoustic effect.

Helpful Hint: - To avoid magnetic interference, do not position the speakers, too close to your TV.

### General information

#### Safety instructions

### Please read carefully the safety mark on the back side

- This mark is intended to alert the user from the non isolated dangerous voltage within the product that may be of sufficient magnitude to
- constitute a risk of electric shock to persons. This mark is intented to alert the user for
- important operating and servicing instruction.

#### Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD,
- etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket. when not in use.
- Do not open the cover or back panel to avoid electrical shock or any other accidents. No user-
- serviceable parts are inside. Only for indoor use
- Plug the system to the AC outlet with the right voltage
   Care of the cabinet marked on the back panel of the Subwoofer. • The MAINS plug is used as the disconnect device, the Do not use a solution containing alcohol, spirits,
- disconnect device shall remain readily operable.

#### Accessories



Remark: please unscrew the plastic wall mount and use metal one, if the soundbar need to be hung on the wall.

• The product shall not be exposed to dripping or splashing

and that no objects filled with liquids, such as vases, shall

Batteries shall not be exposed to excessive heat such as

Attention should be drawn to the environmental

Avoid high temperatures, moisture, water and dust

Do not place any source of danger on the Subwoofer

and satellite (e.g. liquid filled objects lighted candles).

ventilation to prevent internal heat build up. Allow at

At high volume the back cover of Subwoofer becomes

Use a soft cloth slightly moistened to clean the cabinet

least 10cm (4 inches) of free space all around the

Apparatus should not be exposed to dripping or

Place the apparatus in a location with adequate

be placed on the product.

sunshine fire or the like

aspects of battery disposal.

Care and safety information

• Do not install near heat sources.

Do not block any ventilation opening

apparatus for adequate ventilation

splashing of liquid.

hot. Do not touch it

ammonia or abrasives

### **Bluetooth Operating Instruction**

#### 1. Press SOURCE key from soundbar or remote control to Bluetooth mode;

- 2. When selecting the Bluetooth mode. "." of "bt." in display will start blinking and you will hear an audio tone which indicates Bluetooth pairing mode.
- 3. For pairing with mobile phone or other Bluetooth devices, search the device named "Philips HTL4080" and pair it. Once paired, "." of "bt." slowly flash and come up with another audio tone. "." of "bt." will stop flash when plaving music
- 4. Press and hold " 📕 " for 3 seconds from remote control in order to force disconnect the Bluetooth connection

Note: While using Bluetooth, if external call comes, then speaker system goes in mute mode in order to protect privacy of mobile phone user. Operation resumes once the call is disconnected.

### Connections

#### Soundbar back panel



#### Subwoofer back panel



### Troubleshooting

5. AC IN: AC Power cord.

ON/OFF

6. LED: Solid red when not connected.

To turn on the subwoofer for wireless pairing,

Solid blue when connected.

To turn off the subwoofer.

#### Warning -

8

Inder no circumstances should you try to repair the system yourself, as this will invalidate the warranty Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy the problem by following hints mentioned in below table.

Problem	Solution
1. No power.	Check if the AC power cord is properly inserted into the AC ma
2. No sound or distorted sound.	Adjust the volume / select the correct source to choose the equation that you want to hear through the system.
3. The remote control does not function properly.	Reduce the distance between the remote control and the syst the batteries with new ones / Point the remote control directly IR sensor (located on front panel of the subwoofer) / Check th are loaded correctly / Switch off the system for 30 seconds an
4. Low hum or buzz sound.	Place the product as far away as possible from electrical devic causing interference / Check power supply voltage and consul
5. The content of the USB flash drive cannot be read.	The USB flash drive format is not compatible with the system. formatted with a different file system which is not supported by this
5. Slow operation of the USB flash drive / cannot detect USB flash drive.	Big memory size USB flash drive will take longer time to read and play. / Take out USB drive and insert it again properly.
7. BT not working.	Reduce the distance or device is not paired.

总尺寸: 660x173mm 工艺:风琴折 105G铜版纸双面印刷 成品尺寸: 110x86.5mm 料号: 30709L029601-002







nains socket. auipment

stem Replace / towards the hat the batteries nd then restart ices that may be ult electrician

n Drive is s unit (e.g. NTFS)



1.  $\oplus$ /SOURCE: The Speaker system is in stand by mode when power on, with white LED "----". Short press the "O/SOURCE" to select appropriate source. Keeping the "U/SOURCE" key pressed for long will go back to stand by mode. You can toggle through the input modes by pressing the " (少/SOURCE " key, "bt" denotes Bluetooth Mode. "Hd" denotes HDMI ARC Mode.

"OP" denotes Optical Mode, "AU" denotes Audio Mode, "Ud" denotes USB\* mode. 2. ►II: Play/Pause the songs.

3. ◀ /VOL-: Long press for volume decrease/ short press for prev track.

4. ► /VOL+: Long press for volume increase/ short press for next track. 5. 🔫 : USB\* Slot.

#### Remark:

2.

5 • 🗲

In order not to disturb in the dark, the LED display of soundbar is set to be dim after 30 seconds if there is no operation, and display off after another 90 seconds. You can press any button to resume. \* AVAILABLE IF CONNECTED

### Warranty

#### The warranty is not valid in case

<ol> <li>The apparatus is not used accord.</li> <li>Defects are caused due to impropriet of the improvement of the improvemen</li></ol>	oper or reckless use. is other than Philips authorized service centre.
	otible to normal wear and tear are not covered under this warrant
	s applicable, please refer <u>www.philips.com/support.</u>
Model No.	Product Sl. No
nvoice Number	Date of Purchase://
	PIN:
Customer's Name and address:	PIN:
Customer's Name and address:	PIN:
Lustomer's Name and address:	PIN:
Lustomer's Name and address:	PIN: PIN:



### Product specifications\*

Total system power	80W RMS	Soundbar	2 Way
Soundbar power	20W x2 RMS	Speaker size	2.25 inches * 2
Subwoofer power	40W RMS	Impedance	8 Ohm
Separation	≽40db	Frequency range	140Hz - 20KH
SNR	≽55db	Product Dimension (mm) W x H x D	960x 70 x 92
Audio input socket	Audio-2RCA cable	Net Weight	2.25 kg
Power consumption	18.9 W		
		BT version	V5.0
Subwoofer	1 Way	BT range	Up to 10 mete
Speaker size	6.5 inches	USB max capacity	Up to 32GB
Impedance	4 Ohm	playability	MP3 track
Frequency range	45Hz - 150Hz		
Dimension (mm) W x H x D	370 x 260 x 360		
Weight	3.17kg	٦.	

\*Specification subject to change without prior notice. Measured under specific conditions.



Register you product and get support at www.philips.com/welcome

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license is product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hone Kone Holding Limited is the warrantor in relation to this product

