

Always there to help you

Register your product and get support at
www.philips.com/welcome

SPA2335



User manual

PHILIPS

Contents

1	Important	2
	Safety	2
	Notice	2

2	Your multimedia speaker	4
----------	--------------------------------	---

3	Use your multimedia speaker	4
----------	------------------------------------	---

4	Product information	5
----------	----------------------------	---

5	Troubleshooting	5
----------	------------------------	---

1 Important



Note

- The type plate is located on the back of the apparatus.

Safety

Important safety instructions

- Read and follow all these instructions.
- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
- To completely disconnect the power input, the mains plug of the product shall be disconnected from the mains.
- The mains plug of the product should not be obstructed or should be easily accessed during intended use.
- Keep this product away from direct sunlight, naked flames or other heat sources.
- Unplug the product from the power outlet during lightening storms or when unused for long periods of time.
- When you disconnect the power cord, always pull the plug instead of the cable.
- Only use attachments/accessories specified by the manufacturer.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.

Class II equipment symbol:



CLASS II apparatus with double insulation, and no protective earth provided.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

2 Your multimedia speaker


Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

3 Use your multimedia speaker

Note

- When you press **ON/OFF** knob on remote control to switch to standby mode, the unit is still connected to the mains.

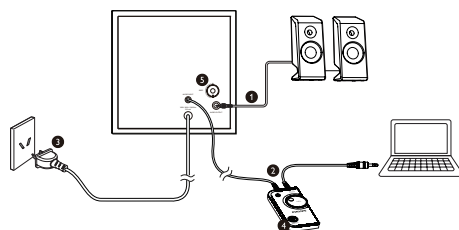

- 1 Connect the speaker plug to **AUDIO OUTPUT** (audio output) socket (①).
- 2 Connect the audio input plug on remote control to the audio output socket of your computer (②).
- 3 Connect the AC plug to AC power socket (③).
- 4 Press **ON/OFF** knob on remote control to switch on the multimedia speaker (④).
↳ Green LED on the remote control is on.
- 5 Adjust the volume by **VOL** (volume) knob on remote control or by the computer application.
- 6 Rotate **BASS** (bass) knob to adjust the bass (⑤).
- 7 After use, press **ON/OFF** knob on remote control to switch off the multimedia speaker and unplug.

4 Product information

AC power input	100-240V~, 50/60Hz, 350mA
Operation power consumption	10W,1/8 rated output power
Standby power consumption	<0.5W
Dimensions - Main unit (W x H x D)	190 x 225 x 200 mm

System Requirements:

PC	Mac
Windows® 98SE, Windows® ME, Windows® 2000, Windows® XP, or Windows® Vista™, Windows 7	Mac OS9/ OS® X, or later

5 Troubleshooting

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the product, check the following points before requesting service. If the problem remains unsolved, register your product and get support at www.philips.com/support.

No sound

- Make sure that the speakers are correctly installed.
- Make sure that the indicator on the remote control lights up.



Specifications are subject to change without notice
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

SPA2355_77_UM_EN_V1.0

