

Register your product and get support at
www.philips.com/welcome

PVD700/37



Thank you for choosing Philips.

Need help fast?

Read your Quick Start Guide and/or User Manual first for quick tips that make using your Philips product more enjoyable.

If you have read your instructions and still need assistance, you may access our online help at

www.philips.com/welcome
or call

1-888-PHILIPS (744-5477)

while with your product.

(and Model / Serial number)



Philips vous remercie de
votre confiance.

Besoin d'une aide rapide?

Le Guide rapide de début et Manuel de l'utilisateur regorgent d'astuces destinées à simplifier l'utilisation de votre produit Philips. Toutefois, si vous ne parvenez pas à résoudre votre problème, vous pouvez accéder à notre aide en ligne à l'adresse

www.philips.com/welcome
ou formez le

1-800-661-6162 (Francophone)

1-888-PHILIPS (744-5477) (English speaking)

Veillez à avoir votre produit à
portée de main.

(et model / serial nombre)



Gracias por escoger Philips

Necesita ayuda inmediata?

Lea primero la Guía rápida del comienzo o el Manual del usuario, en donde encontrará consejos que le ayudarán a disfrutar plenamente de su producto Philips.

Si después de leerlo aún necesita ayuda, consulte nuestro servicio de asistencia en línea en

www.philips.com/welcome
o llame al teléfono

1-888-PHILIPS (744-5477)

y tenga a mano el producto.

(y número de model / serial)



EN User manual

ES Manual del usuario

FR Mode d'emploi

PHILIPS

Canada

English:

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. This Class B digital apparatus complies with Canadian ICES-003.

Français:

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

L'appareil est conforme à la réglementation FCC, section 15, et à la norme 21 CFR 1040.10. Son utilisation est soumise à deux conditions :

1. L'appareil ne doit pas provoquer d'interférences nuisibles, et
2. L'appareil doit supporter les interférences reçues, y compris les interférences empêchant son fonctionnement correct.

Contents

1	Important	6
	Important safety instructions	6
	Notice	9

2	Your portable TV	10
	Introduction	10
	What's in the box	11
	Overview of the main unit	11
	Overview of the remote control	13

3	Get started	15
	Preparation	15
	Charge the battery	16
	Install remote control battery	17
	Connect TV antenna	17

4	Watch TV	18
	Turn on	18
	First time installation	19
	Switch channels	20
	View program information	21
	Manage channels	21
	Play options	22

5	Adjust settings	22
	View closed captions (subtitles)	23

6	Product information	27
----------	----------------------------	----

7	Troubleshooting	28
----------	------------------------	----

Return your Product Registration Card or register online at www.philips.com/welcome today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once, or register online at www.philips.com/welcome to ensure:

***Proof of Purchase**

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

***Product Safety Notification**

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

***Additional Benefits**

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

PHILIPS

Congratulations on your purchase, and welcome to the "family!"

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.


P.S. To get the most from your PHILIPS purchase, be sure to complete and return your Product Registration Card at once, or register online at:


www.philips.com/welcome

Know these

safety symbols



 This "bolt of lightning" indicates un-insulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____
Serial No. _____

PHILIPS

Visit our World Wide Web Site at <http://www.philips.com/welcome>

PHILIPS LIMITED WARRANTY ONE (1) YEAR

WARRANTY COVERAGE:

PHILIPS warranty obligation is limited to the terms set forth below.

WHO IS COVERED:

Philips warrants the product to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

WHAT IS COVERED:

The Philips warranty covers new products if a defect in material or workmanship occurs and a valid claim is received by Philips within the Warranty Period. At its option, Philips will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Philips current inventory, or (3) refund the original purchase price of the product. Philips warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Philips' property. When a refund is given, your product becomes Philips' property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited Warranty applies only to the new products manufactured by or for Philips that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

Philips is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than Philips or Philips Authorized Service Location, (c) to a product or a part that has been modified without the written permission of

Philips, or (d) if any Philips serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

This Limited Warranty does not cover:

- Shipping charges to return defective product to Philips.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of Philips.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product to Philips.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

TO OBTAIN ASSISTANCE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at:
1-888-PHILIPS (1-888-744-5477)

TO OBTAIN ASSISTANCE IN CANADA...

1-800-661-6162 (French Speaking)
1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips, P.O. Box 671539, Marietta, GA. 30006-0026

 
3121 233 48802

1 Important

Important safety instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ For countries with a polarized mains, do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Caution: To prevent electric shock, match the wide blade of the plug to the wide slot, fully insert.



- ⑩ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑪ Only use attachments/accessories specified by the manufacturer.
- ⑫ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑬ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑭ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑮ Apparatus shall not be exposed to dripping or splashing.
- ⑯ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑰ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.
- ⑱ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.
- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.
- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.
- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Notice for the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.



Caution

- Removal of the built-in battery invalidates the warranty and may destroy the product.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

2 Your portable TV

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

 
With the portable TV, you can enjoy digital television with extra program content.


What's in the box

Check and identify the contents of your package:


- Portable TV
- Remote control
- AC power adaptor, AY5808 (Philips)
- Antenna
- User manual
- Quick start guide

Overview of the main unit

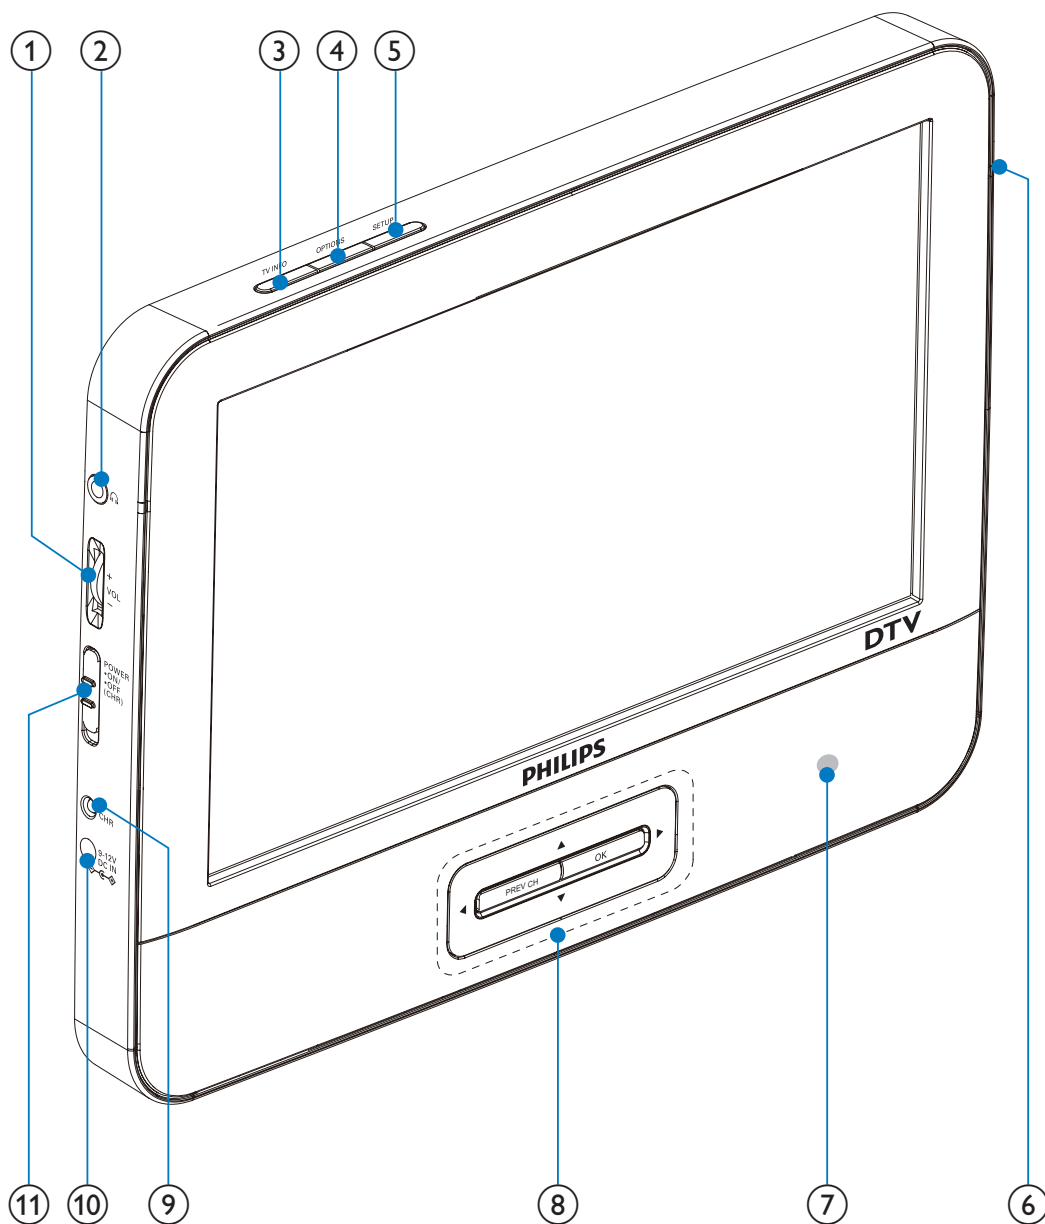


- ① **VOL+/-**
 - Increases or decreases volume.
- ② 
 - Headphone jack.
- ③ **TV INFO**
 - Shows TV information.
- ④ **OPTIONS**
 - Accesses options relating to the current activity or selection.
- ⑤ **SETUP**
 - Accesses or exits the setup menu.
- ⑥ **ANTENNA**
 - Antenna jack.
- ⑦ **IR**
 - Remote control sensor.
- ⑧ **▲, ▼, ◀, ▶**
 - Navigates menus.**▲, ▼**
 - Switches to the next or previous channel.**OK**
 - Confirms an entry or selection.
 - Displays the channel list.**PREV CH**
 - Returns to the previously viewed channel.
- ⑨ **CHR**
 - Charging indicator.
- ⑩ **DC IN**
 - Power supply socket.
- ⑪ **POWERON/OFF (CHR)**
 - Turns on/off the unit.

 Overview of the remote control

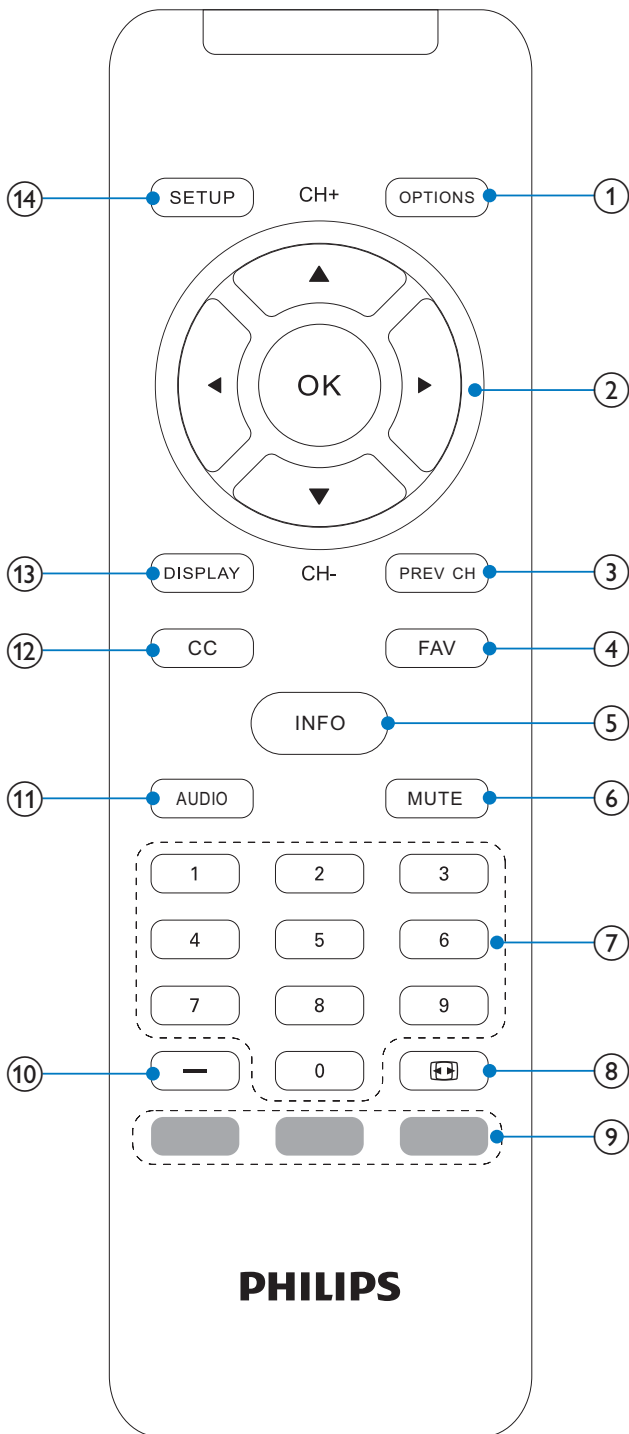

① OPTIONS

- Accesses options relating to the current activity or selection.

- ② ▲ (CH+), ▼ (CH-), ◀, ▶
 - Navigates menus.▲ (CH+), ▼ (CH-)
 - Switches to the next or previous channel.**OK**
 - Confirms an entry or selection.
 - Displays the channel list.
- ③ **PREV CH**
 - Returns to the previously viewed channel.
- ④ **FAV**
 - Accesses or exits the favorite list.
- ⑤ **INFO**
 - Displays program information.
- ⑥ **MUTE**
 - Mutes or restores volume.
- ⑦ **0-9**
 - Numeric keypad.
- ⑧ 
 - Adjusts screen aspect ratio.
- ⑨ **Color keys**
 - Selects tasks or options.
- ⑩ **–**
 - Inputs a separator for digital channel numbers.
- ⑪ **AUDIO**
 - Selects the audio language.
- ⑫ **CC**
 - Turn off or on display captions.
- ⑬ **DISPLAY**
 - Adjusts the display value of the system.
- ⑭ **SETUP**
 - Accesses or exits the setup menu.

3 Get started



Caution

- Use the controls only as stated in this user manual.
- Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

 
Model No. _____

Serial No. _____


Preparation

To place the player on a table for video viewing:

- 1 Pull to open the stand on the back of the player.

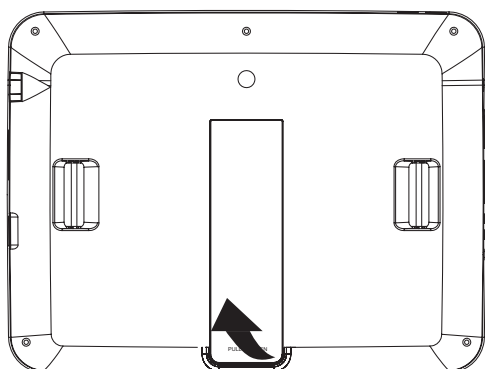

- 2 Prop up the player on the table.

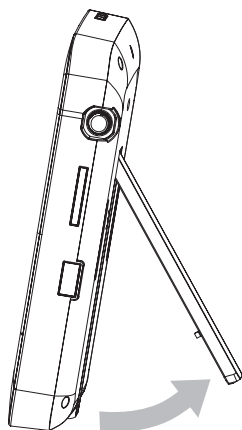 

Charge the battery



Caution

 
- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the player.
- Use only the supplied AC adaptor to charge the battery.



Note

- The type plate is located on the back of the player.
- You can only charge the player when it is in power-off mode.

- 1 Slide the **POWERON/OFF** switch to **OFF** position.
- 2 Connect the supplied AC adaptor to the player and to the AC outlet.

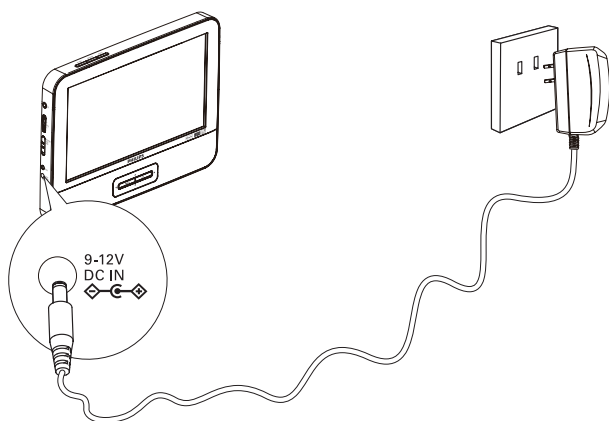

- ↳ The charge indicator turns on. It takes less than 6 hours to fully charge the battery.
- ↳ When the battery is fully charged, the charge indicator turns off.

Install remote control battery



Caution

 
- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Batteries contain chemical substances, they should be disposed of properly.
- Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

For first-time use:

- 1 Remove the protective tab to activate the remote control battery.

To replace the remote control battery:


- 1 Open the battery compartment.
- 2 Insert 1 CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

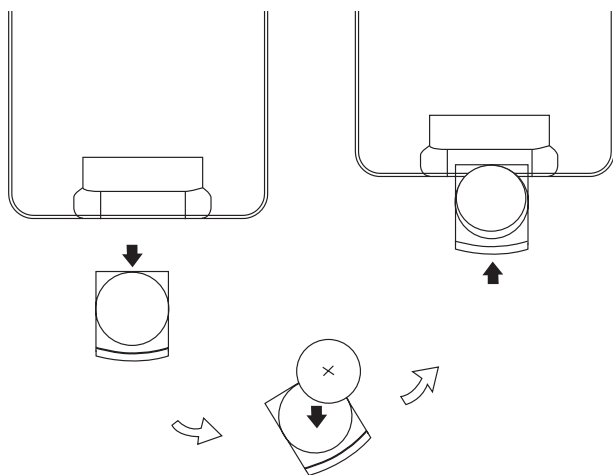

Connect TV antenna

You can connect your player to the supplied antenna or home antenna to receive digital TV program.

 1 Connect the antenna to the **ANTENNA** jack.

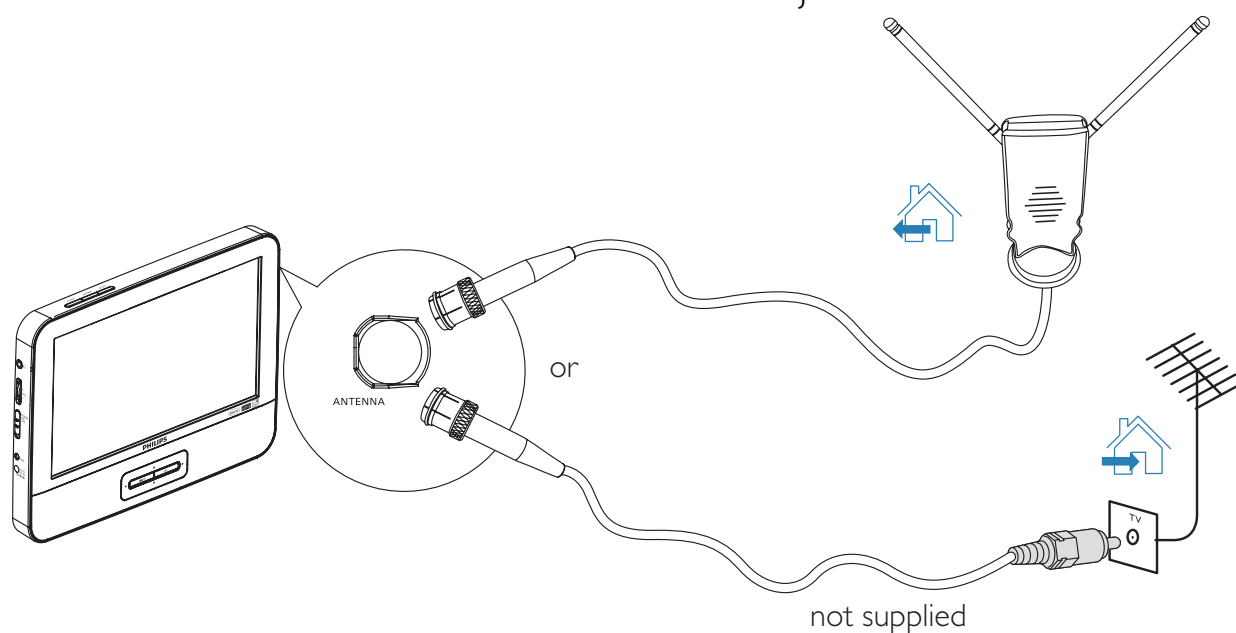

Tip

- Fully extend the antenna for better reception.

4 Watch TV



Note

- Before you start, ensure that you have connected the antenna to the player.
- Make sure you are in an area with sufficient signal coverage. You can check the signal coverage with the TV broadcast authority of your country or visit www.philips.com/support.

Turn on

 
Slide the **POWERON/OFF** switch to the **ON** position.

First time installation


- 1 When the unit is turned on for the first time, follow the on-screen instructions.
 - ↳ You are prompted to select the menu language.





- 2 Press ◀/▶ to select your language, then press ▼ to select [**Go to next step :**] and press **OK** to confirm.
 - ↳ You are prompted to select the time zone and daylight saving time.

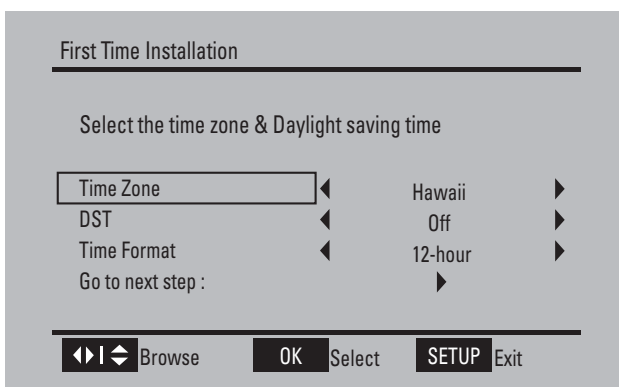

 - 3 Select the time zone, DST and timer format, then press ▼ to select [**Go to next step :**] and press **OK** to confirm.

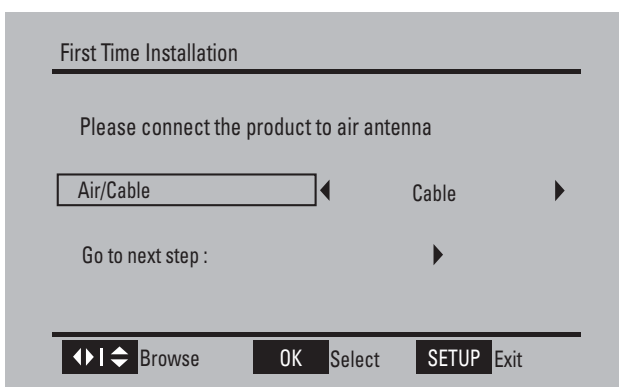

  - 4 Select the antenna type as **[Air]**, then press ▼ to select **[Go to next step :]** and press **OK** to confirm.

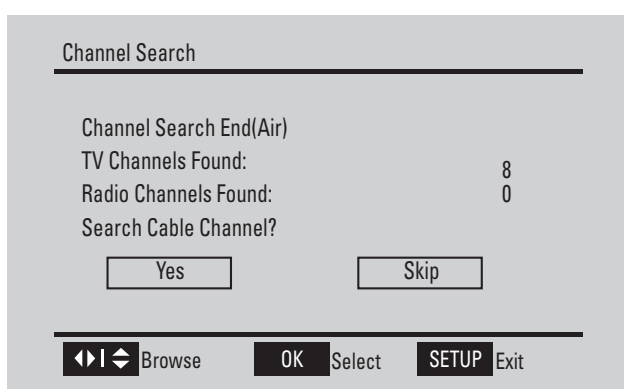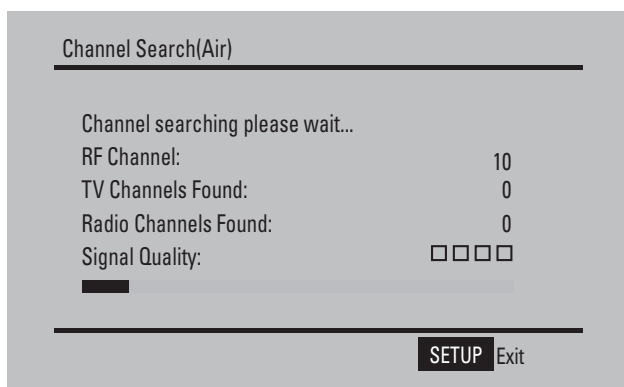

- ↳ Auto channel search (Air) starts and will take a few minutes.
 - ↳ When auto channel search is complete, the total number of TV and radio channels found is displayed.
- 5 To skip the cable channel search, select **[Skip]**, and then press **OK**.
- ↳ The programs of the first found channel play automatically.
- 6 If you connect the portable TV to a cable TV socket, select **[Yes]**, and then press **OK**.
- ↳ Auto channel search (Cable) starts and will take a few minutes.
 - ↳ When auto channel search is complete, the total number of TV and radio channels found is displayed.
 - To view the programs of the first found channel, press **OK**.

 
Switch channels

Press ▲**CH+**/▼**CH-** or **Number keys** on the remote control.

- Press **PREV CH** to return to the previously viewed channel.

View program information

To view brief information of the current program, press **INFO**.

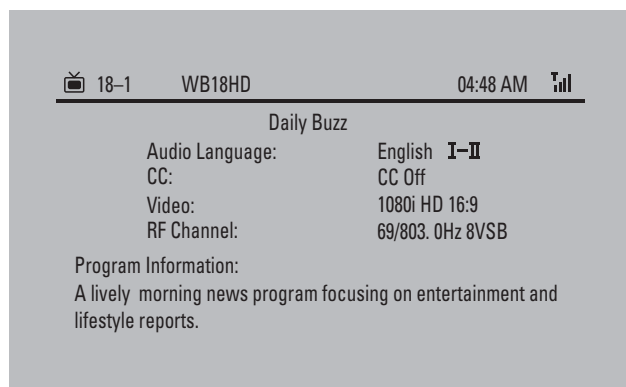

Tip

- **I-II**: Program containing different audio languages. You can press **AUDIO** or **OPTIONS** to access this function.

Manage channels

Change channel name

 
- 1 Press **SETUP**.
↳ The setup menu is displayed.
- 2 Select **[Channel management] > [Channel name]**, and press **OK**.
- 3 Select a channel, and then press **▲, ▼, ◀, ▶** to change the channel name.

Edit channels

- 1 Press **SETUP**.
↳ The setup menu is displayed.
- 2 Select **[Channel management] > [Channel edit]**, and press **OK**.
- 3 Select a channel.
 - To delete the channel, press the red button.
 - To set the channel your favorite one, press the green button.
 - To hide the channel, press the yellow button.

Play options

- 1 Press **OPTIONS** to select some play options.

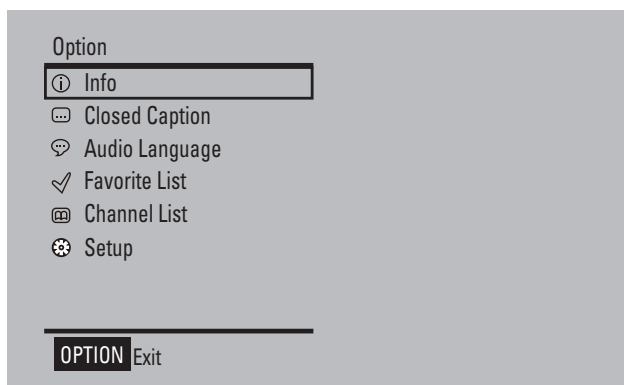

- 2 Follow the on-screen instructions.

5 Adjust settings

To maximize your play experience, use **SETUP** to fine tune your settings.

- 1 Press **SETUP**.
↳ The setup menu is displayed.
- 2 Press **▲▼** to select an option and press **OK** to confirm.

[General]	
[Menu language]	Select menu display language.
[Closed Caption]	Select closed caption services.
[Factory reset]	Restore original settings.
[Time]	
[Time zone]	Select the time zone.
[DST]	Set the Daylight Saving Time. [On]: If it is summer time, select this option. [Off]: If it is not summer time, select this option.
[Time format]	Select the time format.

[Channel installation]	
[Air/Cable]	Select the antenna type.
[Auto scan]	Search TV channels automatically.
[Manual scan]	Search TV channels manually. This option is not available in cable mode.
[Channel management]	
[Channel name]	Change channel name.
[Channel edit]	Edit channels.

3 Press ◀ to go back to previous menu level.

4 Press **SETUP** to exit.

View closed captions (subtitles)

The caption service displays transmitted CC- and T- text. The caption text can be displayed permanently or only when the TV is muted.



Note

- This television provides a display of television closed captioning that conforms with the EIA-608 standard and in accordance with Sections 15.119 of the FCC rules.
- The captions do not always use correct spelling and grammar.
- Not all TV programs and product commercials include closed caption information. Refer to your area TV program listings for the TV channels and times of closed caption shows. The captioned programs are usually noted in the TV listings with service marks such as 'CC'.

Closed captioning

Closed captioning is an assistive technology that allows persons with hearing disabilities to access television programming. Closed captioning displays the audio portion of programming as text superimposed over the video.

Display captions

1 Press **SETUP**.

↳ The setup menu is displayed.

- 2 Select **[General]** > **[Closed Caption]** > **[CC mode]**, and press **OK** to confirm.
- 3 Press **▲** or **▼** to select an option, and press **OK** to confirm:
 - **[CC on]**: The closed caption is enabled.
 - **[CC off]**: The closed caption is disabled.
 - **[CC on Mute]**: The closed caption is enabled in mute mode.
- 4 Press **SETUP** to exit.

Select caption services

- 1 Select a caption service for analog channels:
 - Press **SETUP** and select **[General]** > **[Closed Caption]** > **[Basic selection]**, then press **OK** to confirm.
 - Press **▲** or **▼** to select one of the listed caption services, and press **OK** to confirm.



Note

- Not all caption services are used by a TV channel during the transmission of a closed caption program.

- 2 Press **SETUP** to exit.

Summary of caption services

Service	Description
CC-1 and T-1	are the primary caption and text services. The captioning or text is displayed in the same language as the program's dialogue (up to 4 lines of script on the TV screen, where it does not obstruct relevant parts of the picture).
CC-3 and T-3 ;	serve as the preferred data channels. The captioning or text is often a secondary language.

Service	Description
CC-2, CC-4, T-2 and T-4;	<p>are rarely available and broadcasters use them only in special conditions, such as when [CC-1] and [CC-3] or [T-1] and [T-3] are not available.</p> <ul style="list-style-type: none"> • There are 3 display modes according to programs: <p>Paint-on mode: Displays input characters on the TV screen immediately.</p> <p>Pop-on mode: Once characters are stored in memory, they are displayed all at once.</p> <p>Roll-up mode: Displays the characters continuously by scrolling (max. 4 lines).</p>

Select DTV caption services

- 1 Select a caption service for digital channels:
 - Press **SETUP** and select [**General**] > [**Closed Caption**] > [**Advanced selection**], then press **OK** to confirm.
 - Press **▲** or **▼** to select one of the listed caption services, and press **OK** to confirm.

[Advanced selection]	[Off]	Select if you do not want Digital Caption Service. This is the default.
	[Service1] to [Service6]	Select one of these before changing any other item in [Closed Caption] menu. Choose [Service1] under normal circumstances.

- 2 Press **SETUP** to exit.

Select how digital captions are displayed

You can choose the size, font, color, background and other characteristics of the caption text.

- 1 Press **SETUP** and select [**General**] > [**Closed Caption**] > [**Option**] > [**Mode**], then press **OK** to confirm.

- 2 Press ▲/▼ to select **[Custom]**, then press **OK** to confirm.
 - 3 Press ▲/▼ to select an option, and press **OK** to confirm.
 - **[Font style]**: select the caption font style.
 - **[FG color]**: select the caption font color.
 - **[BG color]**: select the caption background color.
 - **[FG opacity]**: select the caption font opacity.
 - **[BG opacity]**: select the caption background opacity.
 - 4 Press ▲/▼ to select a setting for the option, and press **OK** to confirm.
 - 5 Press **SETUP** to exit.
-

Difficulties viewing closed captions on DTV programming

If you have difficulties viewing closed captions on DTV programming, including HDTV, received from your subscription television provider, you should:

- consult any consumer information and manuals/guides on closed captions for DTV programming provided by your subscription television provider;
- ensure that the captioning function on your DTV is turned on.

If you are still unable to view closed captions on DTV programming, you should contact your subscription television provider for assistance.

6 Product information



Note

- Product information is subject to change without prior notice.

Dimensions	200 x 27 x 155 mm
Weight	0.5 kg
Power supply	Input: 100-240V 50/60 Hz Output: DC 9V 1A
Power consumption	9 W
Operating temperature range	0-45°C
TV system	ATSC
Frequency response	20 Hz-20 KHz \pm 3 dB
Signal/noise ratio	\geq 80 dB
Audio distortion + noise	\leq -80 (1KHz)
Channel separation	\geq 80 dB
Dynamic range	\geq 80 dB

7 Troubleshooting



Warning

- Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using the player, check the following points before requesting service. If the problem remains unsolved, register your player and get support at www.philips.com/welcome.

No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the AC outlet.
- Check if the built-in battery is drained.

No sound

- Adjust the volume.

No response to the remote control

- Ensure that the path between the remote control and the player is clear from obstacles.
- From a close distance, point the remote control directly at the player.
- Replace the remote control batteries.

Distorted picture

- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

The player feels warm

- When the player is in use for a long period of time, its surface will be heated. This is normal.

No/weak signal displayed on the screen or no channel found

- TV signal is too weak or out of TV signal coverage.
- Make sure you are in an area with sufficient signal coverage.

 


Tip

- For DTV signal coverage, please visit <http://www.fcc.gov/mb/engineering/maps/>.
- Connect to your home roof antenna or attach the supplied antenna with the magnetic base to the ferrous surface for better reception.
- Receiving TV in a driving car may cause signal problems.

Philips Consumer Lifestyle
A Division of Philips Electronics North America Corporation
P.O. BOX 671539, Marietta, GA. 30006-0026

Meet Philips at the Internet
<http://www.philips.com/welcome>

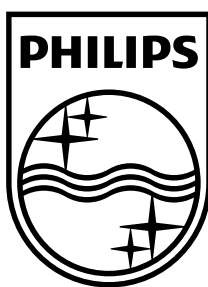

© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

Printed in China

PVD700_37_UM_V1.0

