

 
60±1



## User Manual

### 1 What's in the box

#### 1. BT2003

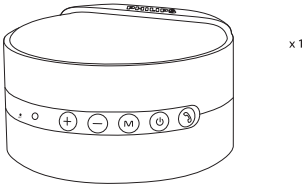

x1



#### 2. Type-c charging cable



  x1

### 2 Overview

#### 1. Top & Back panel

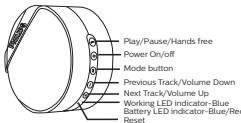

#### 2. Top panel operation

##### A. Switch operation

	1	2	3.	4.	5.
BT mode	Long Press: Power ON/OFF Short Press: Play or pause song	Change source Disconnect BT and change mode	Reject incoming call Accept/disconnect incoming call	Increase Volume When it comes to maximum volume, it will make a beep sound Next Song/track	Decrease volume Previous Song/track
AUX mode	Long Press: Power ON/OFF Short Press: Play or pause song	Disconnect AUX and change mode		Increase Volume When it comes to maximum volume, it will make a beep sound Next Song/track	Decrease volume Previous Song/track
TF mode	Long Press: Power ON/OFF Short Press: Play or pause song	Disconnect TF and change mode		Increase Volume When it comes to maximum volume, it will make a beep sound Next Song/track	Decrease volume Previous Song/track

##### B. LED

1. Red LED: Charging mode
2. Blue LED: Play mode

##### C. Back panel

1. Micro USB: Socket for charging
2. AUX: 3.5mm AUX socket
3. Micro SD/TF Card

\* In case of laptop BT connection, this will work with windows media player.

 
#### 3.Over view of the speaker

1. Power on/off and Source selection.
  - Turn the speaker on or off with long press.
  - Select source by short pressing Bluetooth/ micro SD card (TF card)/ FM/ Line in (FM/ line in is available only when stereo cable is connected.)
2. Play/ Pause
  - Answer or reject an incoming call
  - End the current call
  - Disconnect Bluetooth connection
3. -
  - Volume decrease - short press
  - Previous song/ channel - long press
4. +
  - Volume increase - short press
  - Next song/ channel - long press
5. DC in- Recharging the built in battery.
6. Line in- Connect an external audio device and for use in FM as antenna.
7. Micro SD card (TF card).

#### Get started

1. Place the speaker on a flat surface.
2. Charge the built in battery
3. Notes for charging
  - Before use, fully charge the built in battery.
  - The micro USB socket is for charging only.
  - Rechargeable battery has a limited number of charge cycles.
4. Battery life and number of charge cycle vary by use & settings.
5. Connect the USB cable between DC in socket on the speaker and USB Socket of a computer.

## Fold Method for User Manual

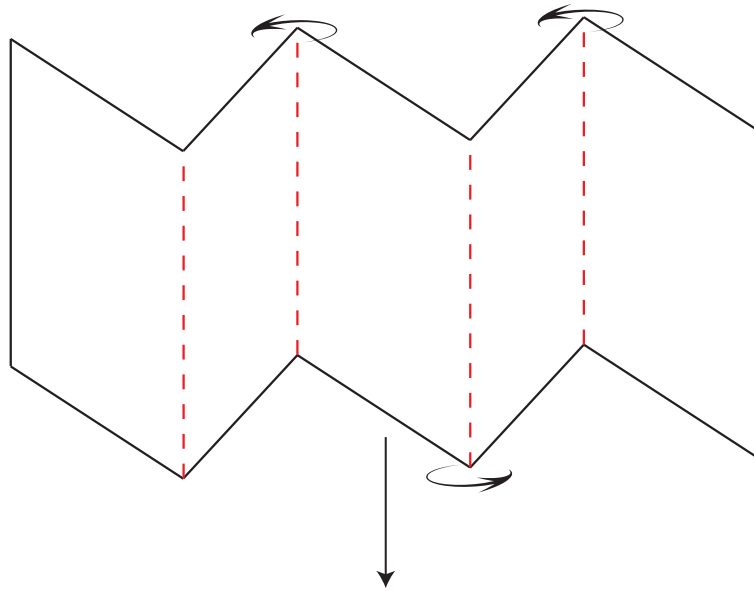

### Warning

- Warnings
- Only use attachments or accessories specified by manufacturer.
  - The battery shall not be exposed to excessive heat such as sunshine, fire etc.

Care and safety information  
Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the speaker (e.g.liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up.
- Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.

Care of the cabinet

- Use a soft cloth slightly moistened to clean the cabinet.
- Do not use a solution containing alcohol, spirits, ammonia or abrasives to clean the cabinets.

### Accessories

Item	User manual	USB cable
Quantity	1	1

### Warranty

This Philips Bluetooth portable speaker is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase. In case of a defect during the warranty period, TPV Technology India Pvt. Ltd, an affiliate of Top Victory Investments Ltd, undertake to replace the apparatus free of charge at any of its authorized service centers in India.

#### The warranty is not valid in case :

1. Proof of purchase is not accompanied with this warranty card.
2. The warranty card is not completed immediately after purchase.
3. The apparatus is not used according to this user manual.
4. Defects are caused due to improper or reckless use.
5. Any repairs are done by unauthorized personnel.
6. The serial number is tampered with.
7. Defects due to causes beyond control like lightning, abnormal voltage, or while in transit to the purchaser's residence.

All Consumables and parts susceptible to normal wear and tear are not covered under this warranty.  
For detailed Terms and Conditions applicable, please refer [www.philips.com/support](http://www.philips.com/support).

Model No. \_\_\_\_\_ Product Sl. No. \_\_\_\_\_

Invoice Number \_\_\_\_\_ Date of Purchase: \_\_\_\_/\_\_\_\_/\_\_\_\_

Customer's Name and address: \_\_\_\_\_

PIN:

Dealer Name & Stamp: \_\_\_\_\_

Always there to help you!  
Visit us at [www.support.philips.com](http://www.support.philips.com)  
Help line: 800 425 6396  
Email: [india.callcenter@tpv-tech.com](mailto:india.callcenter@tpv-tech.com)  
(10 a.m. to 9 p.m. Monday to Saturday & 10 a.m. on Sunday)

### Product specifications\*

Model No.	BT2003
Signal to noise radio	>80DB
Play time	4H
Charging time	2-3H
Bluetooth distance	>10M
Bluetooth	Bluetooth 5.0
LED indicator	Blue, Red
Rated Power	3W
Music frequency	150HZ -18KHZ
Free talk time	5H
Size and shape	L72XW72XH41mm
Battery capacity	400mAh

\*Specification subject to change without prior notice.  
Measured under specific conditions.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Top Victory Investments, Ltd., and one of its affiliates, is the warrantor in relation to this product.



### Product specifications\*

#### Bluetooth pairing

- To turn on the speaker long press ""- speaker enters in Bluetooth mode blue LED will quickly flash.
- Turn on Bluetooth device like mobile, computer and search the Bluetooth name "Philips BT2003"
- Press pair in the device to connect with the speaker, it will give out a "Beep" sound after pairing successfully.
- After pairing successfully, the device will connect with speaker automatically next time.
- Short press "/" to disconnect current device, speaker enters in pairing mode.

#### Line in

Connect a stereo cable (audio input cable) on both ends to

- Line in socket of speaker
  - The headphone socket on the external device
- Speaker will automatically go into line in mode  
Without Audio cable, speaker cannot go into line in mode.

#### Micro SD card ( TF card )

When inserting micro SD card (TF card) it will automatically switch to micro SD mode.

#### Handfree phone call function

when there is an incoming call, the speaker will also come out with 'Beep' sound, press button () to answer the phone call, to decrease or increase volume by pressing "VOL-"/"VOL+", press () to disconnect.

#### Low power

When it comes to low power, you can find in your phone with the bluetooth mode. If you are not using the speaker for long time, ensure that it is being fully charged once every month in order to protect the battery.



材质：80G书纸 风琴折