


Quick start guide

1 Charge your battery

This portable DVD player is designed with a built-in lithium battery to supply power to the player when you are on travel.

- Slide the **ON**  **OFF** switch to the **OFF** position (charging of the DVD player only possible in the power-off mode).





- Connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) to start charging.
→ The **POWER** indicator turns red.
→ When the battery is fully charged, the indicator turns off.
- Disconnect the power adaptor cord (or the car adaptor) when the **POWER** indicator turns off.

Note:

– You can also connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) directly wherever possible.

2 Enjoy (Disc operation)

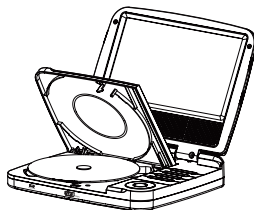

- Open the lid of the player.
- Slide the **ON**  **OFF** switch to **ON** to switch on the DVD player.
→ The **POWER** indicator turns on.
- Slide **OPEN** on the player.
- Remove the protective card (if any) and load a disc with the label side facing up.
- Close the disc door.
→ Playback will start automatically. If not, press **II/OK**.
- To stop playback, press **STOP**.

Note:

During play, you can:

- Press **OPTION** to select some play options: audio, subtitle, repeat, and time display.
- Press **⏻** directly to adjust brightness of screen backlight to match lighting conditions.

2 Enjoy (AV OUT)

Connecting additional equipment (TV for example)

- Connect the AV OUT socket on the set to the video and audio sockets on a TV as shown directly.
- Switch on the TV and set to the correct video-in channel.
→ You can consult the owner's manual of your TV. (If your TV does not have Audio and Video inputs, you will need to purchase a RF modulator. Please consult your dealer.)

