

Quick Start Guide








Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

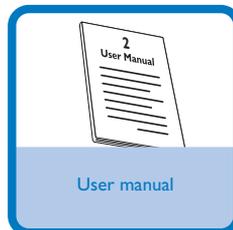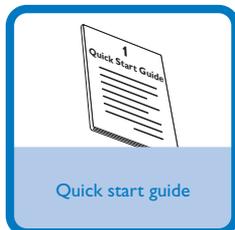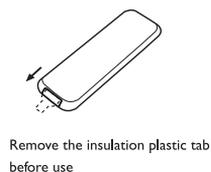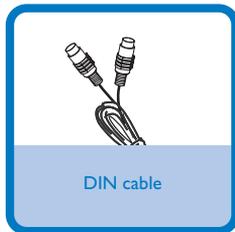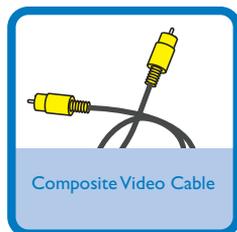

Step A Connect


Important!

– This set can only be operated after the supplied DIN cable has been connected.

Tips


– For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.

- 1 Connect the speaker wires of the right speaker and subwoofer to the left speaker.
- 2 Connect the supplied FM wire antenna.
- 3 Connect the left speaker and the DVD player by using the supplied DIN cable.
- 4 Connect the DVD player to your TV using the supplied composite video cable.
- 5 Connect the VCR or cable/satellite box to the TV system. Connect AUX IN 1 jacks to the AUDIO OUT jacks on the VCR or cable/satellite box.
- 6 Connect the AC power cord to the wall socket.

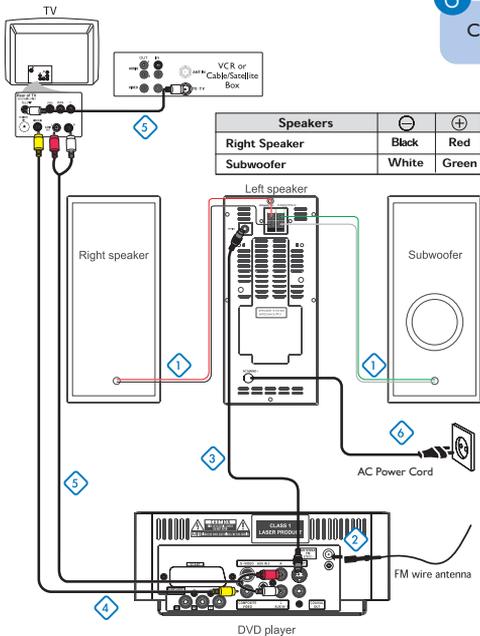

Speakers	⊖	⊕
Right Speaker	Black	Red
Subwoofer	White	Green

- A To listen to TV channels through this system, use the audio cable (white/red, not supplied) to connect AUX IN 1 (L/R) jacks to the corresponding AUDIO OUT jacks on the TV set.
- B To listen to TV channels through this system, use the audio cable (white/red, not supplied) to connect AUX IN 1 (L/R) jacks to the HEADPHONE jack on the TV set.
 - Before starting operation, press AUX1/2/TV on the remote control to select "AUX 1" to activate the input source.
 - See the User Manual for other TV connection options.

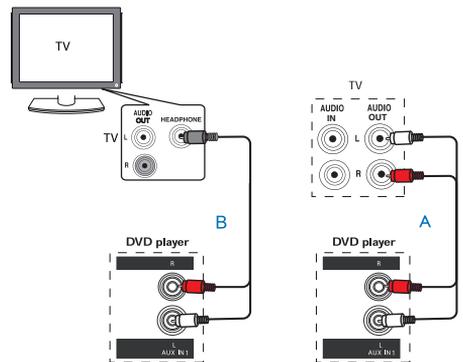

Step B Setup


Setting up the TV

- 1 Press **SOURCE** on the set (or **DISC** on the remote) to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

Step B Setup

Setting the clock

- 1 In standby or any source mode, press and hold **CLOCK** on the remote control. The clock digits will be lighted on the display.
- 2 Press **◀/▶** on the set repeatedly to set the hours.
- 3 Press **◀◀/▶▶** on the set repeatedly to set the minutes.
- 4 Press **CLOCK** again to store the setting.

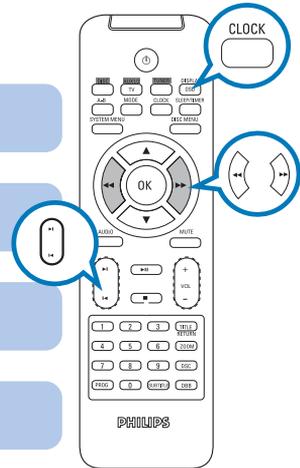

Setting DVD menu options

IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the video cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode then turn on to interlaced mode.
- 2) Select "OFF" in PROGRESSIVE menu of the system setup menu to turn off progressive scan, then press SYSTEM MENU on the remote to exit the system menu.

Or To turn off progressive scan, you may also first press OPEN/CLOSE open the disc door, then press **◀◀** on the remote control, and press **AUDIO** on the remote.

The image shows three screenshots of the Philips TV menu system. The top left screenshot is the 'General Setup Page' with options: Display Dim, OSD Lang, Screen Saver, and DivX(R)VD Code. The top right screenshot is the 'Video Setup Page' with options: TV Type, TV Display, Component, and Progressive. The bottom screenshot is the 'Preference Page' with options: Audio, Subtitle, Disc Menu, Parental, Password, DivX Subtitle, and Default.

Tip
See chapters "Getting Started" and "DVD menu operations" in the User Manual for detailed descriptions.

