






Call from the phonebook

1. Press  in idle mode.
2. Scroll  to a phonebook entry.
3. Press  or  key.
The call is initiated.

Troubleshooting

For more information, please refer to the User Manual that came with your phone.

Problem

- There's no dialling tone!
- Caller cannot hear me clearly!
- **SEARCHING...** is displayed on handset and  icon is blinking!
- Caller number is not displayed!

Solution

- Check the connections
- Charge the batteries
- Use the line cable provided
- Move closer to the base station
- Move the base station at least one metre away from any electrical appliances
- Move closer to the base station
- Reset your unit and restart the handset registration
- Check your subscription with your network operator

Welcome to Philips!

Register your product and get support at www.philips.com/welcome

Need help?

User Manual

Refer to the User Manual that came with your new phone.

Online help

www.philips.com/support

Register your product and get support at www.philips.com/welcome

CD6550



Quick start guide

- 1** Connect
- 2** Install
- 3** Enjoy

© 2008 Koninklijke Philips Electronics N.V.
All rights reserved.
Reproduction in whole or in part is prohibited without the written consent of the copyright owner.

Document number: 3111 285 50381 (EN)


 **CE 0168**
Printed in China

PHILIPS

What's in the box



 Handset



Charger



Battery door

2 AAA rechargeable
NiMH batteries

Power supply



User manual



Guarantee

 


Quick Start Guide

1 Connect

Connect the charger

- Place the charger in a central location near the electricity socket.

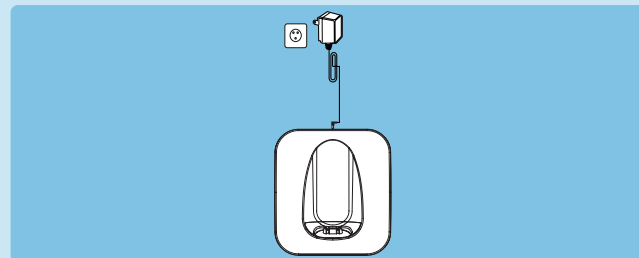


- Connect the power cable to their corresponding connectors at the bottom of the charger as shown.


2 Install

Insert rechargeable batteries and charge

 A Insert batteries

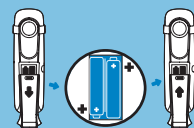

B Charge handset for 24 hours

 

Registering your additional handset

Additional handsets must be registered to the base station before you can use them.

- On the base station, press and hold **[*]** for approximately 5 seconds.
- Within 10 seconds, press **[menu]** key on the handset. Scroll **[↑]** to **ADVANC. SETTINGS** and press **[SELECT]**, scroll **[↑]** to **REGISTRATION** and press **[SELECT]**.
- Enter the master PIN (default is 0000) when prompted and press **[OK]** to confirm.
- WAITING__** is displayed on the screen.

3 Enjoy

Make a call

Dial the number (maximum 24 digits) and press **[CALL]** or **[*]** key.

OR

Press **[CALL]** or **[*]** key to take the line and dial the number (maximum 24 digits).

Answer a call

When the phone rings, press **[CALL]** or **[*]** key.

End a call

To end a conversation, press **[END]** key.

Adjust earpiece volume

During a call, press **[VOLUME]** to select from **VOLUME 1**, **VOLUME 2** or **VOLUME 3**.

Set the ring melody

- Press **[menu]** in idle mode, scroll **[↑]** to **PERSONAL SETTING** and press **[SELECT]**, scroll **[↑]** to **HANDSET TONES** and press **[SELECT]**, scroll **[↑]** to **RING TONES** and press **[SELECT]**.
- Scroll **[↑]** to your desired melody to play the melody.
- Press **[SELECT]** to set the ring melody.

A validation tone is emitted and the screen returns to previous menu.

Store a contact in the phonebook

- Press **[menu]** key in idle mode, scroll **[↑]** to **PHONEBOOK** and press **[SELECT]**, press **[SELECT]** to enter **NEW ENTRY**.
 - ENTER NAME** is displayed on the screen.
 - Enter the name of the contact (maximum 14 characters) and press **[OK]**.
 - Enter the phone number (maximum 24 digits) and press **[OK]**.
- A validation tone is emitted.

Access the phonebook

- Press **[CALL]** in idle mode and scroll **[↑]** to browse the phonebook.
- To view the details, press **[SELECT]**.