



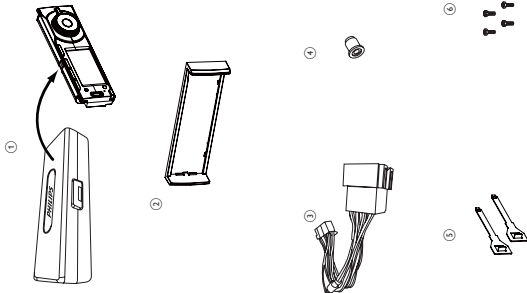


1

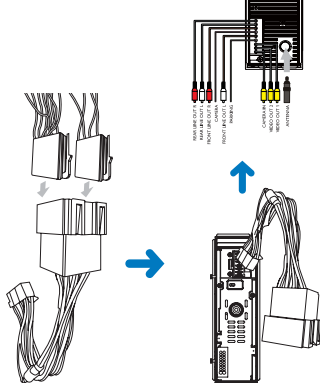



2a



 
2b




3a



 
 


3b

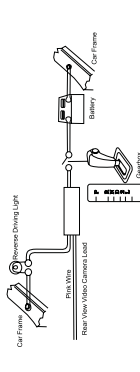

4

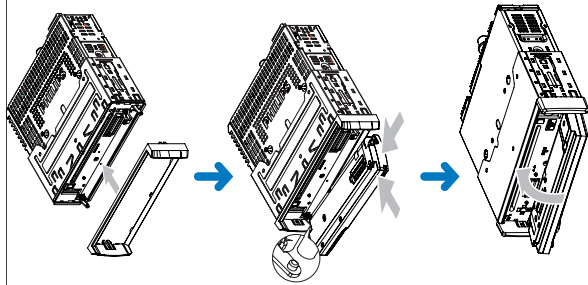

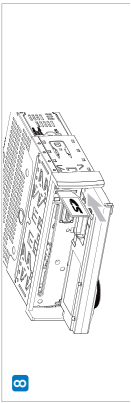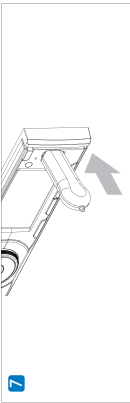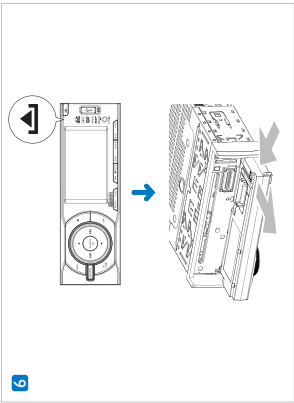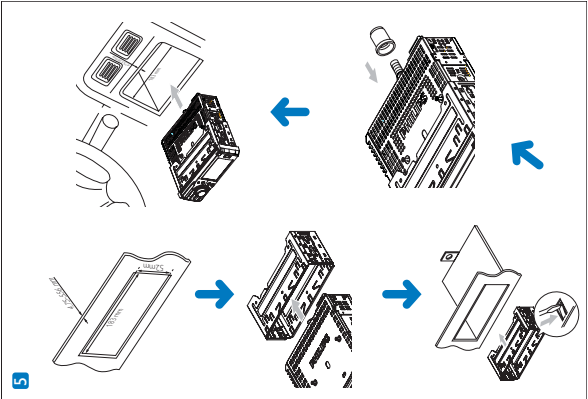

English

Overview of parts 1

These are the supplied parts needed to connect and install this unit.

- Carry case with front panel stored inside
- Trim plate
- Standard connector
- Rubber cushion
- Removal keys x 2 pcs
- Screw x 5 pcs

Connect wires: ISO connector's 2a

- Put out the ISO connectors from the car and the car stereo. Connect the bigger end of the supplied standard connector.
- Connect the other end of supplied standard connector to the unit.
- Do the other connections, if applicable.

Connect wires: without ISO connector's 2b

- Cut off the bigger end of the supplied standard connector.
- Check the car's wiring carefully then connect them to the standard connector.

Connector	Connect to
1 Black wire	A metal surface of the car First connect the black ground (earth) lead then connect the yellow and red power supply leads.
2 Yellow wire	The +12V car battery which is live at all times.
3 Orange/white wire	Illumination switch

Connector	Connect to
4 Red wire	The +12V power terminal which is live in the accessory position switch If there is no accessory position, connect to the +12V car battery terminal that is always live. Be sure to connect the live ground (earth) to a metal surface of the car first.
5 Green and black wires	Left speaker (Rear)
6 White and white/black wires	Left speaker (Front)
7 Gray and gray/black wires	Right speaker (Front)
8 Purple and purple/black wires	Right speaker (Rear)

- Connect the supplied standard connector to the unit.
- Do the other connections, if applicable.

Connect parking brake cable 3a

Connect reverse driving cable 3b

Attach the front panel 4

- Attach the trim plate.
- Insert the left side of the panel in the chassis until it is correctly engaged.
- Press the right side of the panel until the mechanism folds it into place.
- Close the front panel.

Maintain in the dashboard 5

Note

- For proper operation of the DVD player, the chassis must be mounted within 20 degree horizontal. Ensure that the unit is mounted within this limitation.
- Check wire connection before you mount the unit into a car.
- If power radio stations are lost when the ignition key is turned OFF and then back ON, reconnect the red leads crosswise to the yellow ones.

- If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
 - If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lose its memory.
 - If the car battery is not disconnected, to avoid shock ensure that bare wires do not touch each other.
- Ensure that car dashboard opening is within these measurements:
- Remove the two transport screws on the top of the unit.
- Remove the mounting sleeve with the removal keys.
- Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.
 - If the unit is not fixed by sleeve but by the supplied screws, skip this step.
- Place the rubber cushion over the end of the bolt.
- Slide the unit into the dashboard until a click sound is heard.
- Reconnect the negative terminal of the car battery.

Detach the front panel 6

The front panel can be detached and taken with you to other theft.

Note

- Before installing the unit, detach the front panel from the chassis.

- Press **▲** to release the panel.
- Open the panel, then push the right side panel toward the left side to disengage it from the chassis.
- Take off the panel and store it in the supplied carry case to protect it from dirt or damage.

Turn on

- Press the **0** knob to turn on the unit.
 - The unit plays the last listened program: DVD, Tuner, USB or SD/MMHC Card (if there is USB device or SD/MMHC card connected).
- To turn off the unit, press the **0** knob for more than 2 seconds.
 - When the unit is idle for over 5 minutes, it goes to standby mode and displays screen saver.

Set clock

- Press **MENU**.
- Press the navigation button to select **[SET-TIME]**, then press **SEL** on the remote control.
- Select **[SYSTEM]**, then press **▶▶**.
- Select **[TIME MODE]**, then press **▶▶**.
 - The time mode options are displayed:
 - [12 hour mode]
 - [24 hour mode]
- Select a mode, then press **SEL**.
- Press **◀◀** to return to previous menu and select **[TIME ADJUST]**, then press **▶▶**.
- Press **▲** or **▼** to enter clock, then press **SEL**.

Tune to a radio station

- Press **SOURCE** to select Tuner.
- Press **▲** or **▼** to select band.
 - [FM] or [AM] is displayed.
- Press **◀◀** or **▶▶** to tune to a radio station manually.
 - To search for radio station automatically, press **◀◀** or **▶▶** for 3 seconds.

Play discs

- Press **▲** to open the front panel.
- Insert the SD or MP3C card into the card slot.
 - The unit starts playing from the SD/MP3C card automatically.
- To remove the disc, press the **▲** button.
 - When the disc is ejected, the unit switches to TUNER mode automatically.
- Close the front panel.
 - After a few seconds, the screen turns on.
 - For video discs, if a menu appears, press **▲** or **▼** to select an item, then press **0** to start play.
 - For discs that contain MP3s, WMA, or JPEGs, press **▲** or **▼** to select a folder/track/picture, then press **0** to start play.

Insert USB device 7

- Slide down the USB socket cover.
- Insert the USB device into the USB socket.
 - The unit starts playing from the USB device automatically.

Insert SD/MMC card 8

- Press **▲** to open the front panel.
- Insert the SD or MP3C card into the card slot.
 - The unit starts playing from the SD/MP3C card automatically.