

CD Soundmachine

Multisource ripping USB Tape



Philips

# Great portable sound

With the advanced Philips CD soundmachine, you can now convert your favorite CDs, radio program, tape music to MP3 music with the single touch of a button, no computer is required.

## Continuous enjoyment of your favorite music

- Plays MP3/WM-CD, CD, CD-R & CD-RW
- Enjoy MP3/WMA music directly from your portable USB drives
- Rip music from CDs, radio and cassette onto a USB device

### Powerful sound you can hear and feel

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Dynamic Bass Boost for deep and dramatic sound

#### Easy to use

- · One-touch buttons for easy recording
- Handy remote control



# Specifications

#### Connectivity

- USB: USB host
- Audio/Video output: Headphone (3.5mm)

#### **Audio playback**

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: fast forward/backward, next/ previous track search, repeat/shuffle/program
- Cassette deck technology: mechanical
- Number of decks: 1
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

#### **Tuner/Reception/Transmission**

- Tuner bands: FM
- Antenna: FM antenna

#### Sound

#### · Sound system: stereo

- Volume control: rotary (analogue)
- Output power: 2 x 1 W / 60 W PMPO

#### Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

#### Convenience

- Loader type: top
- Display type: LCD display







#### **Accessories**

- Cables/Connection: power cord
- Remote control
- Others: User Manual • Warranty: Warranty Certificate

#### Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Number of batteries: 6
- Power type: AC Input

#### **Dimensions**

- Gross weight: 4.15 kg
- Packaging depth: 298 mm
- Packaging height: 210 mm
- Packaging width: 452 mmWeight: 3.14 kg
- Main unit depth: 238 mm
- Main unit height: 162 mm
- Main unit width: 400 mm

#### Audio recording

- Recording media: tape, USB device
- · Tape recording enhancement: CD synchro start recording
- USB recording modes: instant record,
- programmed tracks, single disc, single track
- USB recording sources: CD, tape, tuner

h



# Highlights

XZ1856/98

## USB Direct for MP3/WMA music

Simply plug in your device to the USB port on your Philips Hi-Fi system. Your digital music will be played directly from the device. Now you can share your favorite moments with family and friends.

#### **USB Rip All**

Rip music from LP, CDs, FM radio programs and line-in music from your system directly to your USB device. Store your favorite LP and convert its content to MP3 format - without using a PC.

