

# Quick Start Guide










**Step A** Connect

**Step B** Setup

**Step C** Enjoy

## What's in the Box?

You should find these items upon opening the box.

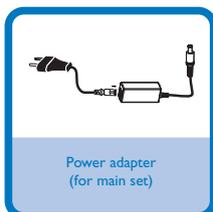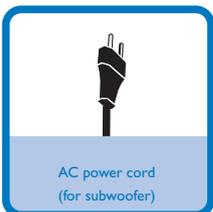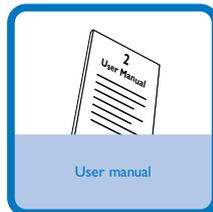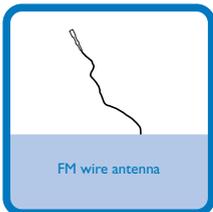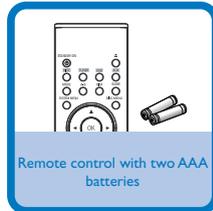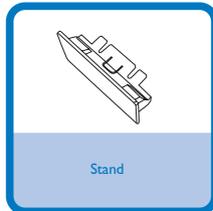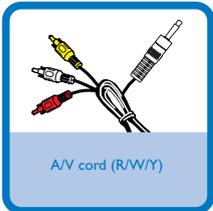


**PHILIPS**

## Step A Connect

### Tips

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.
- See “Connect - Place the unit” in the user manual for details about set and speaker assembly.
- See the attached Wall Mounting Instruction if you want to mount the set and speakers onto wall.
- In case of wireless connection failure between the main set and subwoofer, see the User Manual for manual pairing (“Get started - Turn on”).


- 1 Connect the speaker cables.
- 2 Connect the FM antenna.
- 3 Connect the A/V cord to a TV.
- 4 Connect the power cords of the system and TV.
- 5 Assemble the main set.
- 6 Power on both the main set and subwoofer.  
→ Wireless connection will set up automatically.

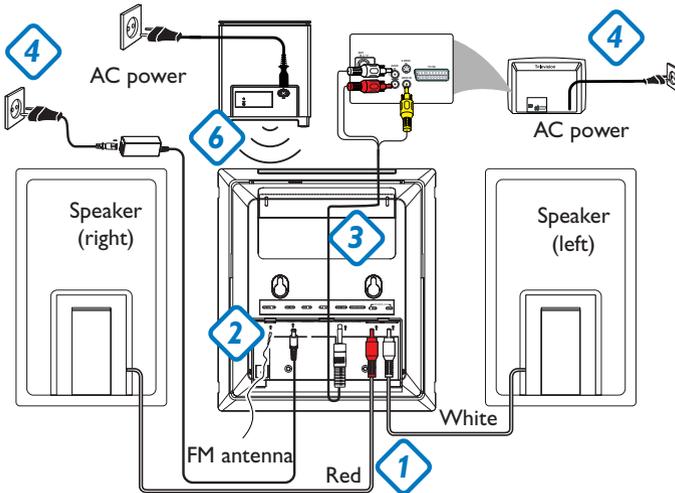

## Step B Setup

### Setting up the TV

- 1 Press **SOURCE** (DISC on the remote control) to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

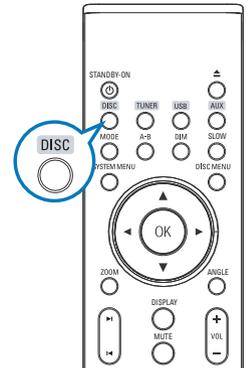

## Setting the clock

### IMPORTANT!

– To set clock in the Eco Power mode, press and hold **STANDBY-ON/ECO POWER**  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **CLOCK** on the remote control.

2

When the hour digits flash, press **VOLUME-/+ (VOL+/-)** on the remote control) to set the hours.

3

Press **CLOCK** again and the minute digits flash. Then press **VOLUME-/+ (VOL+/-)** on the remote) to set the minutes.

4

Press **CLOCK** again to confirm the time setting.


## Setting DVD menu options

### IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

1) Turn off your TV progressive scan mode or turn on to interlaced mode.

2) Press **SYSTEM MENU** on the remote to exit the system menu and then **DISC** and "1" to exit progressive scan.

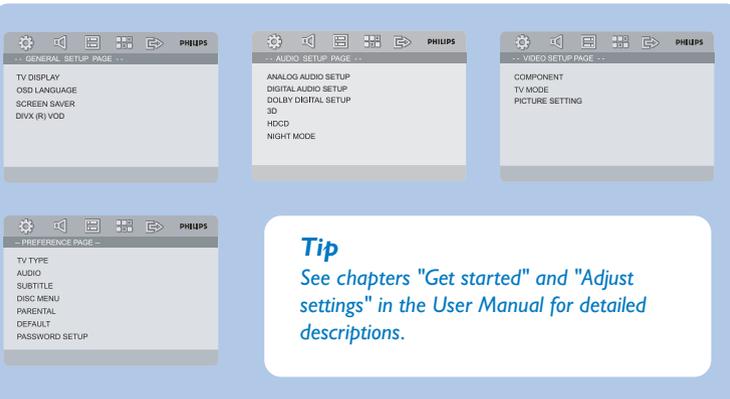

The image shows four screenshots of the TV's system menu. The first three are: 1. GENERAL SETUP PAGE with options: TV DISPLAY, OSD LANGUAGE, SCREEN SAVER, DIVX (R) VOD. 2. AUDIO SETUP PAGE with options: ANALOG AUDIO SETUP, DIGITAL AUDIO SETUP, DOLBY DIGITAL SETUP, 3D, HDCD, NIGHT MODE. 3. VIDEO SETUP PAGE with options: COMPONENT, TV MODE, PICTURE SETTING. The fourth screenshot is the PREFERENCE PAGE with options: TV TYPE, AUDIO, SUBTITLE, DISC MENU, PARENTAL, DEFAULT, PASSWORD SETUP.

**Tip**  
See chapters "Get started" and "Adjust settings" in the User Manual for detailed descriptions.

