


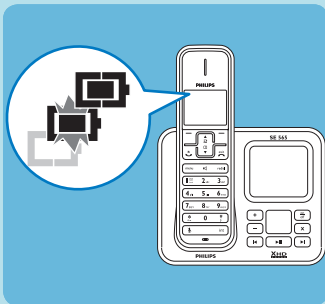


Check the battery level




When the handset is off the base station/charger, the icon indicates the battery level:


 Full (steady on)

 Medium (flashing)

 Low (empty)

When you see the empty battery icon and hear an alert tone from the handset, the battery level is low and needs recharging.

 When the handset is on the base station/charger, the battery icon keeps flashing until charging completes.

 When the charging completes, the battery icon keeps steady on.