

PHILIPS

Soundbar

HTL1020



User manual

General information

Safety instructions

Please read carefully the safety mark on the back side



This mark is intended to alert the user from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This mark is intended to alert the user for important operating and servicing instruction.

Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket, when not in use.
- Do not open the cover or back panel to avoid electrical shock or any other accidents. No user-serviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer.
- The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.

Care and safety information

Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the Subwoofer, and satellite (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.

Care of the cabinet

- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

 
Accessories

Item	Audio-2RCA cable	User manual	Wall mount	Adaptor
Quantity	1	1	2	1

Remark: please unscrew the plastic wall mount and use metal one, if the soundbar need to be hung on the wall.

Connections


Soundbar back panel

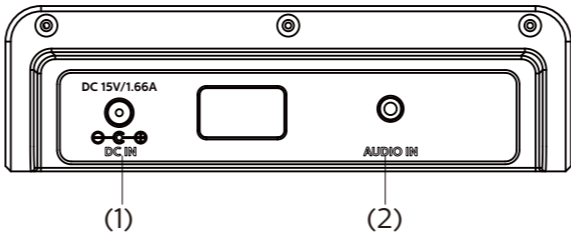

- DC 15V/1.66A Input.
- Input Connect to sound sources such as computer, CD player, MP3, etc.

Top panel operation

 - ⏮/SOURCE
- ⏮
- ⏮/VOL-
- ⏮/VOL+
- ⏮

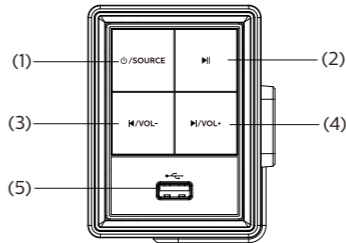

- ⏮/SOURCE: The Speaker system is in stand by mode when power on, with white LED “----”. Short press the “⏮/SOURCE” to select appropriate source. Keeping the “⏮/SOURCE” key pressed for long will go back to stand by mode. You can toggle through the input modes by pressing the “⏮/SOURCE” key. “bt” denotes Bluetooth Mode, “AU” denotes Audio Mode, “Ud” denotes USB* mode.
- ⏮: Play/Pause the songs.
- ⏮/VOL-: Long press for volume decrease/ short press for prev track.
- ⏮/VOL+: Long press for volume increase/ short press for next track.
- ⏮: USB* Slot.

Remark:

In order not to disturb in the dark, the LED display of soundbar is set to be dim after 30 seconds if there is no operation, and display off after another 90 seconds. You can press any button to resume.

* AVAILABLE IF CONNECTED

 
Playing the speakers

System positioning :

The soundbar is recommended to be put on the flat desktop to get a better acoustic effect.

Helpful Hint:

- To avoid magnetic interference, do not position the speakers, too close to your TV.

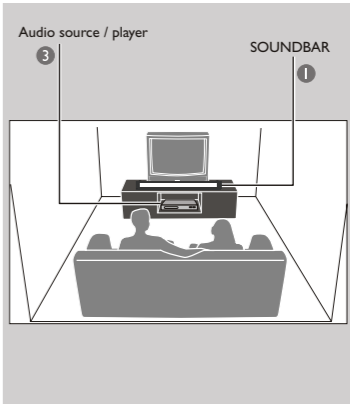

Bluetooth Operating Instruction

- Press SOURCE key from soundbar to Bluetooth mode;
- When selecting the Bluetooth mode. “.” of “bt.” in display will start blinking and you will hear an audio tone which indicates Bluetooth pairing mode.
- For pairing with mobile phone or other Bluetooth devices, search the device named “Philips HTL1020” and pair it. Once paired, “.” of “bt.” slowly flash and come up with another audio tone. “.” of “bt.” will stop flash when playing music.
- Press and hold “⏮” for 3 seconds in order to force disconnect the Bluetooth connection.

Note: While using Bluetooth, if external call comes, then speaker system goes in mute mode in order to protect privacy of mobile phone user. Operation resumes once the call is disconnected.

Troubleshooting

Warning -

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy the problem by following hints mentioned in below table.

Problem	Solution
1. No power.	Check if the AC power cord is properly inserted into the AC mains socket.
2. No sound or distorted sound.	Adjust the volume / select the correct source to choose the equipment that you want to hear through the system.
3. Low hum or buzz sound.	Place the product as far away as possible from electrical devices that may be causing interference / Check power supply voltage and consult electrician.
4. The content of the USB flash drive cannot be read.	The USB flash drive format is not compatible with the system. Drive is formatted with a different file system which is not supported by this unit (e.g. NTFS).
5. Slow operation of the USB flash drive / cannot detect USB flash drive.	Big memory size USB flash drive will take longer time to read and play. / Take out USB drive and insert it again properly.
6. BT not working.	Reduce the distance or device is not paired.

Warranty

This Philips soundbar is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase, should a defect develop during the warranty. **TPV Technology India Pvt. Ltd.**, affiliate of MMD Hong Kong Holding Limited. undertake to repair the apparatus FREE OF CHARGE at any of its authorized service center in India.

The warranty is not valid in case :

- Proof of purchase is not accompanied with this warranty card.
- The warranty card is not completed immediately after purchase.
- The apparatus is not used according to this user manual.
- Defects are caused due to improper or reckless use.
- Any repairs are done by persons other than Philips authorized service centre.
- The serial number is tampered with.
- Defects due to causes beyond control like lightning, abnormal voltage or while in transit to the purchaser's residence.

All Consumables and parts susceptible to normal wear and tear are not covered under this warranty. For detailed Terms and Conditions applicable, please refer www.philips.com/support.

Model No. _____ Product Sl. No. _____

Invoice Number _____ Date of Purchase: ____ / ____ / ____

Customer's Name and address: _____

PIN: [] [] [] [] [] []

Always there to help you!

Visit us at www.support.philips.com

Helpline: 1800 425 6396

Email: india.callcentre@tpv-tech.com

(10 a.m. to 9 p.m. Mondays to Saturdays & 10 a.m. to 6 p.m. on Sundays)

Dealer Name & Stamp:



Register you product and get support at www.philips.com/welcome

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.



总尺寸: 550x173mm
工艺: 风琴折 105G铜版纸 双面印刷
成品尺寸: 110x86.5mm
30709L029609-002

成品正面:



成品背面:

