



Get into the action

You take pleasure in the simple things in life and delight in convenience. The compact and portable Philips CD soundmachine lets you indulge in the pleasures of enjoying your favorite music with the help of easy-to-use functions.

Easy to use

- CD Shuffle/Repeat for personalized music enjoyment
- 20-track CD programmable
- Line-in connection

Enjoy your music from different sources

- CD player
- FM/MW tuner for radio enjoyment

Rich and clear sound

• Dynamic Bass Boost for deep and dramatic sound



Specifications

Audio playback

- Playback media: CD, CD-R, CD-RW
- Disc playback modes: fast forward/backward, next/ previous track search, repeat/shuffle/program

Tuner/Reception/Transmission

- Tuner bands: FM, MW
- Antenna: FM antenna

Sound

- Sound enhancement: Dynamic Bass Boost
- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

Connectivity

• MP3 Link: 3.5mm stereo line in

Rewritable

Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Number of batteries: 6
- Power type: AC Input

Accessories

- Cables/Connection: power cord
- Others: User Manual
- Warranty: Warranty Certificate

Convenience

• Loader type: top

Dimensions

- Gross weight: 2.1 kg
- Packaging depth: 264 mm
- Packaging height: 155 mm
- Packaging width: 284 mm
- Weight: 1.7 kg
- Main unit depth: 245 mm
- Main unit height: 123 mm
- Main unit width: 262 mm

AZ102H/12

Highlights

Dynamic Bass Boost

Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings from low to high – at the touch of a button! Bottomend bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

CD Shuffle/Repeat

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

FM/MW tuner

FM/MW (AM) stereo tuner

Line-in connection



Issue date 2015-01-22© 2015 Koninklijke Philips N.V.
All Rights reserved.Version: 1.0.3Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.12 NC: 8670 000 63313
EAN: 87 12581 54468 3www.philips.com