
Quick Start Guide




What's in the Box?


You should find these items upon opening the box.

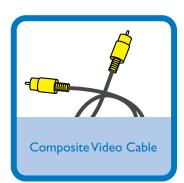



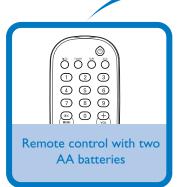



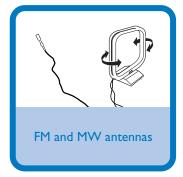







Step A Connect

Connect the speaker cables.

2

Connect the MW and FM antennas.

Tip


See the User Manual for other TV connection options.

3

Connect the composite video cable and audio cables to a TV.

4

Connect the power cords of the system and TV.

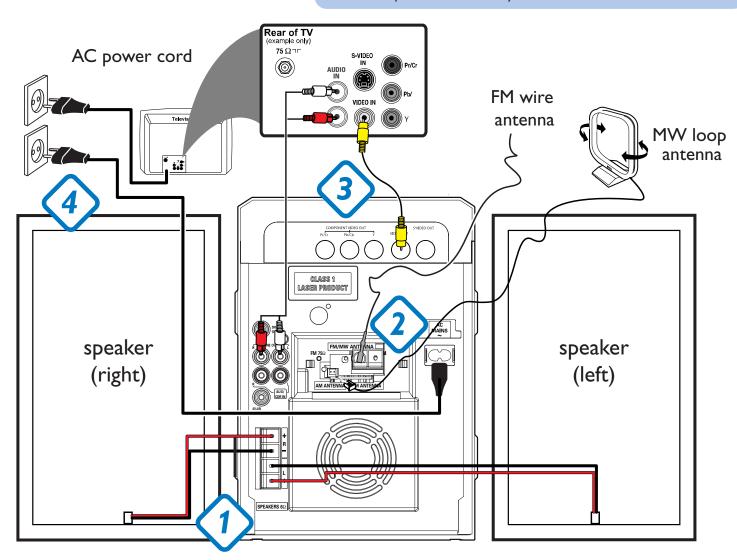

Step B Setup


Setting up the TV

U

Press **SOURCE** (**DISC** on the remote) to select disc source.




Turn on the TV and set it to the correct Video In channel.

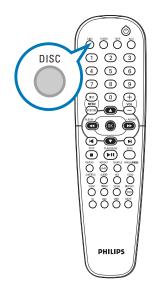




Setting the clock

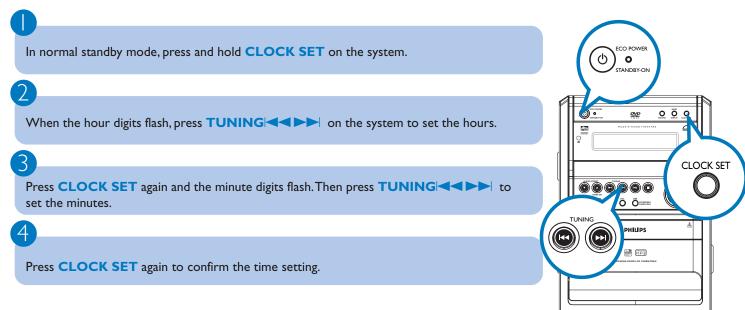

Tip

If the system is in Eco power standby mode, press and hold **ECO POWER**/ **STANDBY-ON** \bigcirc for more than 3 seconds to switch to normal standby.

Setting DVD menu options

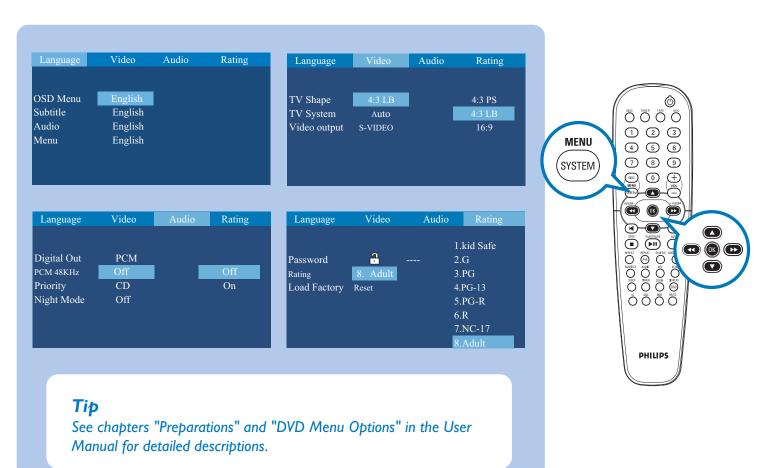



Playing a disc

0

Press **OPEN •CLOSE** ≜ to open the disc tray and load in a disc, then press the same button again to close the disc tray.


→ Make sure the label side of the disc is facing up.

2


Playback will start automatically. If not press ► II (PLAY/PAUSE ► II on the remote).

3

To stop playback, press \blacksquare (STOP \blacksquare on the remote).

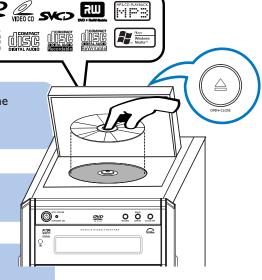

 Programming and tuning to radio stations



Press **PROGRAM** (**ANGLE/PROG** on the remote) for more than two seconds to program all available stations in order of waveband.

3

Press **ALBUM/PRESET △**/**▼** until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



