

Quick start guide

# **PHILIPS**

### What's in the box







lGuarantee

#### Note


- In multi-handset packs, there are additional handsets, chargers and power adapters.
- \* In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

#### Caution

• Use only the supplied batteries and power adapter.

# 1 Connect


### Connect the base station

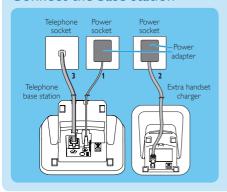

- 1 Connect each end of the power adapter to:
  - the DC input jack at the bottom of the base station;
  - the power socket on the wall.
- 2 Connect each end of the power adapter to (for multi-handset packs):
  - the DC input jack at the bottom of the extra handset charger.
  - the power socket on the wall.
- 3 Connect each end of the line cord to:
  - the telephone socket at the bottom of the base station;
  - the telephone socket on the wall.

# 2 Install

### Install the handset

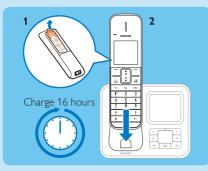


- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- Place the handset on the base station to charge the handset.
   When the handset is placed correctly on the base station, you hear the docking sound.
  - → The handset starts charging.

**Note** Charge the batteries for 16 hours before first use.

# Configure your phone (if necessary)

- 1 When you see the welcome message, press [OK].
- 2 Select your country, press [SELECT] to confirm.
- 3 Set the date and time
  - → If the time is in 12-hour format, press \* key to select [AM] or [PM].
  - → The phone is now ready to use.

## Check the battery level

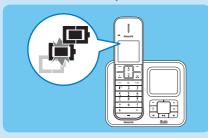

When the handset is off the base station/charger, the icon indicates the battery level:

Full (steady on) Medium (flashing) Low (empty) When you see the empty battery icon and hear an alert tone from the handset, the battery level is low and needs recharging.

- When the handset is on the base station/charger, the battery icon keeps flashing until charging completes.
- When the charging completes, the battery icon keeps steady on.

# 3 Enjoy

### Call

- To make a call, press 🕹 and dial the phone number.
- To answer a call, press 🕹 when the phone rings.
- To end a call, press 🎮

# Adjust the earpiece volume

Press  $\frac{1}{2}$  or  $\frac{10}{7}$  to adjust the volume during a call.


### Add a contact in the phonebook

- 1 Press MENU.
- 2 Select [PHONEBOOK] > [NEW ENTRY], then press [OK] to confirm.
- **3** Enter the name then press **[OK]** to confirm.
- 4 Enter the number, then press [OK] to confirm.

### Record an outgoing message

- 1 Press MENU.
- 2 Select [ANSWER MACHINE] > [RECORD OGM], then press [SELECT], to confirm.
- 3 Select [ANSWER & RECORD] or [ANSWER ONLY], then press [SELECT] to confirm.
- 4 Select [RECORD OGM], then press [SELECT] to confirm.
- 5 Start recording close to the microphone after the beep.
- 6 Press [OK] to stop recording.
  - → You can listen to the newly recorded outgoing message.

## Listen to messages recorded on the answering machine

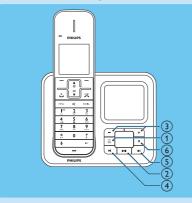

- (1) Switch on/off the answering machine: Press OF.
  - Start/Stop listening to the recorded messages: Press 🛌
- 3 Adjust the volume: Press + / -.
- 4 Skip backward:

When you listen to the messages, press ◀ to listen to the message from the beginning.

During the first second of the current message, press ◄ to listen to the previous message.

- (5) Skip forward: Press ► to skip to the next message.
- 6 Delete the current message: Press X.

**Note** For more information, see the Telephone answering machine section in the user manual.

# Welcome to Philips

Register your product at www.philips.com/welcome

## Need help?

#### User Manual

Refer to the user manual that came with your new phone.

### Online help

www.philips.com/support



Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. © 2010 Koninklijke Philips Electronics N.V. All rights reserved.



**C € 0168** 

Printed in China

QSG\_SE765\_05\_EN\_V4.0 WK10165