

Always there to help you

Register your product and get support at
www.philips.com/welcome

Questions?
Contact
Philips



EN Short User Manual
CN 简明用户手册

DCM2260

PHILIPS

EN Before using your product, read all accompanying safety information.
CN 使用产品之前, 请先阅读所有随附的安全信息。

EN Before using your product, read all accompanying safety information.
CN 使用产品之前, 请先阅读所有随附的安全信息。

EN Eco power standby mode → ON ↔ Standby mode
ON → Eco power standby mode ↔ Standby mode
Note: After this product stays inactive for 15 minutes, it automatically switches to the normal standby mode. After this product stays in the normal standby mode for 15 minutes, it automatically switches to the eco power standby mode.
CN 环保节能待机模式 → ON ↔ 待机模式
ON → 环保节能待机模式 ↔ 待机模式
注意: 本产品保持不活动状态 15 分钟后, 将自动切换至正常待机模式。本产品正常待机模式下保持 15 分钟后, 将自动切换至环保节能待机模式。

EN In normal standby mode, press and hold **DISPLAY** for 2 seconds, and then press **VOL +/-** or **▲/▼** to select b 0 1, b 0 2 or b 0 3.
CN 在正常待机模式下, 按住 **DISPLAY** 2 秒钟, 然后按 **VOL +/-** 或 **▲/▼** 选择 b 0 1, b 0 2, 或 b 0 3。

EN Buttons Functions
VOL +/- Increase or decrease the volume.
MUTE Mute the speakers or release them from mute status.
SOUND Select a preset sound equalizer.
CN 按钮 功能
VOL +/- 提高或降低音量。
MUTE 将扬声器静音或释放恢复声音。
SOUND 选择预设音效均衡器。

EN Buttons Functions
VOL +/- Increase or decrease the volume.
MUTE Mute the speakers or release them from mute status.
SOUND Select a preset sound equalizer.
CN 按钮 功能
VOL +/- 提高或降低音量。
MUTE 将扬声器静音或释放恢复声音。
SOUND 选择预设音效均衡器。

EN Buttons Functions
VOL +/- Increase or decrease the volume.
MUTE Mute the speakers or release them from mute status.
SOUND Select a preset sound equalizer.
CN 按钮 功能
VOL +/- 提高或降低音量。
MUTE 将扬声器静音或释放恢复声音。
SOUND 选择预设音效均衡器。

EN Buttons Functions
VOL +/- Increase or decrease the volume.
MUTE Mute the speakers or release them from mute status.
SOUND Select a preset sound equalizer.
CN 按钮 功能
VOL +/- 提高或降低音量。
MUTE 将扬声器静音或释放恢复声音。
SOUND 选择预设音效均衡器。

EN Buttons Functions
VOL +/- Increase or decrease the volume.
MUTE Mute the speakers or release them from mute status.
SOUND Select a preset sound equalizer.
CN 按钮 功能
VOL +/- 提高或降低音量。
MUTE 将扬声器静音或释放恢复声音。
SOUND 选择预设音效均衡器。


EN Buttons Functions
VOL +/- Increase or decrease the volume.
MUTE Mute the speakers or release them from mute status.
SOUND Select a preset sound equalizer.
CN 按钮 功能
VOL +/- 提高或降低音量。
MUTE 将扬声器静音或释放恢复声音。
SOUND 选择预设音效均衡器。

EN Buttons Functions
VOL +/- Increase or decrease the volume.
MUTE Mute the speakers or release them from mute status.
SOUND Select a preset sound equalizer.
CN 按钮 功能
VOL +/- 提高或降低音量。
MUTE 将扬声器静音或释放恢复声音。
SOUND 选择预设音效均衡器。

EN Buttons Functions
VOL +/- Increase or decrease the volume.
MUTE Mute the speakers or release them from mute status.
SOUND Select a preset sound equalizer.
CN 按钮 功能
VOL +/- 提高或降低音量。
MUTE 将扬声器静音或释放恢复声音。
SOUND 选择预设音效均衡器。

EN Buttons Functions
VOL +/- Increase or decrease the volume.
MUTE Mute the speakers or release them from mute status.
SOUND Select a preset sound equalizer.
CN 按钮 功能
VOL +/- 提高或降低音量。
MUTE 将扬声器静音或释放恢复声音。
SOUND 选择预设音效均衡器。

EN Buttons Functions
VOL +/- Increase or decrease the volume.
MUTE Mute the speakers or release them from mute status.
SOUND Select a preset sound equalizer.
CN 按钮 功能
VOL +/- 提高或降低音量。
MUTE 将扬声器静音或释放恢复声音。
SOUND 选择预设音效均衡器。

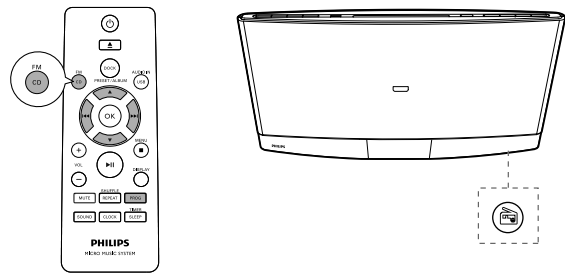

EN



Tune to an FM radio station

- To tune to the previous or next strong station, press and hold **◀/▶** / **▶▶** until the frequency starts to change.
- To tune to a station at a specific frequency, press **◀/▶** repeatedly until its frequency is displayed.

CN

调谐至 FM 电台

- 若要调到上一个或下一个信号较强的电台,请按住 **◀/▶** / **▶▶** 直到频率开始变动。
- 若要调到具体频率的电台,请反复按 **◀/▶** ,直至其频率显示。

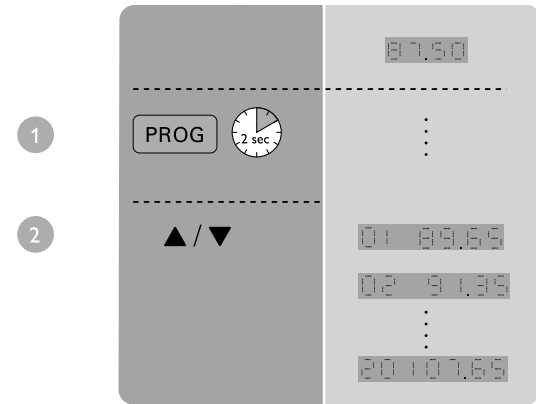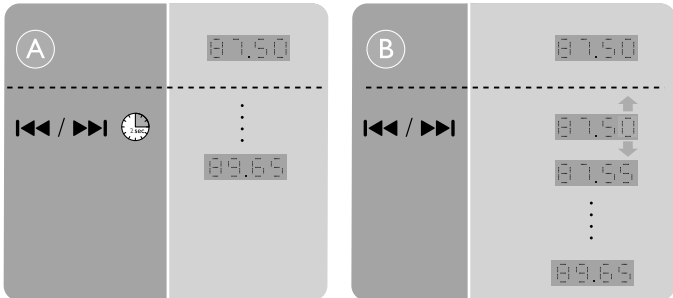

EN

Store radio stations automatically

- Press and hold **PROG** until the frequency starts to change.
- After available radio stations are stored, press **▲/▼** to tune to one of them.


Note: This product can store a maximum of 20 radio stations.

CN

自动存储电台

- 按住 **PROG** 直至频率开始改变。
- 存储可用的电台后,按 **▲/▼** 调到其中一个电台。

注意: 本产品最多可存储 20 个电台。

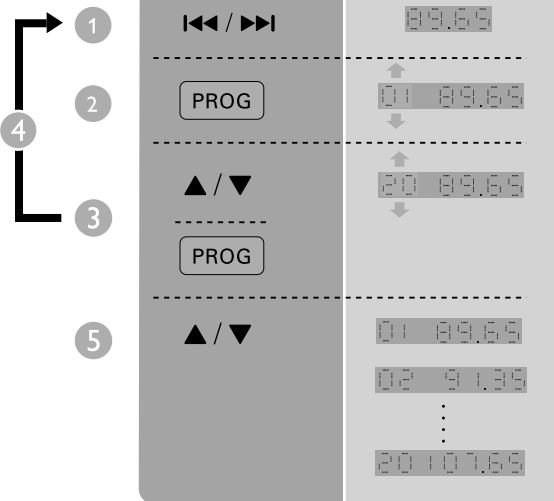

EN

Store radio stations manually

- Tune to a radio station.
- Press **PROG** to activate programming.
- Press **▲/▼** to allocate a sequence number from 1 to 20 to this radio station, and then press **PROG** to confirm.
- Repeat steps 1-3 to program more stations.
- Press **▲/▼** to tune to a stored radio station.


Note: You can program a maximum of 20 preset radio stations. To overwrite a programmed radio station, store another one with its sequence number.

CN

手动存储电台

- 调谐至电台。
- 按 **PROG** 以激活设定。
- 按 **▲/▼** 为该电台分配 1 至 20 之间的一个序号,然后按 **PROG** 确认。
- 重复步骤 1-3 可设定更多电台。
- 按 **▲/▼** 调至存储的电台。

注意: 您最多可设定 20 个预设电台。要覆盖设定的电台,请将其序号存储另一电台。

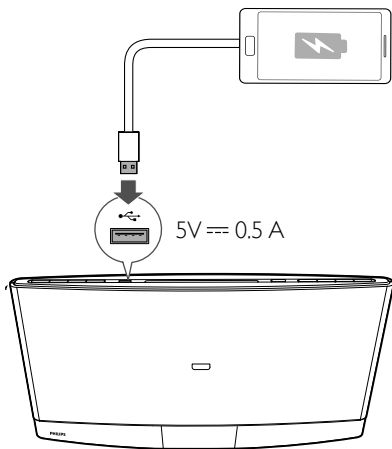


EN

Connect your USB device to this product with USB cable for charging.

CN

通过 USB 电缆将 USB 设备连接到本产品进行充电。

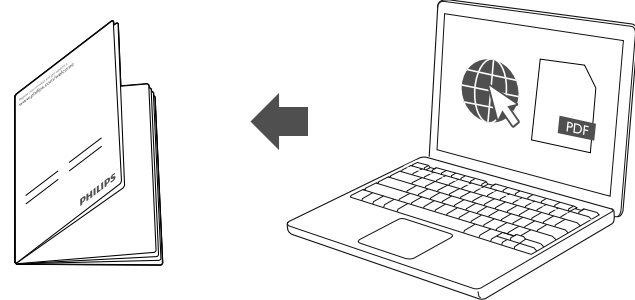

EN

To download the full user manual, visit www.philips.com/support.

CN

下载完整用户手册,请访问 www.philips.com/support。

具有双重绝缘的 II 类设备,不提供保护接地。

爱护环境

本产品采用可回收利用的高性能材料和组件制造而成。切勿将本产品与其它生活垃圾一起处理。请自行了解当地关于分类收集电子、电气产品及电池的规定。正确弃置这些产品有助于避免对环境 and 人体健康造成潜在的负面影响。本产品所含的电池不能与一般的生活垃圾一同弃置。请自行了解当地关于分类收集电池的规定。正确弃置电池有助于避免对环境 and 人类健康造成潜在的负面影响。关于您所在地区回收中心的更多信息,请访问 www.recycle.philips.com。环境信息已省去所有不必要的包装。我们努力使包装易分为三种材料:纸板(盒)、泡沫塑料(缓冲物)和聚乙烯(保护膜/气泡膜)。您的系统包含可回收利用的材料(如果由专业公司拆卸)。请遵守当地有关包装材料、废电池和旧设备的处理的规定。

商标声明

Made for
iPhone iPad

“Made for iPod”, “Made for iPhone” and “Made for iPad”表示电子附件专为连接 iPod、iPhone 或 iPad 而设计,并经开发人员认证,符合 Apple 性能标准。Apple 对该设备的操作及其是否符合安全和法规标准不负任何责任。请注意,通过 iPod、iPhone 或 iPad 使用该配件可能影响无线性能。iPod 和 iPhone 是 Apple Inc. 在美国 和其它国家/地区注册的商标。iPad 是 Apple Inc. 的商标。

版权

2014 © WOOX Innovations Limited. 保留所有权利。
飞利浦及飞利浦品牌标志是 Koninklijke Philips N.V. 的注册商标。Koninklijke Philips N.V. 许可,由 WOOX Innovations Limited 使用。
规格如有更改,恕不另行通知。WOOX 保留随时更改产品的权利,而且没有义务对较早提供的产品进行相应的调整。

部件名称 Name of the Parts	有害物质或元素 Hazardous/Oxide Substance				
	铅 (Pb) Lead	汞 (Hg) Mercury	镉 (Cd) 六价铬 (Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳	○	○	○	○	○
DVDR/CD 光驱	○	○	○	○	○
扬声器	○	○	○	○	○
电路系统	○	○	○	○	○
配件 (电源线、连接器)	○	○	○	○	○

以中等音量收听。
• 以高音量使用耳机会损坏您的听力。此产品产生的声音分贝范围可能导致正常人丧失听力,即使收听不到一分钟。较高的分贝范围适用于已经丧失了部分听力的人。
• 声音是具有欺骗性的。随着时间的过去,您听力的“舒适级别”会要求较高的音量。因此,较长时间的收听之后,“正常”的音量实际上可能很大声,对您的听力有害。要防止此情况发生,请在您的听力适应之前,将音量设置到安全级别并保持一致。
• 要设置安全的音量级别:
• 将音量控制设置为最低设置。
• 慢慢调高声音,直到可以舒适、清晰地听见而不失真即可。
合理的收听时间:
• 较长时间的收听,即使是正常的“安全”级别,也同样会导致听力受损。
• 请确保合理使用设备,并进行适当的休息。
使用耳机时请确保遵循以下准则:
• 在合理时间内以合理音量收听。
• 听力适应后,请勿调节音量。
• 不要将音量调得太高,以致于听不到周围的声音。
• 在有潜在危险的情况下应谨慎使用或暂停使用。

注意

- 铭牌(铭牌上的信息包括工作电压、消耗功率)位于主机背面。使用前请先了解铭牌上的相关信息。

2 注意

如果用户未经 WOOX Innovations 的明确许可而擅自对此设备进行更改或修改,则可能导致其无权操作此设备。

合规性

本装置包括此标签:



II 类设备符号:



环保使用期限 Environmental Protection Use Period
(This logo refers to the period (10 years) during which the product will not be subject to disposal or recycling requirements.)

○: 表示该有害物质在该部件所有均质材料中的含量均在 SJ/T11363 - 2006 标准规定的限量要求以下。
○: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 - 2006.
×: 表示该有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363 - 2006 标准规定的限量要求。
×: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.

English

1 Safety

Read and understand all instructions before you use this micro music system. If damage is caused by failure to follow the instructions, the warranty does not apply.

Know these safety symbols



This bolt of lightning indicates uninsulated material within your unit may cause an electric shock. For the safety of everyone in your household, please do not remove product covering. The exclamation mark calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.
WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.
CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

Important safety instructions

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are split on or into the product, disconnect it from the power outlet immediately. Contact the Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the main plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

- Before you connect the product to the power outlet, make sure that the power voltage matches the value printed on the back of the product. Never connect the product to the power outlet if the voltage is different.
- Never expose the remote control or batteries to rain, water, sunshine, or excessive heat.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.

Risk of injury or damage to the product!

- Use only power supplies listed in the user manual.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.

Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation.
- Make sure that curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Remove the battery if it is exhausted or if the remote control is not to be used for an extended period of time.
- Batteries contain chemical substances, they should be disposed of properly.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

Hearing safety



- Listen at a moderate volume.**
- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
 - Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.
- To establish a safe volume level:**
- Set your volume control at a low setting.
 - Slowly increase the sound until you can hear it comfortably and clearly, without distortion.
- Listen for reasonable periods of time:**
- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
 - Be sure to use your equipment reasonably and take appropriate breaks.
- Be sure to observe the following guidelines when using your headphones.**
- Listen at reasonable volumes for reasonable periods of time.
 - Be careful not to adjust the volume as your hearing adapts.
 - Do not turn up the volume so high that you can't hear what's around you.
 - You should use caution or temporarily discontinue use in potentially hazardous situations.

- To establish a safe volume level:**
- Set your volume control at a low setting.
 - Slowly increase the sound until you can hear it comfortably and clearly, without distortion.
- Listen for reasonable periods of time:**
- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
 - Be sure to use your equipment reasonably and take appropriate breaks.
- Be sure to observe the following guidelines when using your headphones.**
- Listen at reasonable volumes for reasonable periods of time.
 - Be careful not to adjust the volume as your hearing adapts.
 - Do not turn up the volume so high that you can't hear what's around you.
 - You should use caution or temporarily discontinue use in potentially hazardous situations.

注意

- 铭牌(铭牌上的信息包括工作电压、消耗功率)位于主机背面。使用前请先了解铭牌上的相关信息。

2 Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

Compliance

This apparatus includes this label:



Class II equipment symbol:



CLASS II apparatus with double insulation, and no protective earth provided.

Care of the environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.
Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.
Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.
Please visit www.recycle.philips.com for additional information on a recycling center in your area.
Environmental information
All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).
Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Trademark notice

Made for
iPhone iPad

“Made for iPod”, “Made for iPhone”, and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

听力安全

