




AZ1133

**PHILIPS**


- 1 Choosing Power Supply**
- Connect the AC power cord to the **AC MAINS~** inlet and the wall socket.
- OR-
- Open the **battery door** and insert 6 x C batteries (not included).

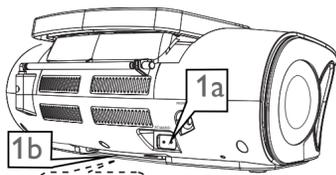

6 x R14 UM-2 C-CELLS  
R-14, UM-2 or C-cells  
(not included)

- 2 Listening to the Radio**
- Push the **source selector** to **FM** or **MW** to select your waveband.
  - Turn **TUNING** to tune to a station.

- 3 Playing a disc**
- This CD player Audio Discs including CD-Recordables and CD-Rewritables, and MP3-CD.
- Adjust the **source selector** to **CD/MP3**.
  - Open the disc door.
  - Insert a disc with the printed side facing up and close the door.
  - Press **▶||** to start playback.
  - To stop disc playback, press **■**.

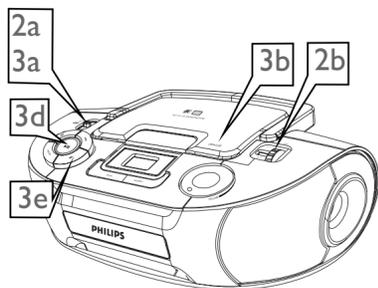

- Source selector**  
Slide to select function: CD/MP3, radio (FM/MW)
- ▶||**  
Press to start or pause disc playback
- ▶, ◀**  
Briefly press to skip to the beginning of the current/previous/ later disc track;  
During disc playback, press and hold to find a particular passage backward/forward
- PROG**  
Use to program disc tracks
- Press to stop disc playback or erase a disc program
- OPEN-CLOSE**  
Push to open the disc door
- TUNING**  
Turn to tune to a station
- VOLUME**  
Turn to adjust volume level
- Display**  
Shows disc functions
- ALBUM+**  
For **MP3-CD**: Press to select albums
- MODE**  
Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order)

- Telescopic antenna**  
Improves FM reception
- Battery door**
- AC MAINS~**  
inlet for the AC power cord.

