 


# Quick start guide

## 1 Charge your battery

This portable DVD player is designed with a built-in Ni-MH battery to supply power to the player when you are on travel.

- 1 Slide the **POWER** switch to the **OFF** position (charging of the DVD player only possible in the power-off mode).




- 2 Connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) to start charging.
  - The **CHG** indicator turns red.
  - When the battery is fully charged, the indicator turns off.
- 3 Disconnect the power adaptor cord (or the car adaptor) when the CHG indicator turns off.

### Notes:

— You can also connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) directly wherever possible.

## 2 Enjoy (Disc operation)

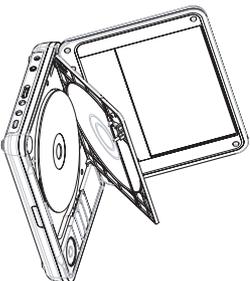

- 1 Open the lid of the player.
- 2 Slide the **POWER** switch to **ON** to switch on the DVD player.
  - The **POWER** indicator turns on.
- 3 Press **OPEN** to open the disc door.
- 4 Remove the protective card (if any) and load a disc with the label side facing up.
- 5 Close the disc door: Playback will start automatically. If not, press **▶/II**.
- 6 To stop playback, press **■**.

### Note:

— Once the battery is running low (the power indicator will flash as a prior warning), immediately recharge it (regardless of whether you plan to use the battery or not) in order to maximize the battery life.

## 2 Enjoy (AV OUT)

### Connecting additional equipment (TV for example)

- 1 Connect the AV OUT socket on the set to the video and audio sockets on a TV as shown directly.
- 2 Switch on the TV and set to the correct video-in channel.
  - You can consult the owner's manual of your TV. (If your TV does not have Audio and Video inputs, you will need to purchase a RF modulator. Please consult your dealer.)

