

Register your product
and get support at
www.philips.com/welcome

SRP2002/10



EN User Manual

PHILIPS

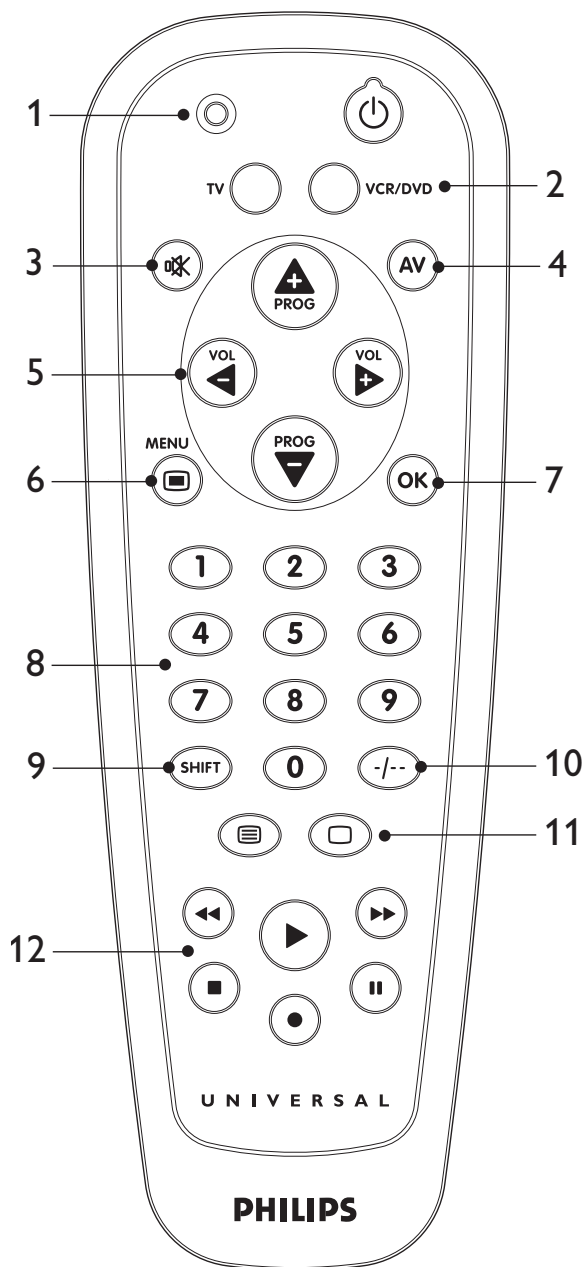 


Table of contents

1	Your SRP2002	3
2	Getting started	3-7
2.1	Inserting the batteries	3
2.2	Setting up the universal remote control	4-7
3	Using the universal remote control	7-9
3.1	Buttons and functions	7-8
3.2	Resetting a button to its original function	7-9
4	Service and support	10-12
4.1	Frequently asked questions	10-11
4.2	Need help?	12
	Helpline	13
	Brand list	14-24
	Information to the consumer	25
	Compliance with EMF	25
	Recycling and disposal	25
	Battery information	25

1 Your SRP2002


Congratulations on your purchase of the Philips SRP2002 universal remote control. After setting up the remote control you can operate up to 2 different devices with it: TV and VCR/DVD players/recorders (including Blu-ray player).

To fully benefit from the support that Philips offers, register your product at:
www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

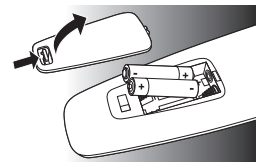

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

2.2 Setting up the universal remote control


 
The example below instructs you how to set up your universal remote control for your TV. You can repeat the same steps for other devices (DVD player/recorder and VCR) which you want to operate, using the SRP2002.

The remote control can be set up to operate any 2 of the following devices:

Device name	Description
TV	Traditional TV, flat screen TV and projection TV, TV part of TV/VCR, TV/VCR/DVD and TV/DVD combos
DVD	DVD player; Blu-Ray player; High Definition DVD player (HD-DVD), DVD part of TV/DVD, TV/VCR/DVD and VCR/DVD combos
VCR	Video cassette player/recorder; VCR part of TV/VCR, TV/VCR/DVD and VCR/DVD combos

Example: setting up the universal remote control to operate your TV:

- 1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.


- 2 **Press and hold** the  device selection button **for 5 seconds** until the green Setup light  lights up.



- The remote control is now in setup mode.


- 3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.

A four-digit code is shown for each brand.

Use the digit buttons to enter the code for your brand.

- If the green Setup light  turns off, an invalid code was entered. In this case, try again.

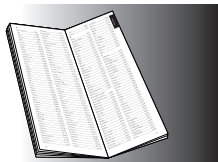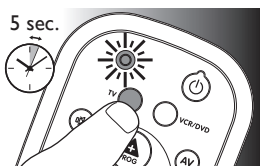


- 4 Aim the remote control at the TV. **Press and hold** the  button. Release it **immediately** as soon as the TV switches off.


- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.



- 5 **Switch ON** the TV. Try out the buttons that you need for operating it. Try, for example, if the ,  and digit buttons function properly.

- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.2.

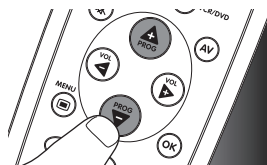


- 6 Press the  device selection button **twice** to finish setup.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.




Important

If you made a mistake:

- Press the device selection button **twice** to exit setup. The green Setup light  turns off.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.2.1 Setting up the remote control for other devices (DVD player/recorder and VCR)

- 1 Make sure the device is switched on and operational. E.g. insert a disc in the DVD player/recorder or a video cassette in the VCR.
- 2 Then follow steps 2 to 6 of 'Setting up the remote control for your TV'. Make sure to use the correct device selection button: .

2.2.2 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected.

In this case you can have the remote control search for alternatives.

Note


Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup



- 1 Make sure the receiving device is able to respond.
E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every button that does not function.
 - If the button still does not function as expected, try pressing it again for a longer period of time.


After initial setup


- 1 Make sure the receiving device is able to respond.
E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.

- 2 Select the device you wish to operate (e.g. DVD).
Press the  device selection button to select DVD.




- 3 Keep buttons  and  pressed simultaneously for 5 seconds.

- The green Setup light  lights up. The remote control is now in setup mode.

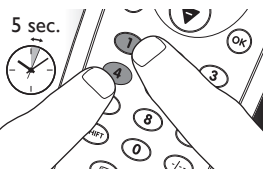

- 4 **Press and hold** the button that does not function and **immediately** release it when the device responds.
 - If the button still does not function as expected, try pressing it again for a longer period of time.

- 5 Press the  device selection button **twice** to save your settings and exit setup mode.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.





3 Using the universal remote control

3.1 Buttons and functions


The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.





Notes








































- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP2002 (e.g. Info/Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP2002.

- 1  setup light. Lights up when a remote control command is being sent, when you just selected a device and when the remote control is in setup mode.
-  switches the selected device on/off.

Note




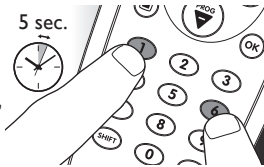



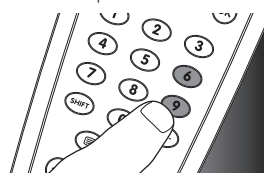
 



For some TV brands/types, the  button will only switch off the TV. You will have to press a digit button (direct channel selection) to switch on the TV again.

- 2   device selection buttons.
Select the device to be operated.
- 3  mutes TV sound.
- 4  switches between external (Audio/Video) inputs of your equipment.

- 5   previous/next channel.
  adjust TV volume.
- 6  wide screen (TV).
- 7  confirms your selection.
- 8    digit buttons for direct channel/track selection.
  
  

- 9  for extra functions. When pressed at the same time as a second key, the second key will get another function.
For example:
 +  menu on/off.
 +  menu up.
 +  menu down.
 +  menu right.
 +  menu left.
- Try out other combinations with the  key on your device in order to find out which functions are available. Only functions featured on the original remote control are available.
- 10  selects between one and two-figure channel numbers and channel numbers with more than two or three figures.
- 11   teletext on () / off ().
- 12  rewind.
 play.
 fast forward
 stop.
 record.
 pause.

3.2 Resetting a button to its original function

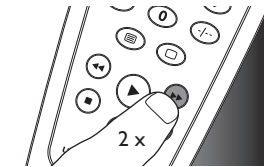If an improved button (see chapter 2.2.2.) still does not function as expected, you can always reset the button to its original function.

- In the current device mode, keep digit buttons  and  pressed simultaneously for 5 seconds, until the green Setup light  lights up.
 - The remote control is now in setup mode.
- Press digit buttons  and , in that order.
 - After each button press the green Setup light  blinks once.
- Press the button that you wish to reset **twice**.
 E.g. the  button.
 - After each button press the green Setup light  blinks once.
 - The green Setup light  will blink one more time to confirm that the button was successfully reset to its original function.

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV, VCR and DVD brands.

- You will find a complete brand list on page 14-24 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV turns OFF in step 4 but does not turn ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.2) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.2.

How do I set the remote control for combo devices (TV/VCR, TV/DVD, DVD/VCR, etc)?

Some combo devices require you to set up two different source selection buttons to control both parts of the combo device. For example, if you have a TV/DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV/DVD combo.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The device I want to operate does not respond at all/does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.2.2.


Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

The Teletext buttons do not work.

- Find out whether your TV is equipped with Teletext.
- Try improving the Teletext buttons. See chapter 2.2.2.
- Check whether you are using the correct button to switch on Teletext. For TV this is the  button.

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory for 5 minutes.



Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP2002, you can always contact us.

When calling our helpline, make sure to have the SRP2002 at hand when you call, so that our operators can help you determine whether the SRP2002 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP2002/10.

Date of purchase://
(day/month/year)

For **online support** go to:

www.philips.com/welcome

- Click 'Support' and follow the on-screen instructions.



Helpline

Country

Ireland
United Kingdom

Phone number

01 601 1158
0800 331 6015

Tariff

pstn
free

4Kus..... 0005

A

A.R. Systems..... 0012
 Acme 3521
 Acoustic Solutions..... 0032 (DB1)
 Acura 0036
 ADA 0038
 ADC 0040
 Addison 0043
 Adelsound 0044
 ADL 0045 (DB1)
 Admiral 0046
 Advent 0054 (DB1)
 Adyson 0058
 AEG 0059
 Agashi 0063
 Agazi 3522
 AGB 0064
 Aiko 0069
 Aim 0070
 Airis 0071
 Aiwa 0072
 Akai 0074
 Akiba 0078
 Akito 0082
 Akura 0083
 Alaron 0085
 Alba 0086
 Alcyon 0093
 Alize 0100
 Alkos 3523
 Allorgan 0105
 Allstar 0108
 Ambassador 0120
 Amitech 0130
 Amoi 0132
 Amplivision 0138
 Amstrad 0140
 AMW 0143
 Anam 0146
 Anam National 0147
 Andersson 0148 (DB1)
 Anglo 0151
 Anitech 0154
 Ansonic 0156
 AOC 0165
 Apex 3691
 Apollo 0171

Arc En Ciel 0178
 Arcam 0179
 Arcam Delta 3524
 Arcelik 4791 (DB1)
 Ardem 0184
 Aristona 0192
 Arthur Martin 0200
 ASA 0202
 Asberg 0205
 Asono 0212
 Astra 0221
 Asuka 0227
 Atacom 0228
 Atec 0230 (DB1)
 Atlantic 0233
 Atori 0237
 Auchan 0240
 Audiosonic 0264
 Audioton 0266
 Audix 0270 (DB1)
 Ausind 0276
 Autovox 0280
 Avious 0291
 Awa 0296
 Axxon 0303 (DB1)
 Ayomi 3525

B

B&D 3609 (DB1)
 Baird 0311
 Bang & Olufsen 0314
 BARON 3959
 Basic Line 0325
 Bastide 0327
 Baur 0331
 Baze 0334
 Bazin 0335
 BBK 0337
 Beijing 0345
 Beko 0346
 Bellagio 0354
 BenQ 0359
 Beon 0361
 Best 0364
 Best Buy 0365
 Bestar 0368
 Bestar-Daewoo 0369
 Binatone 0378
 Black Diamond 0384 (DB1)

Black Panther Line. 4196
 Black Star 0386
 Blacktron 3526
 Blackway 0388
 Blaupunkt 0390
 Blue Media 3378 (DB1)
 Blue Sky 0395
 Blue Star 0396
 BlueH 3793 (DB1)
 Boghe 0400
 Bondstec 0403
 Boots 0405
 BPL 0413
 Brainwave 0415
 Brandt 0416
 Brimax 3797 (DB1)
 Brinkmann 0423
 Brionvega 0424
 Britannia 0425
 Bruns 0435
 BskyB 0436
 BSR 0437
 BTC 0439
 Bush 0445

C

Caihong 0462
 Cambridge Audio 0470
 Cameron 4032
 Capsonic 0486
 Carad 0488
 Carena 0489
 Carrefour 0492
 Cascade 0496
 Casio 0499
 Cat 0500
 Catha 4094
 Cathay 0501
 Catron 0502
 CCE 0504
 Celestial 0511
 Centrex 0516
 Centrum 0519
 Centurion 0520
 Century 0521
 CGE 0523
 CGV 0524
 Changcheng 0526
 Changfei 0527

Changhai 0529
 Changhong 0530
 Chimei 3563
 Chuangjia 4096
 Chunfeng 0546
 Chung Hsin 0547
 Chunsun 0549
 Cimline 0552
 Cinetec 0560
 CineVision 0562
 Cinex 0563 (DB1)
 City 0569
 Clarivox 0576
 Classic 0580
 Clatronic 0581
 Clayton 0582 (DB1)
 CMS 0590
 CMS Hightec 0591
 Coby 0597
 Concorde 0626
 Condor 0627
 Conia 0628
 Conrowa 0634
 Contec 0635
 Continental Edison 0637
 Cosmel 0647
 Crosley 0655
 Crown 0658
 CS Electronics 0663
 CTC 0664
 CTC Clatronic 3527
 C-Tech 0449
 CVG 3996
 Cybercom 0671 (DB1)
 CyberHome 0672
 Cybermaxx 3696 (DB1)
 Cybertron 0675

D

Daenyx 0690
 Daewoo 0692
 Dainichi 0694
 Dansai 0699
 Dantax 0702
 Datron 4201
 Datsura 0703
 Dawa 0707
 Daytek 0708
 Dayton 0709

Daytron.....0710	E-Dem.....3624	Firstline.....1008	GVG.....1169
DCE.....0713 (DB1)	Elbe.....0880	Fisher.....1009	
De Graaf.....0716	Elbe-Sharp.....3529	Flint.....1014	H
DEC.....0717	Elcotech.....0882	FNR.....1016	H&B.....3635
Decca.....0718	Elcit.....0883	Formenti.....1023	Haaz.....1172
Deitron.....0722	Electa.....3530	Formenti-Phoenix..1024	Haier.....1175
Denko.....0730	ELECTRO TECH....3531	Fortress.....1027	Haihong.....1176
Denon.....0731	Electrohome.....0890	Fraba.....1030	Halifax.....1179
Denver.....0733	Elektra.....0896	Friac.....1040	Hampton.....1183
Denzel.....0734	Element.....3477	Frontech.....1042	Hanns.G.....3478 (DB1)
Desay.....0737	Elfunk.....0899 (DB1)	Fujicom.....1048 (DB1)	Hannspree.....1189 (DB1)
Desmet.....0738	ELG.....0900	Fujitsu.....1052	Hanseatic.....1190
DGM.....3566 (DB1)	Elin.....0902	Fujitsu General.....1053	Hantarex.....1192
Diamant.....0746	Elite.....0903	Fujitsu Siemens.....1054 (DB1)	Hantor.....1193
Diamond.....0747	Elmak.....0907	Funai.....1056	Harman/Kardon.....1198
DICRA.....4938 (DB1)	Elonex.....4019 (DB1)		Harwood.....1204
Digatron.....0751	Elsay.....0909	G	Hauppauge.....1206
Digihome.....0758 (DB1)	Elta.....0910	Galaxi.....1068	HCM.....1210
Digiline.....0759	Emerson.....0917	Galaxis.....1069	Hema.....1222
DigiLogic.....0760 (DB1)	e-motion.....3496 (DB1)	GBC.....1078	Hemmermann.....1223
Digital Device.....0770 (DB1)	Emperor.....0921	Geant Casino.....1082	Henss.....1224 (DB1)
Digitek.....0779 (DB1)	Enzer.....0934	GEC.....1083	Hifivox.....1233
Digitor.....0781	Epson.....0937	Geloso.....1087	Higashi.....1234
DiK.....0787 (DB1)	Erres.....0942	General.....1090	Highline.....1236
Dikom.....3391 (DB1)	ESC.....0945	General Technic.....1095	Hikona.....1237
Dixi.....0807	Etron.....0949	Genexxa.....1097	HiLine.....3533
DK Digital.....0808	Etzuko.....4203	Gericom.....1103	HiMAX.....1241
DMTech.....0813	Eurofeel.....0954	GFM.....3820	Hinari.....1243
Dongda.....0820	EuroLine.....0955	Giant.....1113	Hisawa.....1247
Donghai.....0821	Euroman.....0956	Giec.....1115	Hisense.....1249
Dragon Systems.....4830 (DB1)	Europa.....0957	Global Solutions.....1120	Hitachi.....1251
Drean.....0832	Europhon.....0959	Global Sphere.....1121	Hitachi Fujian.....1252
DSE.....0833	Evesham.....0972 (DB1)	Go Video.....1126	Hitsu.....1257
DTS.....0837	Expert.....0976	Gold.....3823 (DB1)	Hoeher.....1262
Dual.....0838	Exquisit.....0978	GoldHand.....1136	Hoher.....4504 (DB1)
Dual-Tec.....3528		Goldline.....1138	Home Tech Industries
Dumont.....0840	F	GoldStar.....11401266
Duongjie.....4101	Fagor Life.....4102	Goodmans.....1142	Hongmei.....1272
Durabrand.....0842 (DB1)	Feilang.....0990	Gorenje.....1144	Hornymphon.....1277
Dux.....0843	Feilu.....0991	GPM.....1149	Hoshai.....1278
D-Vision.....0684	Feiyue.....0993	Gradiente.....1151	Huafa.....1287
DVX.....0847	Fenmenti.....4103	Graetz.....1152	Huanghaimei.....1288
Dynatron.....0855	Fenner.....0994	Gran Prix.....1153 (DB1)	Huanghe.....1289
Dynex.....3476	Ferguson.....0996	Granada.....1154	Huanglong.....1290
	Fidelity.....0998	Grandin.....1156	Huangshan.....1291
E	Filsai.....1000	Great Wall.....4105	Huanyu.....1292
Easy Home.....3700	Finlandia.....1003	Gronic.....1160	Huari.....1294
Easy Living.....0860 (DB1)	Finlux.....1004	Grundig.....1162	Hugoson.....1297 (DB1)
Eclipse.....0867	Fintec.....1006	Grunkel.....1164	Huijiaban.....4108

Humax 1298
 Hygashi 1308
 Hyper 1309
 Hypson 1312
 Hyundai 1315

I

Iberia 1320
 ICE 1324
 ICeS 1325
 iDEAL 3641 (DB1)
 Iekei 1332 (DB1)
 IISonic 1334 (DB1)
 Iiyama 1335 (DB1)
 Impego 4207
 Imperial 1346
 Indesit 1349
 Indiana 1350
 Ingelen 1354
 Ingersol 1355
 Inno Hit 1358
 Innovation 1360
 Inspira 4296 (DB1)
 Interactive 3534
 Interbuy 1376
 Interfunk 1377
 Internal 1379
 International 1380
 Intervision 1386
 IR 4110
 Irradio 1396
 Isukai 1402
 ITC 1404
 ITS 1405
 ITT 1406
 ITV 1408

J

JEC 1426
 JGC 1434 (DB1)
 Jiahua 1435
 Jinhai 1439
 Jinxing 1442
 JVC 1464

K

Kaisui 1471
 Kamosonic 3535
 Kamp 1475

Kangchong 1476
 Kanghua 1477
 Kangwei 4115
 Kansai 1480
 Kapsch 1483
 Karcher 1484
 Kawa 1487
 Kawasho 1489
 Kendo 1500
 Kennedy 1504
 Kennex 1505
 Kenwood 1507
 KeyPlug 3646
 KIC 1512
 Kihiro 1513
 Kingavon 1519
 Kingsley 1520
 Kiota 1522
 Kiss 1524
 Kiton 1525
 Kneissel 1535
 Koda 1539
 Kolin 1541
 Kolster 1543
 Konig 1547
 Konka 1548
 Korpel 1552
 Korting 1554
 Kosmos 1557
 Koyoda 1561
 KTV 1572
 Kuro 1579
 KXD 1581
 Kyoshu 1583
 Kyoto 1585

L

L&S Electronic 1588
 Lafayette 1591
 LaSAT 1597
 Lawson 1603
 Layco 4117
 Lecson 1606
 Lenco 1615
 Lenoir 1617
 Lenoxx 1618 (DB1)
 Lesa 1622
 Leyco 1627
 LG 1628

LG/Goldstar 3536
 Liesenk 3537
 Liesenk & Tter 1630
 Liesenkotter 1631
 Life 3538
 Lifetec 1633
 Limit 1637
 LiteOn 1645
 Lloyds 3539
 Lloyd's 1648
 Local India TV 1653
 Losos 1659 (DB1)
 Loewe 1660
 Loewe Opta 3540
 LogicLab 3650
 Logik 1661
 Luma 1674
 Lumatron 1676
 Lux May 1680
 Luxor 1683

M

M Electronic 1688
 Madison 1698
 Magnadyne 1702
 Magnafon 1703
 Magnavox 1706
 Magnex 1707
 Magnum 1709
 Majestic 1713
 Mandor 1717
 Manesth 1718
 Manhattan 1719
 Maqma 1722 (DB1)
 Marantz 1724
 Marelli 1729
 Mark 1731
 Marquant 1734
 Mascom 1738 (DB1)
 Masuda 1744
 Matsui 1750
 Matsushita 1751
 Maxim 1759 (DB1)
 MBO 1765 (DB1)
 McMichael 1768
 MDS 1772 (DB1)
 Mecotek 1776
 Mediator 1784
 Mediencom 1786
 Medion 1787
 Medison 1788
 MegaDrive 4297 (DB1)
 Meletronic 3654
 M-Electronic 3541
 Melvox 1799
 Memorex 1800
 Memphis 1802
 Mercury 1804
 Metz 1810
 MiCO 1813
 Micromaxx 1822
 Micromedia 1823
 Micromega 1824
 Microspot 3849 (DB1)
 Microstar 1827
 Migros 1832
 Mikomi 1833 (DB1)
 Minato 1835
 Minax 1836 (DB1)
 Minerva 1838
 Minoka 1840
 Minowa 1843
 Mirai 1849 (DB1)
 Mitsai 3851 (DB1)
 Mitsubishi 1855
 Mivar 1857
 Mizuda 1860
 Monyka 1873
 Morgans 3970
 Motion 1877
 MTC 1889
 MTEC 1890
 MTlogic 1892
 Mudan 1896
 Multi System 3542
 Multistandard 1904
 Multisystem 4121
 Multitec 1906
 Multitech 1907
 Murphy 1911
 Musikland 1915
 Mustek 1916
 Mx Onda 1919
 Myrica 3946 (DB1)
 Mystral 1925

N

NAD	1926
Naiko	1930
Nakamichi	1932
Nakimura	1933
Naonis	1936
National	1942
NEC	1950
Neckermann	1951
NEI	1952
Nesco	1960
Netsat	1966
Netway	3419 (DB1)
Network	1968
Neufunk	1970
Nevir	1977
New Tech	1979
New World	1980
Next Base	1983
Nicamagic	1994
Nikai	4566 (DB1)
Nikkai	1998
Nikkei	1999 (DB1)
Nimbro	4065 (DB1)
Noblex	2013
Noblisko	2014
Nogamatic	2016
Nokia	2017
Nordic	2021
Nordmende	2022
Nordvision	3543
Normerel	2024
Novatronik	2035
Nu-Tec	2048

O

O.K.Line	4301 (DB1)
Oceanic	2061
Okana	4122
Okano	2065
Omni	2074
ONCEAS	3544
Onida	2081
Onimax	2082
Onkyo	2085
Onn	3663 (DB1)
Onwa	2087
Onyx	3864 (DB1)
Oopla	2088

Opera	2090
Optim	2094
Orava	2101
Orbit	2103
Orion	2111
Oritron	2112
Online	2113
Ormond	2114
Orson	2115
Orsowe	2116
Osaki	2118
Osio	2121
Oso	2122
Osume	2123
Otto Versand	2126
Oulin	4123

P

P&B	2132
Pacific	2135
Pael	2140
Palladium	2145
Palsonic	2147
Panama	2149
Panasonic	2153
Panavision	2154
Panda	2155
PARK	3951 (DB1)
Pathe Cinema	2168
Pathe Marconi	2169
Pausa	2171
peekTon	2178
Pensonic	3778
Perdio	2185
Perfekt	2186
Philco	2192
Philharmonic	2194
Philips	2195
Philips Magnavox	3715
Phocus	2198 (DB1)
Phoenix	2199
Phonola	2201
Phonotrend	2202
Pioneer	2212
Pionier	2213
Plantron	2219
Playsonic	2224
Plu2	2225 (DB1)
Pointer	2229

Polaroid	2230
Poppy	2236
Portland	2238
Powerpoint	2241
Prandoni Prince	4125
Precision	2244
Prima	2253
PrimeView	3513 (DB1)
Prinz	2260
Pro2	2265 (DB1)
Profekt	4126
Profex	2269
Profilo	2272
Profitronic	2273
Proline	2274
Promax	2275
Proson	2281 (DB1)
Prosonic	2282
Protech	2284
ProVision	2291
Pye	2302
Pyle	2303 (DB1)
Pymi	2304

Q

Quandra Vision	3546
Quasar	2320
Quelle	2322
Questa	2324

R

Radialva	2329
Radio	4128
Radio Shack	3547
Radiola	2330
Radiomarelli	2331
Radionette	2332
RadioShack	2333
Radiotone	2334
Raite	2340
Rank	2345
RBM	2350
RCA	2351
REC	2357
Recor	2359
Rectiligne	2362
Red Star	3669 (DB1)
Rediffusion	2364
Redstar	2366

Reflex	2368
Relisys	2374 (DB1)
Render	4072 (DB1)
Reoc	2379
Revox	2383
Revoy	2384
Rex	2385
RFT	2386
Rhapsody	2387
Rimax	2391
R-Line	2327
Roadstar	2398
Robotron	2401
Ronin	2412
Rover	2415 (DB1)
Rowa	2416
Rownsonic	2417
Royal	2419
Royal Lux	2420
RTF	3548

S

Saba	2429
Sabaki	2430
Sagem	2434
Saisho	2437
Saivod	2439
Salora	2443
Sambers	2445
Sampo	2446
Samsung	2448
Samurai	2451
Sandra	2454
Sansui	2458
Sanwa	2461
Sanyo	2462
Sanyuan	2464
Saville	2491
SBR	2492
ScanMagic	2496
Schaub Lorenz	2500
Schneider	2501
Schoentech	3504 (DB1)
Scientific Labs	2504
Scott	2508
Seeltech	2519
SEG	2522
SEI	2524
Sei-Sinudyne	2525


Seitech.....	3435 (DB1)	Sontech.....	3435	Tandy.....	2843	Tokyo.....	3004
Seleco.....	2528	Sony.....	2679	Tashiko.....	2850	Tomashi.....	3006
Sencora.....	2531	Sound & Vision.....	2680	Tatung.....	2852	Tom-Tec.....	3005 (DB1)
Sentra.....	2534	Soundmaster.....	2685	TCL.....	2856	Tonsai.....	4223
Sentron.....	4216	Soundmax.....	2687	TCM.....	2857	Top Suxess.....	3013
Serino.....	2539	Soundwave.....	2689	Teac.....	2860	Toshiba.....	3021
Shanghai.....	2547	Soyo.....	2693 (DB1)	Teachimagen.....	4140	Towada.....	3028
Shanshui.....	4133	Spectra.....	2697	Tec.....	2861	Towika.....	4224
Shaofeng.....	2549	Srypton.....	4138	Tech Line.....	2863	Toyoda.....	3030
Sharp.....	2550	Standard.....	2713	Techica.....	2865	Trakton.....	3036
Shencai.....	2553	Star Cluster.....	3724	Technema.....	2866	Trans Continens.....	3037
ShengCai.....	4217	Starlight.....	2727	Technica.....	2868 (DB1)	TRANS-continents.....	3039
Shenyang.....	2555	Starlite.....	2728	Technics.....	2869	Transfec.....	4143
Sherwood.....	2557	Starmedia.....	2730	Technika.....	2870	Transonic.....	3041
Shinelco.....	4074 (DB1)	Stenway.....	2739	TechniSat.....	2873	Transtec.....	3042
Shintom.....	2563	Stern.....	2741	Technisson.....	2874 (DB1)	Trident.....	3054
Shintoshi.....	2564	Stevison.....	2742 (DB1)	Techvision.....	4307 (DB1)	Trio.....	3056
Shivaki.....	2567	Strato.....	2745	Techwood.....	2884 (DB1)	Tristar.....	3057
Shorai.....	2569	Strong.....	2748 (DB1)	Teco.....	2886 (DB1)	Triumph.....	3058
Siam.....	2572	Stylandia.....	2752	Tedex.....	2889	TruVision.....	3061
Siarem.....	2573	Sungoo.....	3767 (DB1)	Teleavia.....	2901	TSM.....	3065
Siemens.....	2574	Sunkai.....	2762	Telecor.....	2910	TVA.....	4225
Siera.....	2576	Sunstar.....	2768	Telefunken.....	2914	TVE.....	3897 (DB1)
Sierra.....	3549	Suntronic.....	2770	Telefusion.....	2915		
Siesta.....	2577	Sunwood.....	2772	Telegazi.....	2917	U	
Sigmatek.....	2580	Superla.....	2782	Telemeister.....	2924	Uher.....	3089
Silva.....	2591	Supersonic.....	2787	Telesonic.....	2930	Ultravox.....	3095
Silva Schneider.....	2592	SuperTech.....	2789	Telestar.....	2931	Umax.....	3098
Silver.....	2594	Supervision.....	2791	Telesystem.....	2933 (DB1)	UMC.....	3099 (DB1)
Singer.....	2599	Supra.....	2792	Teletech.....	2934	Unic Line.....	3100
Sinudyne.....	2601	Supratech.....	2793 (DB1)	Teleton.....	2935	Union.....	3781
Skantic.....	2605	Susumu.....	2797	Televideo.....	2938	United.....	3106
SKY.....	2610	Sutron.....	2798	Television.....	2939	United Quick Star.....	4226
Skymaster.....	2621	Swedx.....	2803 (DB1)	Televiso.....	2941	Universal.....	3113
Skyworth.....	2631	Swissflex.....	2805 (DB1)	Temco.....	2946	Universum.....	3115
Slim Art.....	2636	Swisstec.....	2806 (DB1)	Tennessee.....	2952	Univox.....	3116
SM Electronic.....	2639	Sydney.....	2808	Tenosal.....	2953		
Smart.....	2642 (DB1)	Sylvania.....	2809	Tensai.....	2954	V	
S-Media.....	3515 (DB1)	Symphonic.....	2810	Tenson.....	2955	V7 Videoseven.....	3130 (DB1)
Sogera.....	2649	Synn.....	2813	Tesla.....	3680 (DB1)	Vestel.....	3148
Solavox.....	2654	Sysline.....	2815	Tesmet.....	3550	Vexa.....	3149
Sonawa.....	2663	Sytong.....	2820	Tevion.....	2962	Vibrant.....	3154
Songdian.....	4136			Texet.....	2963	Victor.....	3155
Soniko.....	2669	T		Thes.....	3769 (DB1)	Videologic.....	3165
Sonitron.....	2671	T.D.E. Systems.....	2822	Thomson.....	2972	Videologique.....	3166
Sonneclair.....	2673	Tactus.....	2825	Thorn.....	2974	Video.....	4227
Sonoko.....	2675	Taishan.....	2835	Tiankeban.....	4142	Videosat.....	3170
Sonolor.....	2676	Taisho.....	2836	Tobo.....	2999	VideoSystem.....	3172
Sontec.....	2677	Tandberg.....	2842	Tokai.....	3001	Videotechnic.....	3173

Videoton.....	3174	X	
Viewmaster.....	3182	Xbox.....	3295
Viewsonic.....	3186	Xiahua.....	3299
Viore.....	3192 (DB1)	Xiangyu.....	3302
Visiola.....	3197	Xingfu.....	3305
Vision.....	3198	Xinghai.....	3306
Vistar.....	3207	Xinrisong.....	3308
Visual Innovations...	4773 (DB1)	XLogic.....	3310
Vivax.....	3601 (DB1)	XMS.....	3312
Vivid.....	3210 (DB1)	Xoro.....	3315
Vortec.....	3217	Xrypton.....	3317
Voxson.....	3220	Xuelian.....	3320

W

Waitec.....	3227	Y	
Waltham.....	3230	Yakumo.....	3324
Watson.....	3233	Yamada.....	3325
Watt Radio.....	3234	Yamaha.....	3326
Wega.....	3238	Yamakawa.....	3327
Wegavox.....	3239	Yamishi.....	3328
Welkin.....	3242 (DB1)	Yokan.....	3335
Wellington.....	3243 (DB1)	Yoko.....	3336
Welltech.....	3244	Yorx.....	3340
Weltblick.....	3245	Yuhang.....	3345
Weltstar.....	3247 (DB1)	Yukai.....	3346
Weston.....	3251	Yüsmart.....	4777 (DB1)
WestStar.....	3519 (DB1)	Z	
Wharfedale.....	3255	Zanussi.....	3349
White Westinghouse		Zenith.....	3356
.....	3258	ZhuHai.....	3364
Wilson.....	3260 (DB1)		
Windsor.....	3265 (DB1)		
Windstar.....	3266		
Wintel.....	3271 (DB1)		
World-of-Vision.....	3282 (DB1)		
Woxter.....	3286		

 (DB1) Brands only available from version DB1 onwards.
You can find the DB version on the sticker inside the battery compartment.

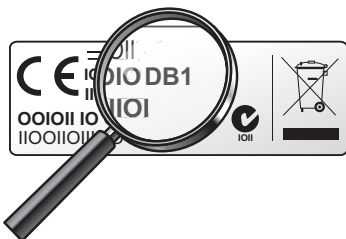

EN Information to the consumer

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:

Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



Battery information

Your product operates on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.



© 2011 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5355 3

December 2011

www.philips.com

RTP/4911