

Register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome)



AZ1066

EN User Manual

ZH-TW 使用手冊

# PHILIPS



© 2011 Koninklijke Philips Electronics N.V.

All rights reserved.

AZ1066\_96\_UM\_V1.1\_wk11212



# EN

## 1 Important

### Safety

#### Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:**
  - Install all batteries correctly, + and - as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.
  - The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

- Apparatus shall not be exposed to dripping or splashing.**
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).**

#### Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

#### Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

## 2 Your CD Soundmachine

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### Introduction

With the CD Soundmachine you can

 
 
- play audio disc
- play cassette tape
- listen to FM/MW radio
- recording music/voice to tape.
- You can also enhance the sound with the Dynamic Bass Boost feature.

### What's in the box

Check and identify the contents of the package:

- CD Soundmachine
- AC power cord
- User Manual

### Overview of the main unit

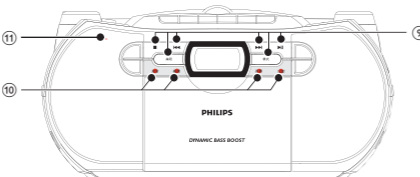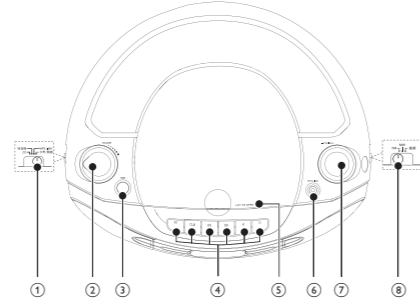

- Source selector: CD, TUNER, MP3 LINK,TAPE/OFF**
  - Select source: CD, radio, MP3 or Tape
  - Switch to standby mode
- VOLUME**
  - Adjust volume level
- DBB**
  - Turn the bass enhancement on/off
- Cassette recorder buttons**
  - Pause play or record
  - Stop cassette play or record
  - Open the cassette holder
  - Fast forward
  - Fast rewind
  - Start cassette play
  - Start cassette record

- LIFT TO OPEN**
  - Open/Close the CD compartment
- MP3 LINK**
  - Socket for audio input

- TUNING +/-**
  - Tune to radio stations

- FM/MW/ 複讀**
  - Select radio band: FM or MW
  - Switch to Repeat mode.
- CD buttons**
  - Stop CD play
  - Erase a CD program
  - Select the previous/next track
  - Fast search backward/forward within the current track
  - Start or pause CD play
  - Program tracks and browse the program
  - Repeat function buttons
    - Repeat the previous 120 seconds' CD or tape content
    - Record voice
    - Play both the recorded voice and repeat content for comparison
    - Cancel repeat and start playing CD or tape
- Built-in microphone**

## 3 Get started

#### Caution

- Use the controls only as stated in this user manual.
- Always follow the instructions in this chapter in sequence.

 
If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

### Install batteries

- Open the battery compartment.

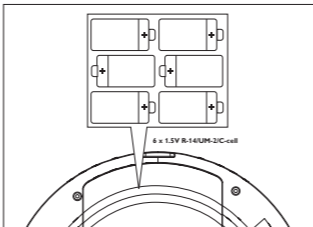

- Insert 6 x 1.5V R14/UM-2/C-cell batteries with correct polarity (+/-) as indicated.

- Close the battery compartment.

#### Tip

- If you want to save battery life, use the supplied power cord.

 
### Connect AC power

#### Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the product.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.

#### Note

- Install the unit near the power supply socket and where the AC power plug can be easily reached.

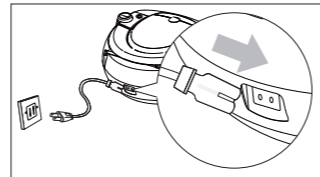

- Connect the power cord to the **AC MAINS~** socket on the CD Soundmachine and to the power supply socket.
  - To switch the CD Soundmachine off completely, disconnect the power cord from the power supply socket.

#### Tip

- To save energy: After use, set the source selector to **OFF**. To turn off the CD Soundmachine completely, disconnect the plug from the power supply socket.

## 4 Play a CD

#### Note

- You cannot play CDs encoded with copyright protection technologies.

You can play commercially available audio:

- CDs
- CD-Recordables (CD-R)
- CD-Rewritables (CD-RW)

- Switch the source selector to **CD**.
- Lift the lid of the CD compartment.
- Insert a CD with the printed side facing up.
- Close the CD lid gently.
  - The total number of tracks is displayed.

- Press **▶||** to start play.
  - [▶] is displayed.
    - To pause CD play, press **||**.
    - To resume CD play, press **▶||** again.
    - To stop CD play, press **■**.



### Select a track

- During play, press **◀◀/▶▶** to select a track.

### Find a passage within a track

- During play, press and hold **◀◀/▶▶**.
  - The CD is played at high speed and with reduced volume.
- Release **◀◀/▶▶** to resume normal play.

#### Tip

- When search reaches the end of the last track, the CD stops.

### Program play sequence

You can store up to 20 tracks in the desired sequence.

- In stop mode, press **编程** to start to program play sequence.
  - [PROG] and [00] are displayed.
- Press **◀◀/▶▶** to select a track.
- Press **编程** to store the track.
- Repeat steps 2 to 3 to select and store all tracks.
  - When all 20 tracks are stored, no more tracks can be selected and the display shows [---].
- To play program, press **▶||**.
  - In stop mode, press **编程** repeatedly to browse stored tracks.
  - To cancel program, press **■** twice.



#### Tip

- When program play stops, the CD Soundmachine returns to normal play. To play program again, repeat steps 1 to 5.

### Repeat play

You can repeat a track, a disc, or a program.

- [**↻**] – plays the current track continuously
  - [**↻** ALL] – repeats the entire CD/program
- During play, press **模式** repeatedly until the display shows the repeat icon.
    - Repeat one track.
    - Repeat the entire CD.
    - To stop repeat play, press **模式** repeatedly until the repeat icon is no longer displayed.



### Shuffle play

You can play all tracks in random order.

- During play, press **模式** repeatedly until the display shows the shuffle icon.
  - To stop shuffle play, press **模式** again.



## 5 Play cassette recorder

- Switch the source selector to **TAPE/OFF**.
- Press **■▲** to open the cassette holder.
- Insert a cassette tape with the full reel on right side, and then close the cassette holder.
- Press **▶** to start play.
  - To pause play, press **||**.
  - To stop the play, press **■▲**.

### Find a passage within a tape

- During stop, press **◀◀/▶▶** to search for a desired passage in a tape.
- To stop fast search, press **■▲**.

### Record from CD

- Switch the source selector to **CD**.
- Insert a CD with the printed side facing up.
- If you want to record tracks in the desired sequence, program the desired tracks. (See 'Program play sequence' section)
- Press **■▲** to open the cassette holder.
- Insert a blank cassette, and close the holder.
- Press **●** to start to record.
  - To pause, press **||**.
  - To resume, press **▶||** again.
  - To stop, press **■▲**.

### Record from radio

- Switch the source selector to **TUNER**.
- Tune to a radio station.
- Press **■▲** to open the cassette holder.
- Insert a blank cassette with the full reel on the right side, then close the holder.
- Press **●** to start to record.
  - To pause, press **||**.
  - To resume, press **▶||** again.
  - To stop, press **■▲**.

## 6 Use Learning function

When you are listening to CD or tape, you can let the CD soundmachine to play repeatedly the last played 120 seconds' content. You can also record down your own voice for comparison. This is especially useful for language learning or whatever:

- Switch the source selector to **CD** or **TAPE/OFF**.
- Set **FM/MW/ 複讀** switch to **複讀** mode.
- Press **▶||** or **▶** to start play.
  - The red light under the **收音** button illuminates.
  - The CD soundmachine starts recording what is played onto its built-in memory. Maximum recording length is 120 seconds.

### Listen to the recorded content repeatedly

- Press **複讀**.
  - The red light under **複讀** button illuminates.
  - CD or Tape stop playing. It plays the recorded content repeatedly.
- To pause, press **複讀**.
  - To resume, press **複讀** again.

#### Tip

- if you want the CD soundmachine to start record on other position, play the source at the position you want and then press **收音** to start the recording again and replace the previous recording.

### Record your voice

#### Note

- To ensure recording quality, keep the distance between you and the microphone within 30cm.
- The maximum recording length is also 120 seconds.

- Press **跟讀**.
  - The red light under the **跟讀** button illuminates.
- Speak/sing to the built-in microphone which is located on the top side of the left speaker.
  - To erase what's recorded, press **跟讀** again.

Speak/sing to the microphone to record new content.

### Compare your voice with the original recording

- Press **比對** briefly.
  - The red light under the **比對** button illuminates. It plays the record of your voice repeatedly.
  - To pause, press **比對**. Press **比對** again to resume repeatedly playing.
- Press **比對** for more than 3 seconds.
  - It plays both the recorded voice and the original recording repeatedly.

### Exit Learning mode

To stop Repeat, recording or comparing, press **收音**.

- CD or Tape resume playing.

#### To exit Learning mode

- Switch **FM/MW/ 複讀** to **FM** or **MW** position.

## 7 Listen to radio

- Switch the source selector to **TUNER**.
- Turn **BAND** to **FM** or **MW**.
- Turn **TUNING +/-** to find a station.

#### Tip

- To improve FM reception, you can extend, incline or turn the telescopic antenna for best reception.
- To improve MW reception, turn the CD Soundmachine to face a different direction.

## 8 Troubleshooting

#### Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site ([www.philips.com/support](http://www.philips.com/support)), or contact Philips (see Contact information). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

#### No power

- Ensure that the power cord is connected securely.
- Ensure that there is power at the power supply socket.
- Ensure that the batteries are installed correctly.

#### No sound

- Adjust the volume.
- Check if it's in Repeat mode.
- Ensure that the track played is of a compatible format.

**Display does not function properly/No reaction to operation of any of the controls.**

- Disconnect the AC power cord.
- Connect the AC power cord after a few seconds.

#### Cannot play disc

- Ensure that the disc label is inserted with the printed side facing up.
- Wipe the disc with fibre cleaning cloth from the centre to the edge in a straight line.
- This disc may be defective. Play another disc.
- Ensure that the CD is a finalised CD/CD-R/CD-RW.
- Ensure that the laser lens is clean.
- Ensure that the CD is not encoded with copyright protection technologies.

#### The CD skips tracks

- Ensure that the CD is not damaged or dirty.
- Ensure that program/shuffle mode is deactivated.

#### Poor cassette sound quality

- Ensure that heads in the cassette holder are clean.
- Ensure that a NORMAL (IECI) cassette tape is used for record.

#### Cassette does not work for record

- Ensure that cassette tabs are not broken.
- Check if it's in Repeat mode. If yes, exit Repeat mode first. (See 'Play Repeat function' section).

## 9 Product information

#### Note

- Product information is subject to change without prior notice.

Dimensions (Main unit) (W x H x D)	291 x 146 x 243 mm 11.5 x 5.8 x 9.6 inches
Weight (Main unit)	1.8 kg 3.8 pound
Power supply	DC 9V 1.5 A AC 110-127/220-240 V~
Power consumption	Active 12W Standby < 2W
Power output	2 x 1W RMS
Operating temperature range	-10°C - +50°C 14°F - 122°F

## 10 Notice

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

**This apparatus includes this label:**

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Electronics may void the user's authority to operate the equipment.

#### Warning

- Keep this apparatus away from direct sunlight, naked flames or heat.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

### Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.

#### Note

- The type plate is located on the bottom of the apparatus.

# ZH-TW

## 1 重要事項

### 安全性

#### 重要安全性指示

- 閱讀這些指示
- 請妥善保存這些指示
- 注意所有警告文字。
- 遵循所有指示。
- 請勿在近水處使用本產品。
- 清潔時僅能使用乾布。
- 請勿阻塞任何通風口。請依照製造商的指示進行安裝。
- 請勿將本產品安裝在接近熱源處，例如暖器裝置、暖氣孔、火爐或其他會產生高溫的產品 (包括擴大機在內)。
- 妥善保護電源線，避免踩踏或夾壓，尤其是插頭、便利插座，以及電源線與產品的連接處。
- 僅使用原廠指定的附件/配件。
- 僅使用經原廠指定或隨產品銷售的推車、底座、三腳架、支架或桌子。使用推車移動產品時應謹慎小心，避免因翻覆而造成傷害。



- 如遇雷雨或長時間不使用時，請將產品的插頭拔除。
- 所有維修服務應委託合格的服務人員處理。 當本產品因故損壞時 (例如電源線或插頭損壞、液體潑濺、物品掉入產品內部、產品淋到雨或受潮、無法正常運作或摔落等)，都必須進行維修。
- 電池使用注意事項 — 為防止電池滲漏導致人身傷害、財物受損或產品損壞：
  - 請依照裝置上標示的 + 與 - 極正確安裝所有電池。
  - 請勿混用電池 (新舊混用或碳鹼性電池混用等)。
  - 若裝置長時間不使用時，請將電池取出。
  - 電池請勿暴露在過度的熱源下，例如日照或火焰等。
- 請勿將產品置於容易滴水或濺水的環境。
- 請勿在產品上放置危險物品 (如盛裝液體的容器、點燃的蠟燭等)。

#### 警告

- 請勿打開產品外殼。
- 請勿在本產品的任何部位使用潤滑油。
- 請勿將本產品放置在其他電器上。
- 請勿讓本產品直接曝曬於陽光下，或靠近未隔離的火鍊或熱源。
- 請勿直視本產品內的雷射光。
- 請確保電源線、插頭或變壓器位於容易取得的地方，以方便中斷產品電源。

- 在電源插頭或電器連接器作為中斷連接裝置之處，中斷連接裝置應保持隨時可操作。

#### 注意

- 使用本手冊以外的方法來控制、調校或不按順序操作，可能會導致危險輻射外洩或造成危險。

## 2 您的 CD Soundmachine

感謝您購買本產品，歡迎使用 Philips 產品！請至 [www.philips.com/welcome](http://www.philips.com/welcome) 登錄您購買的產品，以獲得 Philips 的完整支援。

### 簡介

有了 CD Soundmachine，您可以：

 
- 播放音訊光碟
- 播放卡帶
- 收聽 FM/MW 廣播
- 將音樂/聲音錄製到卡帶。
- 您也可以透過動態低音增強功能來強化音效。

### 內容物

請清點包裝內容物：

- CD Soundmachine
- AC 電源線
- 使用手冊

### 主裝置概覽

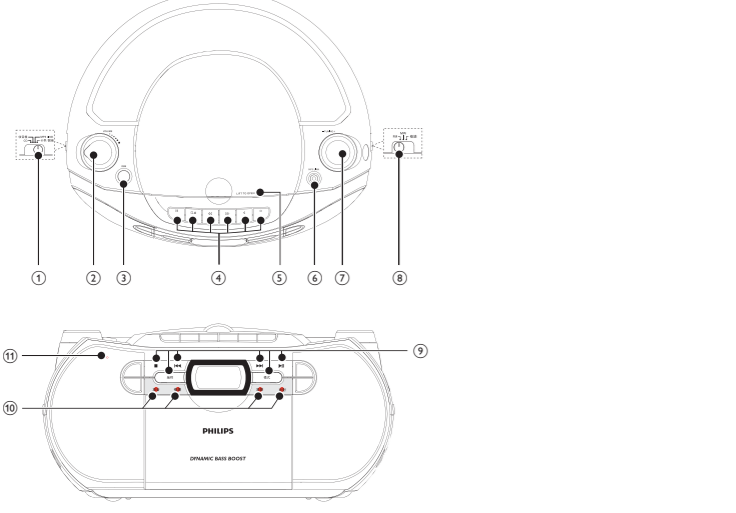

- 音源選擇鈕**：CD、TUNER、MP3 LINK、TAPE/OFF
  - 選擇來源：CD、收音機、MP3 或卡帶
  - 切換待機模式
- VOLUME**
  - 調整音量大小

- DBB**
  - 開啟/關閉低音增強
- 卡式錄音機按鈕**
  - ⏸** 暫停播放或錄製
  - /▲** 停止卡帶播放或錄製
    - 開啟卡帶槽
  - ◀◀** 快轉
  - ▶▶** 倒轉
  - ◀** 開始卡帶播放
  - 開始卡帶錄製

- LIFT TO OPEN**
  - 開啟/關閉 CD 插槽

- MP3 LINK**
  - 音源輸入孔

- TUNING +/-**
  - 調諧至廣播電台

- FM/MW 複讀**
  - 選擇收音機波段：FM 或 MW
  - 切換至重複模式。

- CD 按鈕**
  - 停止 CD 播放
    - 消除 CD 編程
  - ◀◀/▶▶** 選擇上一曲目/下一曲目
    - 目前曲目快轉/倒轉搜尋
  - ⏸** 開始或暫停 CD 播放。
  - 模式**
    - 選擇播放模式：REPEAT (重複) 或 SHUFFLE (隨機)
  - 編程**
    - 編排曲目並瀏覽編程
- 重複功能按鈕**
  - 複讀**
    - 重複播放前 120 秒的 CD 或卡帶內容
  - 跟讀**
    - 錄音
  - 比對**
    - 播放錄製的語音
    - 同時播放錄製的語音及重複內容以進行比對
  - 收音**
    - 取消重複，開始播放 CD 或卡帶

- 內建麥克風**

## 3 開始使用

 
### 注意

- 請依本使用者手冊之說明使用控制項目。
- 請務必依順序遵循本章指示。

若您與 Philips 聯絡，則將需要提供播放機的機型與序號。 機型與序號位於播放機底部。 將號碼填寫與此：
型號 \_\_\_\_\_
序號 \_\_\_\_\_

### 安裝電池

- 打開電池插槽。

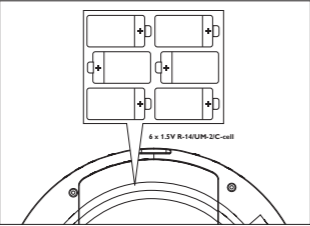

- 請安裝 6 顆 1.5V R14/UM-2/C-cell 電池，並依正負極指示 (+/-) 正確安裝。
- 蓋上電池插槽。

### 秘訣

- 若您想節省電池銷耗，請使用隨附之電源線。

 
### 連接 AC 電源

### 警告

- 產品可能會損壞！ 確定電源的電壓與產品背面或底部所印的電壓相符。
- 有觸電危險！ 拔掉 AC 電源變壓器的插頭時，務必握住插頭，自插座上拔下。切勿拉扯電源線。

### 備註

- 請將裝置放在靠近電源插座處，便於連接 AC 電源插頭。

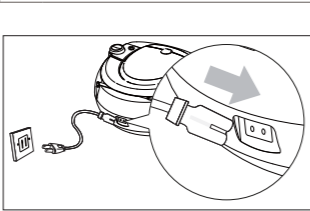

- 將電源線接上 CD Soundmachine 的 AC MAINS~ 插座，另一端連接電源插座。
  - 若您想依喜好的順序錄製曲目，請先編排喜好的曲目。
  - 要完全將 CD Soundmachine 關機，請將插頭自電源插座上拔除。

### 秘訣

- 節約能源：使用完畢後，請將音源選擇鈕切換至 OFF。要完全將 CD Soundmachine 關機，請將插頭自電源插座上拔除。

## 4 播放 CD

### 備註

- 您無法播放受版權保護技術編碼的 CD。

您可播放下列市售的音樂來源：

- CD
- 可燒錄 CD (CD-R)
- 可覆寫 CD (CD-RW)

- 切換音源選擇鈕至 CD。
- 掀開 CD 插槽上蓋。
- 放入 CD，封面朝上。
- 輕輕關上 CD 上蓋。
  - 會顯示曲目總數。
- 按下 **▶▶** 開始播放。
  - 會顯示 **[ ]**。
  - 要暫停 CD 播放，請按 **▶▶**。
  - 要繼續 CD 播放，再按一次 **▶▶**。
  - 要停止播放 CD，請按 **■**。

### 選擇曲目

- 在播放時，按下 **◀◀/▶▶** 選擇曲目。

### 搜尋曲目中的段落

- 在播放時，按住 **◀◀/▶▶**。
  - CD 會以高速播放，並且音量降低。
- 放開 **◀◀/▶▶**，繼續正常播放。

### 秘訣

- 搜尋至最後一首曲目的尾端時，CD 將停止播放。

### 編排播放順序

您可以依喜好，儲存最多 20 首曲目的播放順序。

- 在停止狀態按下 **編程** 開始編排播放順序。
  - 會顯示 [PROG] 與 [00]。
- 按 **◀◀/▶▶** 選擇曲目。
- 按 **編程** 儲存曲目。
- 重複步驟 2 至步驟 3，選擇並儲存所有曲目。
  - 20 首曲目全部儲存後，便無法再選擇更多曲目，將顯示 [---]。
- 要播放編程，請按 **▶▶**。
  - 在停止狀態重複按下 **編程**，瀏覽儲存的曲目。
  - 要取消編程，按下 **■** 兩次。

### 秘訣

- 編程播放停止後，CD Soundmachine 將回復一般方式播放。要再度播放編程，請重複步驟 1 至步驟 5。

### 重複播放

您可以重複播放單一曲目、光碟或編程。

- [∞]** 一連續播放目前曲目
- [∞ ALL]** 一重複播放整張 CD/整個編程

- 於播放時，重複按下 **模式**，直到顯示重複記號為止。
  - 重複播放單一曲目。
  - 重複播放整張 CD。
  - 要停止重複播放，重複按下 **模式**，直到不再顯示重複圖示為止。

### 隨機播放

您可以隨機方式播放所有曲目。

- 於播放時，重複按下 **模式**，直到顯示隨機圖示為止。
  - 若要停止隨機播放，請再按一次 **模式**。

## 5 播放卡帶

- 切換音源選擇鈕至 TAPE/OFF。
- 按下 **■▲** 打開卡帶槽。
- 放入磁帶完全捲至右邊的卡帶，然後關上卡帶槽。
- 按 **◀** 開始播放。
  - 要暫停播放，請按 **⏸**。
  - 要停止播放，請按 **■▲**。

### 搜尋卡帶中的段落

- 在停止狀態按下 **◀◀/▶▶**，在卡帶中搜尋要找的段落。
- 要停止快速搜尋，請按 **■▲**。

### 將 CD 錄製到卡帶

- 切換音源選擇鈕至 CD。
- 放入 CD，封面朝上。
- 若您想依喜好的順序錄製曲目，請先編排喜好的曲目。(請參閱「編排播放順序」小節)
- 按下 **■▲** 打開卡帶槽。
- 放入空白卡帶，然後關上卡帶槽。
- 按下 **●** 開始錄製。

- 若要暫停，請按 **⏸**。
- 若要繼續，請再次按下 **▶▶**。
- 若要停止，請按 **■▲**。

### 將廣播錄製到卡帶

- 切換音源選擇鈕至 TUNER。
- 調至廣播電台。
- 按下 **■▲** 打開卡帶槽。
- 放入磁帶完全捲至右邊的空白卡帶，然後關上卡帶槽。
- 按下 **●** 開始錄製。
  - 若要暫停，請按 **⏸**。
  - 若要繼續，請再次按下 **▶▶**。
  - 若要停止，請按 **■▲**。

## 6 使用學習功能

聽 CD 或卡帶時，可以讓 CD Soundmachine 重複播放最後播放的 120 秒內容。您也可以錄下自己的聲音進行比對。這項功能對於語言學習之類的用途特別實用。

- 將音源選擇鈕切換至 CD 或 TAPE/OFF。
- 將 FM/MW 複讀 開關設為 複讀 模式。
- 按 **▶▶** 或 **◀** 開始播放。
  - 收音 按鈕下的紅燈會亮起。
  - CD Soundmachine 會開始將播放內容錄製到其內建記憶體中。錄製長度上限為 120 秒。

### 重複聆聽錄製的內容

- 請按 **複讀**。
  - 複讀** 按鈕下的紅燈會亮起。
  - CD 或卡帶會停止播放。播放機會重複播放錄製的內容。
- 若要暫停，請按 **複讀**。
  - 若要繼續，請再次按下 **複讀**。

### 秘訣

- 如果希望 CD Soundmachine 在其他地方開始錄音，請根據您想要的地方播放音源，然後按 **收音**，再次開始錄音，同時取代先前的錄音。

### 錄製您的聲音

### 備註

- 為確保錄音品質，與麥克風的距離請保持在 30 公分以內。
- 錄製長度上限也是 120 秒。

- 請按 **跟讀**。
  - 跟讀** 按鈕下的紅燈會亮起。
- 對著內建麥克風說話/唱歌，內建麥克風位於左揚聲器的頂端。
  - 若要清除錄製內容，請再按一次 **跟讀**。

對著麥克風說話/唱歌以錄製新內容。

### 比對您的聲音與原始錄音

- 短按比對**。
  - 比對** 按鈕下的紅燈會亮起。播放機會重複播放您錄下的聲音。
  - 若要暫停，請按 **比對**。再按一次 **比對** 即可繼續重複播放。
- 按比對** 達 3 秒以上。
  - 播放機會同時重複播放錄製的聲音與原始錄音。

### 退出學習模式

若要停止重複、錄製或比對，請按 **收音**。

- CD 或卡帶便會繼續播放。

若要退出學習模式

- 將 FM/MW 複讀 切換至 FM 或 MW 的位置。

## 7 收聽廣播

- 切換音源選擇鈕至 TUNER。
- 將 BAND 切換至 FM 或 MW。
- 轉動 TUNING +/- 尋找電台。

### 秘訣

- 要改善 FM 收訊，您可以拉長、傾斜，或轉動伸縮天線以獲得最佳品質。
- 要改善 MW 收訊，請轉動 CD Soundmachine，使其朝向不同方向。

## 8 疑難排解

### 警告

- 請勿打開產品外殼。

為維持有效的保固，請勿自行嘗試修理系統。如果您在使用本產品時發生任何問題，請在送修前先行檢查下列項目。如果問題仍然沒有解決，請造訪 Philips 網站 ([www.Philips.com/support](http://www.Philips.com/support))，或洽詢 Philips (請參閱聯絡資訊)。聯絡 Philips 前，請先備妥產品的型號編號與序號，並將產品備於手邊。

沒有電力

- 檢查電源線是否確實連接。
- 檢查電源插座是否供電。
- 檢查電池是否正確安裝。

沒有聲音

- 調整音量。
- 檢查是否處於重複模式中。
- 檢查播放的曲目格式是否相容。

顯示不正常。/對任何操作皆無反應。

- 拔下 AC 電源插頭。
- 數秒後，重新接上 AC 電源插頭。

**無法播放光碟**

- 請檢查放入光碟時，封面是否朝上。
- 請使用超細纖維的清潔布，以直線方向由中央到邊緣擦拭光碟。
- 光碟片可能有問題。請播放別張光碟。
- 請檢查 CD 是否為已終結的 CD/CD-R/CD-RW。
- 請檢查雷射讀取頭是否髒污。
- 請檢查該 CD 是否為受版權保護技術編碼之 CD。

**CD 跳軌**

- 請檢查 CD 是否損壞或髒污。
- 請檢查是否啟用編程/隨機播放模式。

**卡帶播放音質不佳**

- 請檢查卡帶槽內的磁頭是否髒污。
- 請檢查錄製時是否使用 NORMAL (IECI) 卡帶。

**卡帶無法錄製**

- 請檢查卡帶錄音檔片是否損壞。
- 檢查是否處於重複模式中。如果是的話，請先退出重複模式。(請參閱「播放重複功能」小節)。

## 9 產品資訊

### 備註

- 產品資訊可在未通知狀況下修改。

<span></span>	
尺寸 (主裝置) (寬 x 高 x 深)	291 x 146 x 243 公釐
重量 (主裝置)	11.5 x 5.8 x 9.6 英吋
重量 (主裝置)	1.8 公斤
	3.8 磅
電源供應	DC 9V 1.5 A
	AC 110-127/220-240 V~
耗電量	運作時 12W
	待機時 < 2W
輸出功率	2 x 1W RMS
作業溫度範圍	-10° C - +50° C
	14° F - 122° F

## 10 注意

錄製與播放的內容可能需要徵得同意。請參閱英國著作權法 (Copyright Act 1956) 與表演者權利保護法 (Performer’ s Protection Acts 1958 to 1972)。



製作受版權保護之未經授權的資料，包括電腦程式、檔案、廣播及聲音錄製品，可能構成侵害版權之行為並引起刑事訴訟。本設備不應用於此類用途。

**本產品包含此標籤：**



對裝置進行任何未經 Philips Consumer Electronics 明確允許的變更或修改可能會導致使用者喪失操作設備的權限。

### 警告

- 請勿讓本產品直接曝曬於陽光下，或靠近未隔離的火鍊或熱源。

您的產品包括了適用於歐洲指導原則 (European Directive) 2006/66/EC 的電池，不得與其他一般家用廢棄物共同丟棄。當產品附有打叉的附輪回收筒標籤，上面畫有化學符號 [Pb] 時，就表示此電池遵守指導原則設定的要求：



請了解當地有關電池的垃圾分類相關法規。正確處理廢棄電池有助於避免對環境和人類健康帶來負面影響。

### 回收



您的產品是使用高品質材質和元件所設計製造，可回收和重複使用。當產品附有打叉的附輪回收筒標籤時，代表產品適用於歐洲指導原則 (European Directive) 2002/96/EC：



請勿將您的產品與其他家用廢棄物共同丟棄。請了解當地電子及電器廢棄物的垃圾分類相關法規。正確處理廢棄產品有助於避免對環境和人類健康帶來負面影響。

**環境保護資訊**
所有非必要之包裝材料均已捨棄。我們嘗試讓包裝可以輕易拆解成三種材質：厚紙板 (外盒)、聚苯乙烯泡棉 (防震) 以及聚乙烯 (包裝袋、保護性泡棉膠紙)。產品本身含有可回收並重複使用的材質，但是需由專業公司拆解。請根據各地法規丟棄包裝材料、廢電池和舊機器。請勿使用溶劑，例如苯、稀釋劑、商用清潔劑，或者專為磁碟設計的抗靜電噴劑。

### 備註

- 機型牌位於產品底部。