

# Quick Start Guide




Step A *Connect*

Step B *Setup*

Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

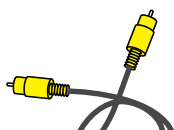

Composite Video Cable




Quick Start Guide



Remote control with battery

Remove the plastic protective sheet

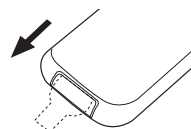

FM antenna



User Manual

# PHILIPS

## Step A *Connect*

### Tip

See the User Manual for other TV connection options.

1

Connect the speaker cables.

2



Connect the FM antennas.

3


Connect the composite video cable to a TV.

4

Connect the power cords of the system and TV.

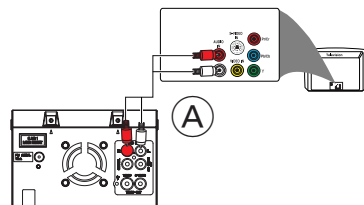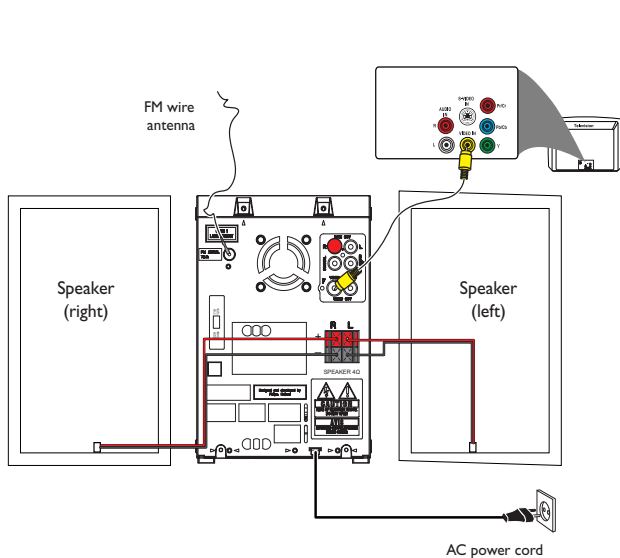

(A) To listen to the sound of this DVD Player through your TV, use the audio cables (white/red-not supplied) to connect **LINE OUT (L/R)** jacks of the DVD Player to the corresponding **AUDIO IN** jacks on the TV.

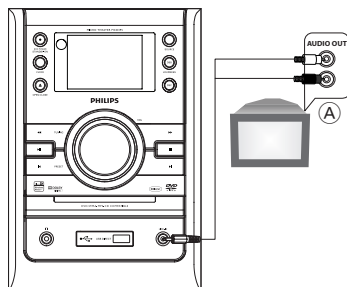

(B) To listen to the sound of your TV through this DVD player, use a cinch cable (not supplied) to connect **LINE-IN** on the front panel of the DVD player to the corresponding **AUDIO OUT** jacks on the TV.

## Step B *Setup*


### Setting up the TV

1

Press **SOURCE** (**DISC** on the remote) to select disc source.

2

Turn on the TV and set it to the correct Video In channel.

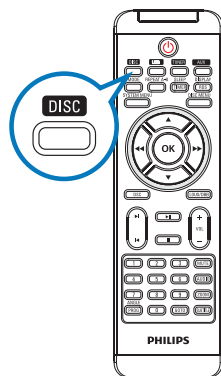


## Step B Setup

### Setting the clock

*Important!*


– To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY-ON** on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

- 1 In standby mode, press and hold **CLOCK** on the system.
- 2 When the hour digits flash, turn the **VOL** control on the front panel or press **VOL +/-** on the remote to set the hours.
- 3 Press **CLOCK** again and the minute digits flash. Then turn the **VOL** control on the front panel or press **VOL +/-** on the remote to set the minutes.
- 4 Press **CLOCK** again to confirm the time setting.

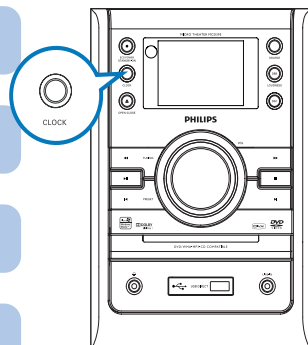





### Before using the remote control

 - 1 Pull out the plastic protective sheet.
- 2 Select the source you wish to control by pressing one of the source select keys on the remote control (for example **CD, TUNER**).
- 3 Then select the desired function (for example **▶ II**, **◀◀**, **▶▶**)

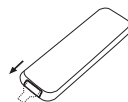


Remove the plastic protective sheet

### Setting system menu options

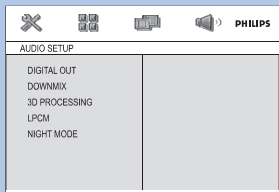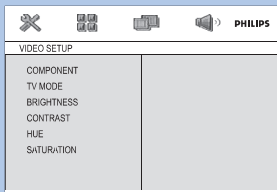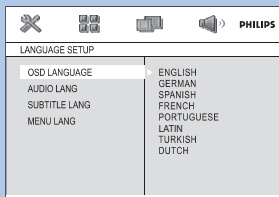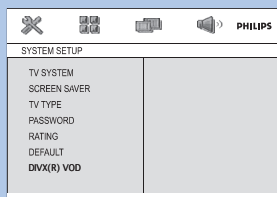


#### Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

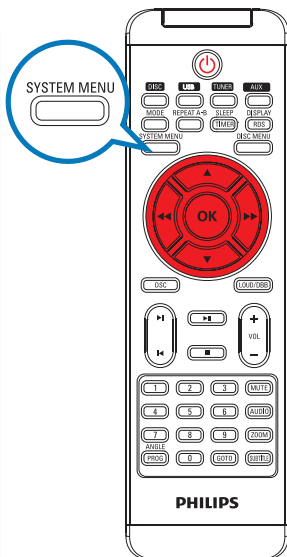

## Playing a disc



Press **OPEN•CLOSE**  to open the disc tray and load in a disc, then press the same button again to close the disc tray.

→ Make sure the label side of the disc is facing up.



2 Playback will start automatically. If not press ►.

3 To stop playback, press ■.

## Programming and tuning to radio stations

Press **SOURCE** (**TUNER** on the remote) to select tuner source.

2 Press **PROG/ANGLE** for more than two seconds to program all available stations in order of waveband.


3 Press **PRESET**   until the desired preset station is displayed.

**Tip**

Detailed playback features and additional functions are described in the accompany owner's manual.

## Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

Insert the USB device's USB plug into the socket  on the front panel of the main set.

2 Press **SOURCE** (or **USB** on the remote control) once or more to select **USB**.

3 Play the USB's audio files as you do with the albums/tracks on a CD.

