

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

DC350/12



---

EN	User manual	3	FR	Mode d'emploi	97
DA	Brugervejledning	26	IT	Manuale utente	121
DE	Benutzerhandbuch	49	NL	Gebruiksaanwijzing	146
ES	Manual del usuario	73	SV	Användarhandbok	171

---

**PHILIPS**

# Contents

---

<b>1</b>	<b>Important</b>	4
	Safety	4
	Notice	5
<hr/>		
<b>2</b>	<b>Your Docking Entertainment System</b>	6
	Introduction	7
	What's in the box	7
	Overview of the main unit	7
	Overview of the remote control	10
<hr/>		
<b>3</b>	<b>Get started</b>	12
	Prepare the remote control	12
	Connect power	13
	Set clock and date	13
	Turn on	14
<hr/>		
<b>4</b>	<b>Play</b>	14
	Play from iPod/iPhone	14
	Play from an external device	16
<hr/>		
<b>5</b>	<b>Adjust sound</b>	16
	Adjust volume level	16
	Enhance bass	16
	Select a preset sound effect	16
	Mute sound	17
<hr/>		
<b>6</b>	<b>Listen to radio</b>	17
	Tune to a radio station	17
	Program radio stations manually	17
	Select a preset radio station	18
<hr/>		
<b>7</b>	<b>Use Bluetooth devices</b>	18
	Connect with a Bluetooth device	18
	Receive a phone call	20
	Listen to music	20
<hr/>		
<b>8</b>	<b>Other features</b>	21
	Set the alarm timer	21
	Set the sleep timer	22
	Adjust display brightness	22
<hr/>		
<b>9</b>	<b>Product information</b>	22
	Specifications	22
<hr/>		
<b>10</b>	<b>Troubleshooting</b>	24

# 1 Important

---

## Safety

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ For countries with a polarized mains, do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.  
Caution: To prevent electric shock, match the wide blade of the plug to the wide slot, fully insert.
- ⑩ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑪ Only use attachments/accessories specified by the manufacturer.
- ⑫ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- ⑬ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑭ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



- ⑩ **Battery usage CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
- Install all batteries correctly, + and - as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.
- ⑪ Apparatus shall not be exposed to dripping or splashing.
- ⑫ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑬ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).
- ⑭ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



#### Warning

- Never remove the casing of this DC350.
- Never lubricate any part of this DC350.
- Never place this DC350 on other electrical equipment.
- Keep this DC350 away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside the DC350.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the DC350 from the power.



#### Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

---

## Notice

This product complies with the radio interference requirements of the European Community.

This product complies with the requirements of the following directives and guidelines: 2004/108/EC + 2006/95/EC

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



## Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.



### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



## Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundært innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

## 2 Your Docking Entertainment System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.Philips.com/welcome](http://www.Philips.com/welcome).

## Introduction

With this DC350, you can enjoy audio from the iPod, iPhone, other audio devices, or the radio.

If you own a Bluetooth-enabled device, you can also receive phone calls or listen to audio from the device.

The radio, iPod, or iPhone can be set as the alarm timer. You can set two alarm timers to go off at different times.

 
For the best sound quality, enrich sound from any source with Digital Sound Control (DSC) and Dynamic Bass Boost.





## What's in the box

Check and identify the contents of your package:

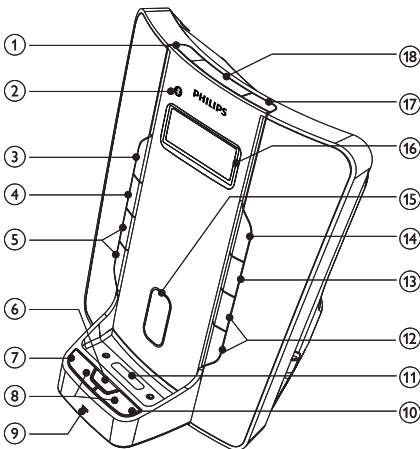
- Main unit
- Remote control
- 1 x AC adaptor
- 1 x MP3 link cable
- 1 x mini USB cable

## Overview of the main unit



 - ① **ALM 1**
- Set the first alarm timer.
  - View the first alarm time.
  - Turn off the first alarm tone.
- ② **Bluetooth indicator**
- Indicate Bluetooth connection.
- ③ 
- Turn on the DC350 or switch to standby mode.
  - Turn off an alarm tone.
- ④ **SLEEP**
- Set the sleep timer.
- ⑤ **PRESET +/-**
- Select a preset radio station.
- ⑥ **MUTE**
- Mute volume.
  - Mute the built-in microphone during a phone call.
- PROG**
- Program radio stations.
- TIME SET**
- Set the clock.
- ⑦ **PAIRING** 
- Pair the DC350 with a Bluetooth device.
  - Answer an incoming phone call.
  - During a phone call: select to hear the audio from the device or from the DC350.
- ⑧ 
- Skip to the previous/next audio file.
  - Search within an audio file.
  - Tune to a radio station.
  - Adjust time.
- ⑨ **MIC**
- Built-in microphone for phone calls.
- ⑩ 
- Reject an incoming phone call.
  - End a phone call.
  - Disconnect a device.
- ⑪ **iPod/iPhone dock**
- Load an iPod/iPhone.
- ⑫ **VOL +/-**
- Adjust volume.

- ⑬ **▶ ||**
  - Start or pause iPod/iPhone play.
- ⑭ **SOURCE**
  - Select a source: iPod/iPhone, Bluetooth, tuner or MP3 link.
- ⑮ **Tilt adjustment rod**
  - Move forward/backward to adjust the angle at which the iPod/iPhone tilts.
- ⑯ **Display panel**
  - Show current status.
- ⑰ **ALM 2**
  - Set the second alarm timer.
  - View the second alarm time.
  - Turn off the second alarm tone.
- ⑱ **REPEAT ALARM/BRIGHTNESS CONTROL**
  - Repeat an alarm tone at 9-minute intervals.
  - Adjust the display brightness.

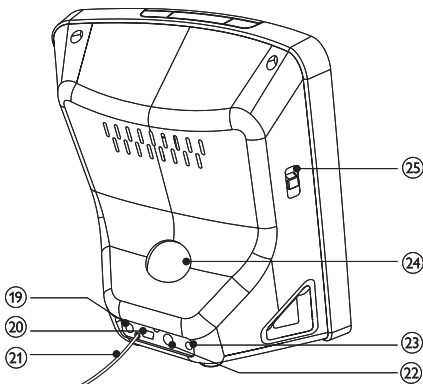


- ⑲ **MP3 LINK**
  - Audio input jack for an external audio device.
- ⑳ **TO PC**
  - Mini USB jack for synchronization between the iPod/iPhone and a computer.
- ㉑ **Pigtail**
  - Improve FM reception.





 
- ②② **DEMO**
  - Jack for a special device (not supplied) to demonstrate features of the DC350.
- ②③ **DC IN**
  - Jack for the supplied AC adaptor.
- ②④ **Tilt adjustment control**
  - Control the angle at which the iPod/iPhone tilts.
- ②⑤ **iPhone/iPod-RADIO-BUZZER**
  - Select alarm mode.
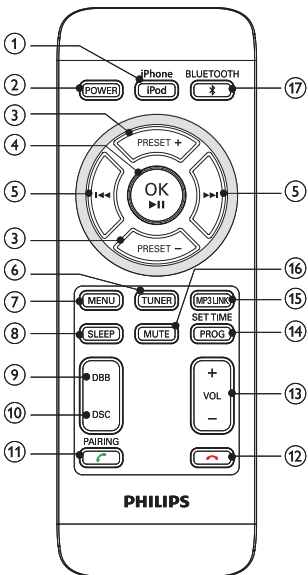
## Overview of the remote control



- ① **iPod/iPhone**
  - Select iPod/iPhone source.
- ② **POWER**
  - Turn on the DC350 or switch to standby mode.
  - Turn off an alarm tone.

- ③ **PRESET +/-**
- Select a preset radio station.
- ④ **▶|||/OK**
- Start or pause iPod/iPhone play.
  - Confirm an iPod/iPhone menu selection.
- ⑤ **◀◀▶▶▶**
- Skip to the previous/next audio file.
  - Search within an audio file.
  - Tune to a radio station.
  - Adjust time.
- ⑥ **TUNER**
- Select tuner source.
- ⑦ **MENU**
- Access iPod/iPhone menu.
- ⑧ **SLEEP**
- Set the sleep timer.
- ⑨ **DBB**
- Turn on or off dynamic bass enhancement.
- ⑩ **DSC**
- Select a preset sound setting: POP, JAZZ, CLASSIC or ROCK.
- ⑪ **PAIRING** 
- Pair the DC350 with a Bluetooth device.
  - Answer an incoming phone call.
  - During a phone call: select to hear the audio from the DC350 or from the device.
- ⑫ 
- Reject an incoming phone call.
  - End a phone call.
  - Disconnect a device.
- ⑬ **VOL +/-**
- Adjust volume.
- ⑭ **SET TIME/PROG**
- Set the clock.
  - Program radio stations.
- ⑮ **MP3 LINK**
- Audio input jack for an external audio device.
- ⑯ **MUTE**
- Mute volume.
  - Mute the built-in microphone during a phone call.
- ⑰ **BLUETOOTH** 
- Select Bluetooth source.

## 3 Get started



### Caution

- Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your DC350. The model number and serial number are on the bottom of your DC350. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

## Prepare the remote control



### Caution

 
- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.

**For first-time use:**

- 1 Remove the protective tab to activate the remote control battery.

**To replace the remote control battery:**

- 1 Open the battery compartment.
- 2 Insert 1 CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

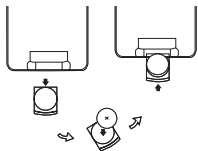

### Note

- Before pressing any function button on the remote control, first select the correct source with the remote control instead of the main unit.
- If you are not going to use the remote control for a long time, remove the battery.

 
# Connect power




## Caution

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the DC350.
- Risk of electric shock! When you unplug the AC adaptor; always pull the plug from the socket. Never pull the cord.
- Before connecting the AC adaptor, ensure you have completed all other connections.


- 1 Prepare the AC adaptor:

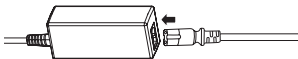

 - 2 Connect one end of the AC adaptor to the **DC IN** socket on the main unit.

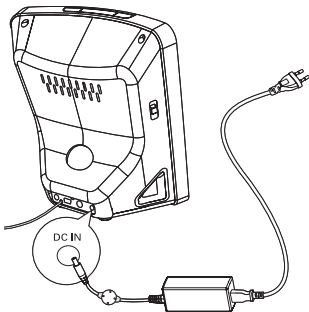

 - 3 Connect the other end of the AC adaptor to the wall outlet.

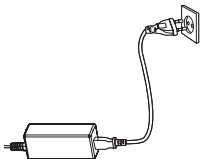

---

## Set clock and date

- 1 Press and hold **SET TIME** for 2 seconds.
  - 2 Press **▶||** repeatedly to select 12 hour or 24 hour format.
  - 3 Press **SET TIME** to confirm.  
↳ The hour digits are displayed and begin to blink.
  - 4 Press **◀◀▶▶** to set the hour.
  - 5 Press **SET TIME** to confirm.  
↳ The minute digits are displayed and begin to blink.
  - 6 Repeat steps 4-5 to set minute, year, month and day.
- 

## Turn on

- 1 Press **POWER**.  
↳ The DC350 switches to the last selected source.
- 

## Switch to standby

- 1 Press **POWER** again to switch the DC350 to standby mode.  
↳ The clock (if set) appears on the display panel.

# 4 Play

---

## Play from iPod/iPhone

You can enjoy audio from iPod/iPhone through this DC350.

 
---

### Compatible iPod/iPhone

Apple iPod and iPhone models with a 30-pin dock connector:

- iPod classic, iPod touch, iPod nano, iPod 5th generation (video), iPod with color display, iPod mini.
- iPhone, iPhone 3G.

## Load the iPod/iPhone

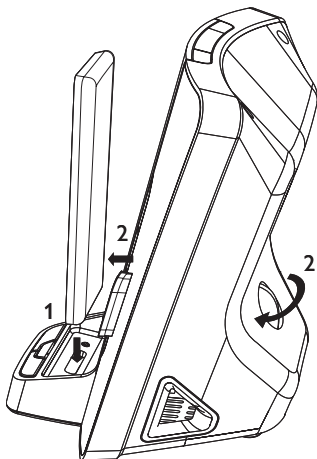

- 1 With the connectors facing each other, place the iPod/iPhone in the dock.
- 2 Turn the tilt adjustment control to adjust the angle at which the iPod/iPhone tilts.
  - ↳ When the DC350 is connected to power, the docked iPod/iPhone begins to charge.

## Remove the iPod/iPhone

- 1 Pull the iPod/iPhone out of the dock.

## Listen to the iPod/iPhone

- 1 Ensure that the iPod/iPhone is loaded correctly. (see 'Load the iPod/iPhone' on page 15)
- 2 Press **iPod/iPhone** to select iPod/iPhone source.
  - ↳ The connected iPod/iPhone plays automatically.
    - To pause/resume play, press ►||.
    - To skip to a track, press |◀◀▶▶|.
    - To search during play, press and hold |◀◀▶▶|, then release to resume normal play.
    - To navigate the menu, press **MENU**, and press **PRESET +/-** to select, then press ►||/OK to confirm.

---

## Connect to a computer

- 1 Load the iPod/iPhone in the dock.
- 2 Press **iPod/iPhone** select the iPod/iPhone source.
- 3 Connect the mini USB cable (supplied) to:
  - the **TO PC** jack (mini USB jack) on the back of the DC350.
  - the USB jack on the computer.

↳ If iTunes is installed on the computer, the connected iPod/iPhone begins to synchronize with iTunes. Refer to the device user manual for more details.

---

## Charge the iPod/iPhone

When the DC350 is connected to power, the docked iPod/iPhone begins to charge.

---

## Play from an external device

You can also listen to an external audio device through this DC350.

- 1 Press **MP3 Link** to select MP3 link source.
- 2 Connect the supplied MP3 link cable to:
  - the **MP3 LINK** jack (3,5mm) on the bottom of the DC350.
  - the headphone jack on an external device.

---

# 5 Adjust sound

---

## Adjust volume level

- 1 During play, press **VOL +/-** to increase/decrease the volume level.

---

## Enhance bass

- 1 During play, press **DBB** to turn on or off dynamic bass enhancement.  
↳ If DBB is activated, DBB is displayed.

---

## Select a preset sound effect

- 1 During play, press **DSC** repeatedly to select:
  - [POP] (pop)
  - [JAZZ] (jazz)
  - [CLASSIC] (classic)
  - [ROCK] (rock)

## Mute sound

- 1 During play, press **MUTE** to mute/unmute sound.

## 6 Listen to radio



### Note

- Only FM radio reception is available on this DC350.

## Tune to a radio station

- 1 Press **TUNER** to select FM.
- 2 Press and hold **◀◀▶▶** for more than 2 seconds.
  - ↳ [Srch] (search) is displayed.
  - ↳ The radio tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations.
  - To tune to a weak station, press **◀◀▶▶** repeatedly until you find optimal reception.

## Program radio stations manually

You can program a maximum of 40 preset radio stations.

- 1 Tune to a radio station.
- 2 Press and hold **PROG** for 2 seconds to activate program mode.
  - ↳ "PR01" blinks on the display.
- 3 Press **PRESET +/-** to allocate a number (1 to 40) to this radio station, then press **PROG** to confirm.
  - ↳ The preset number and the frequency of the preset station are displayed.
- 4 Repeat the above steps to program other stations.



### Note

- To overwrite a programmed station, store another station in its place.



---

## Select a preset radio station

- 1 Press **PRESET +/-** to select a preset number.



Tip

- Position the antenna as far as possible from TV, VCR or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.

## 7 Use Bluetooth devices

This DC350 can wirelessly receive audio from Bluetooth-enabled devices within a range of approximately 10 meters (30 feet).

### Supported Bluetooth profiles

This DC350 supports these Bluetooth profiles:

- Hands-Free Profile (HFP)
- Headset Profile (HSP)
- Advanced Audio Distribution Profile (A2DP)
- Audio Video Remote Control Profile (AVRCP)



Tip

- Before you use a Bluetooth-enabled with this DC350, read the user manual of the device for compatibility.

---

## Connect with a Bluetooth device



Note

- The operational range between this DC350 and a bluetooth device is approximate 10 meters (30 feet).
- Before you connect a Bluetooth device to this DC350, familiarize yourself with the bluetooth capabilities of the device.
- Compatibility with all Bluetooth device is not guaranteed.
- Any obstacle between this DC350 and a Bluetooth device can reduce the operational range by some level depending on what substance.
- Keep this DC350 away from any other electronic device that may cause interference.

## Connect a device for the first time

- 1 Press **BLUETOOTH** to select the Bluetooth source.  
↳ [BT] (Bluetooth) is displayed.
- 2 Press and hold **PAIRING** for more than 3 seconds.  
↳ [PAIRING] (Pairing) is displayed, and the Bluetooth indicator blinks.
- 3 On the device, set up the Bluetooth connection:
  - ① **Enable Bluetooth to search for other Bluetooth devices.** (Refer to the user manual on how to enable the function.)
  - ② **When “ PHILIPS DC350” is recognized and displayed, select it to start to connect.**
  - ③ **When prompted for a password, enter “0000”.**
- 4 Wait until you hear a double beep from the DC350.  
↳ The connection is complete. The Bluetooth indicator turns on.

### To connect more bluetooth devices


- 1 Disconnect the connected device. (see 'Disconnect a device' on page 19)
- 2 Repeat the steps 1-4 in “Connect a device for the first time”.



Tip

- If no connection is made within one minute, [FAILED] (failed) is displayed on the DC350.

## Disconnect a device

- 1 Press and hold  for more than 5 seconds  
↳ [DISCONNECT] (disconnect) is displayed on the DC350.
  - When you turn off the connected device or move it beyond the communication range, you hear a long beep from the DC350.

## Re-connect a device

After you have connected a device for the first time, once its Bluetooth function is enabled, it re-connects automatically. (see 'Connect a device for the first time' on page 19)

- 1 Ensure that on the device, you have turned on the Bluetooth function. (Refer to the user manual on how to enable the function.)
- 2 Turn on the DC350.
  - ↳ The Bluetooth connection is automatically made, and the Bluetooth indicator turns on.
  - ↳ When more than one previously-connected device is in the operational range: If an iPhone is docked, it is re-connected first. All other devices are re-connected sequentially. The first device that was connected for the first time will be re-connected first.



#### Tip

- This DC350 can memorize the connection information of up to 8 devices.





---

## Receive a phone call



#### Note

- You can receive phone calls through this DC350 with devices that support the HFP or HSP profile.

- 1 Connect the Bluetooth device. (see 'Connect with a Bluetooth device' on page 18)
- 2 When a call is received, you hear the incoming call alert tone. Press **PAIRING**  to accept the call.
  - To reject the call, press .
- 3 Speak into the **MIC** located on the front panel.
  - To increase or decrease the volume, press **VOL +/-**.
  - To mute the microphone, press **MUTE**. To unmute, press this button again.
  - To select to hear the audio from the device or from the DC350, press **PAIRING** .
- 4 Press  to end the call.



#### Tip

- To be heard more clearly, speak closer to the microphone.
- If an echo is heard, reduce the volume of the DC350.
- If you observe communication difficulties, position the Bluetooth device closer to this DC350.



---

## Listen to music



#### Note

- You can listen to audio through this DC350 from devices that support A2DP or AVRCP.

- 1 Connect the Bluetooth device. (see 'Connect with a Bluetooth device' on page 18)
- 2 On the Bluetooth device, start play.
  - ↳ You hear the music through this DC350.
    - To pause/resume play, press .
    - To skip to a track, press .

## 8 Other features

### Set the alarm timer

You can set two alarms which go off at different time.

- 1 Ensure that you have set the clock correctly. (see 'Set clock and date' on page 13)
- 2 Press and hold **ALM 1** or **ALM 2** on the main unit for 2 seconds.
  - ↳ Hour digits blink.
  - ↳ [AL 1] (alarm 1) or [AL 2] (alarm 2) is displayed.
- 3 Press **◀◀▶▶** repeatedly to set the hour.
- 4 Press **ALM 1** or **ALM 2** to confirm.
- 5 Press **◀◀▶▶** repeatedly to set the minute.
- 6 Press **ALM 1** or **ALM 2** to confirm.
  - To set the other alarm, repeat the steps 2 - 6.



Tip

- To view alarm time, press **ALM 1** or **ALM 2** repeatedly until alarm time is displayed.

### Set alarm mode

- 1 Adjust the **iPhone/iPod-RADIO-BUZZER** control on the main unit to select the source for the alarm.
  - ↳ When the alarm time comes, the selected Phone/iPod, or radio or buzzer turns on.



Tip

- If iPod/iPhone source is selected but no iPod/iPhone is loaded, the buzzer is selected automatically.

### Activate the alarm timer

- 1 Press repeatedly **ALM 1** or **ALM 2** on the main unit to activate or deactivate the timer.
  - ↳ If the timer is activated, [AL 1] (alarm 1) or [AL 2] (alarm 2) is displayed.
  - ↳ If the timer is deactivated, [AL 1] (alarm 1) or [AL 2] (alarm 2) disappears.

### Turn off the alarm tone

During an alarm tone, you can select one of the following to turn it off.

- Press **POWER**.
  - ↳ The alarm timer remains activated.
- Press **REPEAT ALARM** on the main unit.
  - ↳ The alarm call repeats at 9-minute intervals.
- Press **ALM 1** or **ALM 2** on the main unit.
  - ↳ [AL 1] (alarm 1) or [AL 2] (alarm 2) disappears from the display.
  - ↳ The alarm timer is deactivated.

---

## Set the sleep timer

This DC350 can switch to standby automatically after a set period of time.

- 1 When the DC350 is turned on, press **SLEEP** repeatedly to select a set period of time (in minutes).
  - ↳ When sleep timer is activated, the display shows **zZ**.

To deactivate sleep timer

- 1 Press **SLEEP** repeatedly until "0" is displayed.
  - ↳ When sleep timer is deactivated, **zZ** disappears on the display.

---

## Adjust display brightness

- 1 Press repeatedly **BRIGHTNESS CONTROL** on the main unit to select:
  - Bright.
  - Dim.
  - Off.

# 9 Product information



Note

- Product information is subject to change without prior notice.

---

## Specifications

### Amplifier

Rated Output Power	2X3W RMS
Frequency Response	125Hz - 16kHz, $\pm 3$ dB
Signal to Noise Ratio	>65dB
Aux Input	0.6V RMS 10kohm

## Tuner

Tuning Range	FM: 87.5 - 108MHz
Tuning grid	100KHz
Sensitivity	
- Mono, 26dB S/N Ratio	<22 dBf
- Stereo, 46dB S/N Ratio	>40 dBf
Search Selectivity	>30 dBf
Total Harmonic Distortion	<3%
Signal to Noise Ratio	>40 dB

## Speakers

Speaker Impedance	4ohm
Speaker Driver	2 x 1" full range driver
Sensitivity	>80dB/m/W

## Bluetooth

Communication system	Bluetooth Standard version 2.0
Output	Bluetooth Standard Power Class 2
Maximum communication range	Line of sight approx.10m
Frequency band	2.4 GHz band (2.4000 GHz - 2.4835 GHz)
Modulation method	FHSS
Compatible bluetooth profiles	Hands-Free Profile (HFP) Headset Profile (HSP) Advanced Audio Distribution Profile (A2DP) Audio Video Remote Control Profile (AVRCP)
Supported codecs	
Receive	SBC (Sub Band Codec), MP3
Transmit	SBC (Sub Band Codec)

## General information

AC power (power adaptor)	Input: 100-240V~, 50/60Hz, 2.0A Max.; Output: 12V $\overline{\text{---}}$ 2.0A; Manufacturer: Philips; Model No.: GFP241DA-1220-1)
Operation Power Consumption	20W
Standby Power Consumption	<4W
Dimensions	
- Main Unit (W x H x D)	173 x 185 x 144 mm
Weight	
- Main Unit	0.62 kg

# 10 Troubleshooting



## Caution

- Never remove the casing of this DC350.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this DC350, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site ([www.Philips.com/support](http://www.Philips.com/support)). When you contact Philips, ensure that your DC350 is nearby and the model number and serial number are available (see 'Get started' on page 12).

### No power

- Ensure that the AC power plug of the DC350 is connected properly.
- Ensure that there is power at the AC outlet.
- To save power, the DC350 switches to standby automatically 15 minutes after disc play reaches the end and no control is operated.

### No sound

- Adjust the volume.

### No response from the DC350

- Disconnect and reconnect the AC power plug, then turn on the DC350 again.

### Poor radio reception

- Increase the distance between the DC350 and your TV or VCR.
- Fully extend the FM antenna.

**Clock setting erased**

- Power has been interrupted or the power cord has been disconnected.
- Reset the clock.

**Sound input to the microphone cannot be heard clearly**

- Speak closer to the microphone when talking, or talk louder.
- Reduce or remove background noise.
- Reduce the volume of the DC350 to remove an echo.

**Audio quality is poor after connection with a Bluetooth device**

- The Bluetooth reception is poor: Move the device closer to the DC350, or remove any obstacle between the device and the DC350.

**A device cannot connect with the DC350**

- The device does not support Bluetooth communication, or any of the compatible profiles required for the DC350.
- You have not enabled the Bluetooth function of the device. Refer to the user manual of the device on how to enable the function.
- It is connected for the first time. (see 'Connect a device for the first time' on page 19) It is re-connected. (see 'Re-connect a device' on page 19)
- The DC350 is already connected with another Bluetooth device. Disconnect the connected device, then try again.

**The connected mobile phone connects and disconnects constantly**

- The Bluetooth reception is poor: Move the mobile phone closer to the DC350, or remove any obstacle between the mobile phone and the DC350.
- Some mobile phones may connect and disconnect constantly when you make or end calls. This does not indicate any malfunction of the DC350.
- For some mobile phones, the Bluetooth connection can be deactivated automatically to save power. This does not indicate any malfunction of the DC350.





© 2008 Koninklijke Philips Electronics N.V.  
All rights reserved.

