

Always there to help you

Register your product and get support at
www.philips.com/welcome



X200



Extended user documentation

PHILIPS

Contents

1 Important safety instructions 3

2 Your phone 4

- What is in the box 4
- Overview of the cordless handset 5
- Overview of the base unit 6

3 Get started 7

- Connect the base station 7
- Insert the supplied batteries of the cordless handset 8
- Configure your phone (country dependent) 8
- Charge the cordless handset 9
- Checking the battery level of the cordless handset 9
- What is standby mode? 9
- Check the signal strength of the cordless handset 10
- Switch the cordless handset on or off 10

4 Display icons 11

5 Calls 12

- Make a call 12
- Answer a call 12
- End a call 12
- Adjust the earpiece/speaker volume 13
- Mute the microphone 13
- Turn the speaker on or off 13
- Make a second call 13
- Answer a second call 13
- Switch between two calls 13
- Make a conference call with the external callers 13

6 Intercom and conference calls 14

- Make a call to another handset 14
- Transfer a call 14
- Make a conference call 14

7 Text and numbers 16

- Enter text and numbers 16
- Switch between uppercase and lowercase 16

8 Phonebook 17

- View the phonebook 17
- Search a record 17
- Call from the phonebook 17
- Access the phonebook during a call 17
- Add a record 18
- Edit a record 18
- Delete a record 18
- Delete all records 18
- Direct access memory 18

9 Call log 19

- Call list type 19
- View the call records 19
- Save a call record to the phonebook 19
- Return a call 19
- Delete a call record 19
- Delete all call records 20

10 Redial list 21

- View the redial records 21
- Redial a call 21
- Save a call record to the phonebook 21
- Delete a redial record 21
- Delete all redial records 21

11 Phone settings 22

- Sound settings 22
- ECO+ mode 23
- Name the handset 23
- Set the date and time 23
- Set the display language 23

12 Services 24

- Call list type 24
- Auto conference 24
- Network type 24
- Auto prefix 24

Select the recall duration	25
Dial mode	25
Auto clock	25
Register additional handsets	25
Unregister the handsets	26
Restore default settings	26

13 Technical data 27

14 Notice 28

Use GAP standard compliance	28
Compliance with EMF	28
Disposal of your old product and batteries	28

15 Frequently asked questions 29

16 Appendix 31

Text and number input tables	31
------------------------------	----

1 Important safety instructions



Warning

- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.
- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

To avoid damage or malfunction



Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Do not dispose of batteries in fire.
- Always use the cables provided with the product.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Metallic objects may be retained if placed near or on the handset receiver.
- Do not use the product in places where there are explosive hazards.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- Do not allow the product to come into contact with liquids.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Active mobile phones in the vicinity may cause interference.


About operating and storage temperatures

- Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity).
- Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity).
- Battery life may be shorter in low temperature conditions.


2 Your phone

Congratulations on your purchase and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

What is in the box

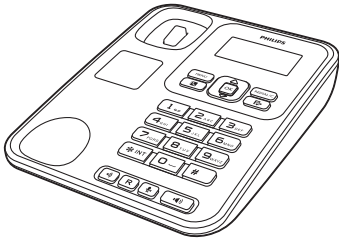

Base unit

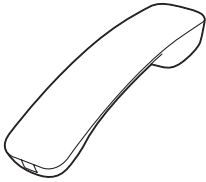


Corded handset




Cordless handset **




Cordless handset charger**

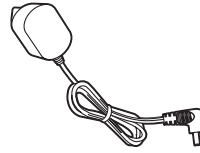

Power adapter**

 

Line cord*

 

Coil cord



Guarantee



Short user manual



Note

- * In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

Tip

- ** In multi-handset packs, there are additional handsets and chargers and power adapters.

Overview of the cordless handset

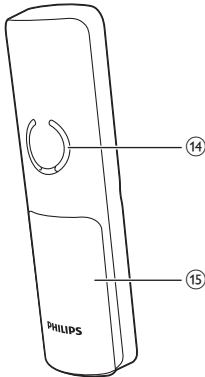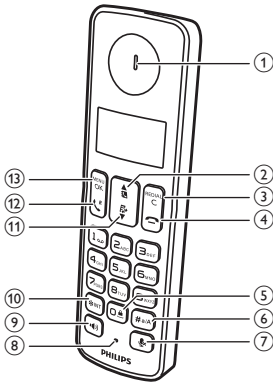

① Earpiece

② ▲ / 🔊

- Scroll up on the menu.
- Increase the earpiece/speaker volume.
- Access the phonebook.

③ REDIAL/C

- Delete text or digits.
- Cancel operation.
- Access the redial list.

④ 📞

- End the call.
- Exit the menu/operation.

- Press and hold to switch the handset on or off.

⑤ 🗨️

- Press to enter a space during text editing.
- Press and hold to lock/unlock the keypad in standby mode.

⑥ # #/A

- Press and hold to enter a pause when making a call.
- Switch to upper/lower case during editing.

⑦ 🎤

Mute or unmute the microphone.

⑧ Microphone

⑨ 🔊

- Turn the speaker phone on/off.
- Make and receive calls through the speaker.

⑩ *INT

- Press and hold to make an intercom call (for multi-handset version only).
- Set the dial mode (pulse mode or temporary tone mode).

⑪ ▼ / 📄

- Scroll down on the menu.
- Decrease the earpiece/speaker volume.
- Access the call log.

⑫ 📞^R

- Make and receive calls.
- Recall key (This function is network dependent.)


⑬ MENU/OK





- Access the main menu.
- Confirm selection.
- Enter the options menu.
- Select the function displayed on the handset screen directly above the key.

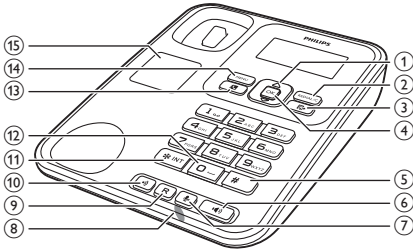


⑭ Loudspeaker

⑮ Battery door

Overview of the base unit



- ① ▲ / ▼
 - Scroll up/down on the menu.
 - Increase/decrease the earpiece/speaker volume.
- ② REDIAL/C
 - Delete text or digits.
 - Cancel operation.
 - Access the redial list.
- ③  Access the call log.
- ④ OK
 - Confirm selection.
- ⑤ #
 - Press and hold to enter a pause when making a call.
- ⑥ 
 - Turn the speaker phone on/off.
 - Make and receive calls through the speaker.
- ⑦  Mute or unmute the microphone.
- ⑧ Microphone
- ⑨ R
 - Recall key (This function is network dependent.)
- ⑩ 
 - Press to find handsets.
 - Press and hold to enter the registration mode.

- ⑪ 
 - Press and hold to make an intercom call (for multi-handset version only).
 - Set the dial mode (pulse mode or temporary tone mode).
- ⑫ 
 - Press to enter a space during text editing.
- ⑬  Access the phonebook.
- ⑭ MENU
 - Access the main menu.
 - Enter the options menu.
 - Select the function displayed on the handset screen directly above the key.
- ⑮ Loudspeaker

3 Get started

! Caution

- Make sure that you have read the safety instructions in the 'Important safety instructions' section before you connect and install your handset.

Connect the base station


! Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone.
- Use only the supplied power adapter to charge the batteries.


☰ Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.


- 1 Connect each end of the power adapter to:
 - the DC input jack at the back of the base unit;
 - the power socket on the wall.
- 2 Connect each end of the line cord to:
 - the telephone socket at the back of the unit;
 - the telephone socket on the wall.

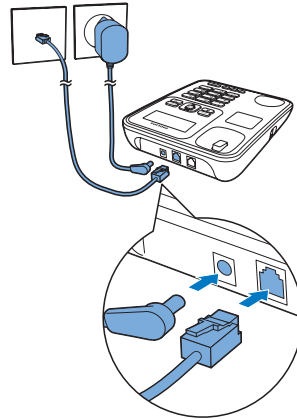


- 3 Connect the coil cord to the base unit and corded handset.

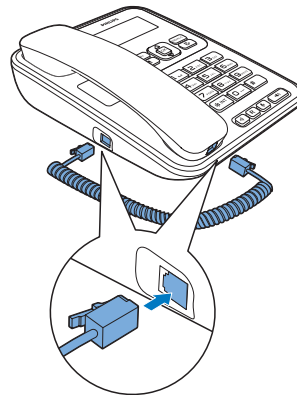

- 4 Connect each end of the power adapter to (for the cordless handset):
 - the DC input jack at the bottom of the cordless handset charger;
 - the power socket on the wall.

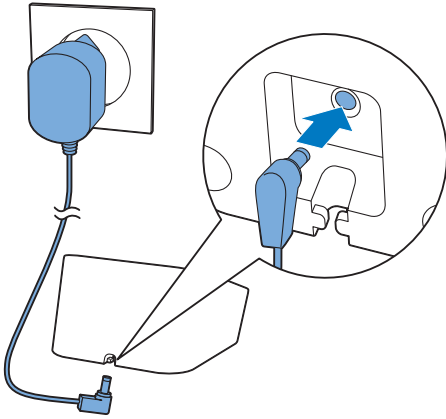

Insert the supplied batteries of the cordless handset

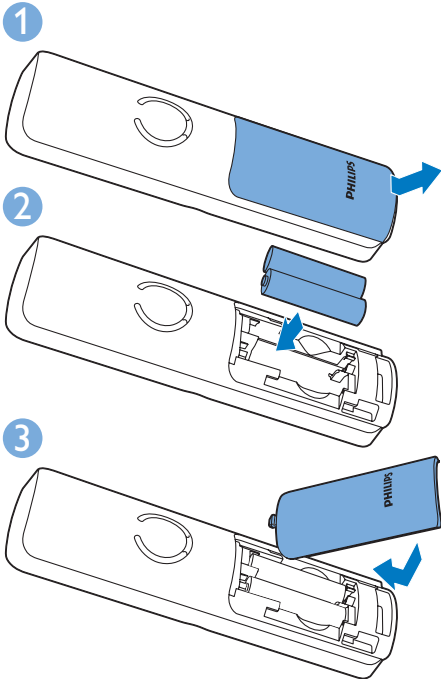

! Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.

☰ Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are charging, it is normal.

! Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

Configure your phone (country dependent)

- 1 When using your phone for the first time, you see a welcome message.
- 2 Press **OK**.

Set the country/language

Select your country/language, then press **OK** to confirm.

↳ The country/language setting is saved.

☰ Note

- The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country. Then you can set the date and time.

To reset the language, see the following steps.

- 1 Press **MENU**.
- 2 Press **▲ / ▼** to select **[Phone setup] > [Language]**, then press **OK** to confirm.

- 3 Select a language, then press **OK** to confirm.
↳ The setting is saved.

Set the date and time




Tip

- To set the date and time later, press **REDIAL/C** to skip this setting.

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Phone setup]** > **[Date & time]**, then press **OK** to confirm.
- 3 Press the numeric buttons to enter the date, then press **OK** to confirm.
↳ The time setting menu is displayed on the handset.
- 4 Press the numeric buttons to enter the time.
 - If the time is in 12-hour format, press **▲** / **▼** to select **[am]** or **[pm]** (Country dependent).
- 5 Press **OK** to confirm.

Charge the cordless handset

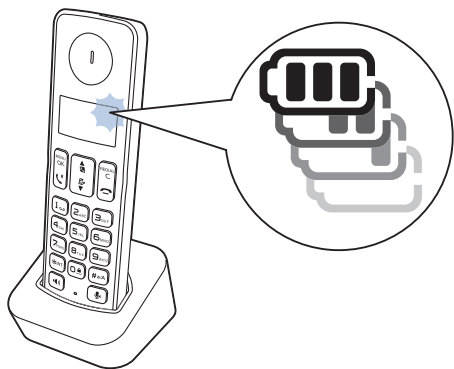

Place the cordless handset on the charger to charge the handset. When the cordless handset is placed correctly on the charger; you hear a docking sound.

↳ The cordless handset starts charging.




Note

- Charge the batteries for 8 hours before first use.
- If the cordless handset becomes warm when the batteries are being charged, it is normal.

You can activate or deactivate the docking tone (see 'Set the docking tone' on page 22).
Your phone is now ready to use.

Checking the battery level of the cordless handset

The battery icon displays the current battery level.

-  When the cordless handset is off the charger; the bars indicate the battery level (full, medium and low).
-  When the cordless handset is on the charger; the bars flash until charging is complete.
-  The empty battery icon flashes. The battery is low and needs recharging.

The cordless handset turns off if the batteries are empty. If you are on the phone, you hear warning tones when the batteries are almost empty. The call gets disconnected after the warning.

What is standby mode?


Your phone is in standby mode when it is idle. The handset/base name or date and time is displayed on the standby screen.



Tip

- Press and hold **OK** to switch between the cordless handset name and date and time display.

Check the signal strength of the cordless handset

 The number of bars indicates the connection status between the cordless handset and base unit. The more bars are shown, the better the connection is.

- Make sure the cordless handset is connected to the base unit before you make or receive calls and carry out the phone functions and features.
- If you hear warning tones when you are on the phone, the cordless handset is almost out of battery or the cordless handset is out of range. Charge the battery or move the cordless handset close to the base unit.



Note












- When **ECO+** is on, the signal strength is not displayed.



Switch the cordless handset on or off

Press and hold .

4 Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
	When the cordless handset is off the charger, the bars indicate the battery level (from full to low).
	When the cordless handset is on the charger, the bars keep scrolling until charging is complete.
	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
	It displays the connection status between the cordless handset and base unit. The more bars are shown, the better the signal strength is.
	It remains steadily on when browsing answered incoming calls in the call log.
	It indicates an outgoing call in the redial list.
	It flashes when there is a new missed call or when browsing the unread missed calls in call log. It remains steadily on when browsing the read missed calls in call log.
	It flashes when receiving incoming call. It remains steadily on when you are in a call.
	The speaker is on.
	The ringer is off.
	It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message.

	It is displayed when you scroll up / down a list or increase / decrease the volume.
	There are more digits on the right. Press REDIAL/C to read.
ECO+	The ECO+ mode is activated.

5 Calls

Tip

- Check the signal strength before you make a call or when you are in a call using the cordless handset (see 'Check the signal strength of the cordless handset' on page 10).

Note

- The talk time of your current call is displayed on the call timer.
- If you hear warning tones, the phone is almost out of battery or out of range. Charge the battery or move the phone close to the base station.

Make a call

You can make a call in these ways:

- Normal call
- Predial call
- Call through the speed dial key

You can also make a call from the redial list (see 'Redial a call' on page 21), phonebook list (see 'Call from the phonebook' on page 17) and call log (see 'Return a call' on page 19).

Normal call

- 1 You can make a quick call in these ways:
 - On the base unit, pick up the corded handset or press **▶▶**.
 - On the cordless handset, press **☎^R** or **▶▶**.
- 2 Dial the phone number:
 - ↳ The number is dialed out.
 - ↳ The duration of your current call is displayed.

Predial call

- 1 Dial the phone number:
 - To erase a digit, press **REDIAL/C**.
 - To enter a pause, press and hold **#01A**.
- 2 You can dial the call in these ways:
 - On the base unit, pick up the corded handset or press **▶▶**.
 - On the cordless handset, press **☎^R** or **▶▶**.

Answer a call

When there is an incoming call, the phone rings. Then you can answer the call in these ways:

- press **☎^R** / **▶▶** on the cordless handset, or
- pick up the phone or press **▶▶** on the base unit.

Warning

- When the phone rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.

Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.

Tip

- When there is a missed call, a notification message appears.


Turn off the ringer for all incoming calls

When the phone rings, press **REDIAL/C**.


End a call

You can end a call in these ways:

- On the base unit, hang up the phone.



- On the cordless handset, press  or place it to the charger.

Adjust the earpiece/speaker volume

Press  /  to adjust the volume during a call.

- ↳ The earpiece/speaker volume is adjusted and the phone is back to the call screen.

Mute the microphone

- 1 Press  during a call.
 - ↳ **[Mute on]** is displayed.
 - ↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press  again to unmute the microphone.
 - ↳ You can now communicate with the caller.


Turn the speaker on or off

Press .

Make a second call

 Note

- This service is network dependent.



- 1 Press  on the cordless handset or **R** on the base unit during a call.
 - ↳ The first call is put on hold.
- 2 Dial the second number.
 - ↳ The number displayed on the screen is dialed out.

Answer a second call

 Note

- This service is network dependent.


When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press ^R, then **2^{ANC}** on the cordless handset or **R**, then **2^{ANC}** on the base unit to answer the call.
 - ↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press ^R, then **1^{END}** on the cordless handset or **R** then **1^{END}** on the base unit to end the current call and answer the first call.

Switch between two calls

 Note

- This service is network dependent.


Press ^R, then **2^{ANC}** on the cordless handset or **R**, then **2^{ANC}** on the base unit.

- ↳ The current call is put on hold, and you are now connected to the other call.

Make a conference call with the external callers

 Note

- This service is network and country dependent. Check with the service provider for additional charges.

When you are connected to two calls, press ^R, then **3^{CONF}** on the cordless handset or **R** then **3^{CONF}** on the base unit.

- ↳ The two calls are combined and a conference call is established.



6 Intercom and conference calls

An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation between you, another handset user and the outside callers.

Make a call to another handset

Note

- If the base station only has 2 registered handsets, press and hold *INT to make a call to another handset.

- 1 Press and hold *INT.
↳ The handsets available for intercom are displayed.
- 2 Select a handset number; then press OK to confirm.
↳ The selected handset rings.
- 3 Press  on the selected handset.
↳ The intercom is established.
- 4 Press REDIAL/C or  to cancel or end the intercom call.

While you are on the phone

You can go from one handset to another during a call:

- 1 Press and hold *INT.
↳ The current caller is put on hold.
- 2 Select a handset number; then press OK to confirm.
↳ Wait for the other side to answer your call.


Switch between calls

Press and hold *INT to switch between the outside call and the intercom call.

Transfer a call

Note


- If the base station only has 2 registered handsets, press and hold *INT to transfer a call to another handset.


- 1 Press and hold *INT during a call.
↳ The handsets available for intercom are displayed.
- 2 Select a handset number; then press OK to confirm.
- 3 Press  on the extra handset or hang up the phone on the base unit when the other side answers your call.
↳ The call is now transferred to the selected handset.

Make a conference call




A 3-way conference call is between you, another handset user and the outside callers. It requires two handsets to share the same base station.

During an external call

- 1 Press and hold *INT to initiate an internal call.
↳ The external caller is put on hold.
↳ The other handset rings.
- 2 Press  on the selected handset.
↳ The intercom is established.
- 3 Select [Conference].
↳ You are now in a 3-way conference call with an external call and a selected handset.

- 4 Press  on the cordless handset or hang up the phone on the base unit to end the conference call.

Note

- Press  /  on the cordless handset or  on the base unit to join an ongoing conference with another handset if [Services] > [Conference] is set to [Auto].

During the conference call

- 1 Press and hold *INT to put the external call on hold and go back to the internal call.
↳ The external call is put on hold.
- 2 Press and hold *INT again to establish the conference call again.

Note

- If a handset hangs up during the conference call, the other handset remains connected to the external call.

7 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **REDIAL/C** to delete a character. Press and hold **REDIAL/C** to delete all characters. Press **▲** / **▼** to move the cursor left and right.
- 3 Press **□_** (cordless handset) or **□_** (base unit) to add a space.



Note

- For information on key mapping of characters and numbers, see the chapter 'Appendix'.

Switch between uppercase and lowercase

By default, the first letter of each word in a sentence is uppercase and the rest is lowercase. Press and hold **#*A** on the cordless handset to switch between the uppercase and lowercase letters.

8 Phonebook

This phone has a phonebook that stores up to 50 records. You can access the phonebook from the cordless handset or base unit. Each record can have a name up to 14 characters long and a number up to 24 digits long.

There are 2 direct access memories (keys **1^{MEM}** and **2^{MEM}**). Depending on your country, keys **1^{MEM}** and **2^{MEM}** are preset to the voice mail number and information service number of your service provider respectively. When you press and hold on the key in standby mode, the saved phone number is dialed automatically.

View the phonebook

Note

- You can view the phonebook on one handset only each time.

- There are two ways to access the phonebook list:
 - press **☰**;
 - press **MENU**. Press **▲** / **▼** to select **[Phonebook]** > **[View]**, then press **OK** to confirm.
- Press **▲** / **▼** to select a contact and view the available information.

Search a record

You can search the phonebook records in these ways:

- Scroll the contacts list.
- Enter the first character of the contact.

Scroll the contact list

- There are two ways to access the phonebook list.

- press **☰**;
- press **MENU**. Press **▲** / **▼** to select **[Phonebook]** > **[View]**, then press **OK** to confirm.

- Press **▲** and **▼** to scroll through the phonebook list.

Enter the first character of a contact

- There are two ways to access the phonebook list:
 - press **☰**;
 - press **MENU**. Press **▲** / **▼** to select **[Phonebook]** > **[View]**, then press **OK** to confirm.
- Press the alphanumerical key that matches the character:
 - ↳ The first record that starts with this character is displayed.

Call from the phonebook

- There are two ways to access the phonebook list:
 - press **☰**;
 - press **MENU**. Press **▲** / **▼** to select **[Phonebook]** > **[View]**, then press **OK** to confirm.
- Select a contact in the phonebook list.
- Press **☎** to make the call.

Access the phonebook during a call

- Press **MENU**.
- Press **▲** / **▼** to select the contact, then press **OK** to view the number.

Add a record

Note

- If your phonebook memory is full, the handset displays a notification message. Delete some records to add new ones.
- The phonebook overwrites the old number with the new number.

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Phonebook]** > **[Add new]**, then press **OK** to confirm.
- 3 Enter the name, then press **OK** to confirm.
- 4 Enter the number, then press **OK** to confirm.
↳ Your new record is saved.

Tip

- Press and hold **#** to insert a pause.
- Press once or several times on the alphanumeric key to enter the selected character.
- Press **REDIAL/C** to delete the character: Press **▲** and **▼** to move the cursor left and right.

Edit a record

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Phonebook]** > **[Edit]**, then press **OK** to confirm.
- 3 Select a contact, then press **OK** to confirm.
- 4 Edit the name, then press **OK** to confirm.
- 5 Edit the number, then press **OK** to confirm.
↳ The record is saved.

Delete a record

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Phonebook]** > **[Delete]**, then press **OK** to confirm.

- 3 Select a contact, then press **OK** to confirm.
↳ A confirmation request is displayed.
- 4 Press **OK** to confirm.
↳ The record is deleted.

Delete all records

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Phonebook]** > **[Delete all]**, press **OK** to confirm.
↳ A confirmation request is displayed.
- 3 Press **OK** to confirm.
↳ All records (except the 2 direct access memory records) are deleted.

Direct access memory


You have 2 direct access memories (Keys 1 and 2). To dial the saved phone number automatically, press and hold on the keys in standby mode.

Depending on your country, Keys 1 and 2 are preset to **[1_voicemail]** (voice mail number) and **[2_info svc]** (information service number) of your network operator respectively.

9 Call log



The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time and date. This feature is available if you have registered to the caller ID service with your service provider.

Your phone can store up to 20 call records. The call log icon on the handset flashes to remind you of any unanswered calls. If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list.

 Note

- Make sure that the number in the call list is valid before you can call back directly from the call list.

The icons shown on the screen tell you whether they are missed/received calls.

Icons	Description
	It remains steadily on when browsing incoming calls in the call log.
	It flashes when there is a new missed call. It remains steadily on when browsing the missed calls in call log.

Call list type


You can set whether you can view all incoming calls or missed calls from this menu.

Select the call list type


- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Services]** > **[Call list type]**, then press **OK** to confirm.

- 3 Select an option, then press **OK** to confirm.



View the call records

- 1 Press .
↳ The incoming call log is displayed.
- 2 Press **▲** / **▼** to select a record, then press **MENU** and select **[View]** for more available information.


Save a call record to the phonebook

- 1 Press .
↳ The incoming call log is displayed.
- 2 Press **▲** / **▼** to select a record.
- 3 Press **MENU**.
- 4 Press **▲** / **▼** to select **[Save number]**, then press **OK** to confirm.
- 5 Enter the name, then press **OK** to confirm.
- 6 Enter the number, then press **OK** to confirm.
↳ The record is saved.

Return a call

- 1 Press .
- 2 Press **▲** / **▼** to select a record on the list.
- 3 Press  to make the call.

Delete a call record

- 1 Press .
↳ The incoming call log is displayed.
- 2 Press **▲** / **▼** to select a record, then press **OK** to confirm.

- 3 Press ▲ / ▼ to select **[Delete]**, then press **OK** to confirm.
↳ A confirmation request is displayed.
- 4 Press **OK** to confirm.
↳ The record is deleted.

Delete all call records

- 1 Press **⌘**.
↳ The incoming call log is displayed.
- 2 Press **OK** to enter the options menu.
- 3 Press ▲ / ▼ to select **[Delete all]**, then press **OK** to confirm.
↳ A confirmation request is displayed.
- 4 Press **OK** to confirm.
↳ All records are deleted.


10 Redial list

The redial list stores the call history of dialed calls. It includes the names and/or numbers you have called. This phone can store up to 10 redial records.

View the redial records

Press **REDIAL/C**.

Redial a call

- 1 Press **REDIAL/C**.
- 2 Press **▲ / ▼** to select a record, then press .
↳ The number is dialed out.

Save a call record to the phonebook

- 1 Press **REDIAL/C** to enter the list of dialed calls.
- 2 Press **▲ / ▼** to select a record.
- 3 Press **MENU**.
- 4 Select **[Save number]**, then press **OK** to confirm.
- 5 Enter the name, then press **OK** to confirm.
- 6 Enter the number, then press **OK** to confirm.
↳ The record is saved.

Delete a redial record

- 1 Press **REDIAL/C** to enter the list of dialed calls.

- 2 Select a record.
- 3 Press **MENU**.
- 4 Press **▲ / ▼** to select **[Delete]**, then press **OK** to confirm.
↳ A confirmation request is displayed.
- 5 Press **OK** to confirm.
↳ The record is deleted.

Delete all redial records

- 1 Press **REDIAL/C** to enter the list of dialed calls.
- 2 Press **▲ / ▼** to select **[Delete all]**, then press **OK** to confirm.
↳ A confirmation request is displayed.
- 3 Press **OK** to confirm.
↳ All records are deleted.

11 Phone settings

You can customize the settings to make it your own phone.

Sound settings

Set the handset's ringtone volume

You can select among 5 ringtone volume levels or [Off].

- 1 Press **MENU**.
- 2 Press **▲ / ▼** to select [**Phone setup**] > [**Sounds**] > [**Ring volume**], then press **OK** to confirm.
- 3 Select a volume level, then press **OK** to confirm.
↳ The setting is saved.

Set the handset's ringtone

Note

- This feature is available only on the cordless handset.

You can select from 10 ringtones.

- 1 Press **MENU**.
- 2 Press **▲ / ▼** to select [**Phone setup**] > [**Sounds**] > [**Ring tones**], then press **MENU/OK** to confirm.
- 3 Select a ringtone, then press **MENU/OK** to confirm.
↳ The setting is saved.

Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Press **MENU**.

- 2 Press **▲ / ▼** to select [**Phone setup**] > [**Sounds**] > [**Key tone**], then press **OK** to confirm.
- 3 Select [**On**]/[**Off**], then press **OK** to confirm.
↳ The setting is saved.

Set the docking tone

Note

- This feature is available only on the cordless handset.

Docking tone is the sound made when you place the cordless handset on the charger.

- 1 Press **MENU**.
- 2 Press **▲ / ▼** to select [**Phone setup**] > [**Sounds**] > [**Docking tone**], then press **OK** to confirm.
- 3 Select [**On**]/[**Off**], then press **OK** to confirm.
↳ The setting is saved.

Set the battery tone

Note

- This feature is available only on the cordless handset.

Battery tone is the sound made when the battery is low and needs recharging.

- 1 Press **MENU**.
- 2 Press **▲ / ▼** to select [**Phone setup**] > [**Sounds**] > [**Battery tone**], then press **OK** to confirm.
- 3 Select [**On**]/[**Off**], then press **OK** to confirm.
↳ The setting is saved.

ECO+ mode

Note

- This feature is available only on the cordless handset.

When the **ECO+** mode is activated, it eliminates the radiation of the cordless handset and base unit in standby mode.

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Phone setup]** > **[ECO+ mode]**, then press **OK** to confirm.
- 3 Select **[On]/[Off]**, and press **OK** to confirm.
 - ↳ The setting is saved.
 - ↳ **ECO+** is displayed in standby mode.

Note

- Make sure that all the handsets registered to the base unit are X200 in order to have the **ECO+** feature functioning properly.
- When **ECO+** is activated, the standby time is reduced. This is because in **ECO+** mode the base unit is not transmitting any signal in standby mode; therefore the cordless handset needs to "listen" more frequently for signals from the base unit to detect incoming calls or other requests from the base unit. The time it takes for the cordless handset to access features like call setup, call log, paging, and phonebook browsing is also delayed. The cordless handset will not alert you to link loss in case of power loss or moving out of range.

Name the handset

The name of the handset can be up to 12 characters. It is displayed on the screen in standby mode.

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Phone setup]** > **[Phone name]**, then press **OK** to confirm.
- 3 Enter or edit the name. To erase a character, press **REDIAL/C**.

- 4 Press **OK** to confirm.
 - ↳ The setting is saved.

Set the date and time

For information, see 'Set the date and time' in the 'Get started' section.

Set the display language

Note

- This feature only applies to models with multiple-language support.
- Languages available vary from country to country.

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Phone setup]** > **[Language]**, then press **OK** to confirm.
- 3 Select a language, then press **OK** to confirm.
 - ↳ The setting is saved.

12 Services

The phone supports a number of features that help you handle and manage the calls.

Call list type

You can set whether you can view all incoming calls or missed calls from this menu.

Select the call list type

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Services]** > **[Call list type]**, then press **OK** to confirm.
- 3 Select an option, then press **OK** to confirm.

Auto conference

You have two ways to join an external call with another handset,

- on the base unit, pick up the phone or press **⏏**;
- on the cordless handset, press **⏏**.

Activate/Deactivate auto conference

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Services]** > **[Conference]**, then press **OK** to confirm.
- 3 Select **[Auto]/[Off]**, then press **OK** to confirm.
↳ The setting is saved.

Network type

Note

- This is a country dependent feature. It only applies to models with network type support.

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Services]** > **[Network type]**, then press **OK**.
- 3 Select a network type, then press **OK**.
↳ The setting is saved.

Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out. For better dialing experience in Russia, if the phone is set to pulse dial (see 'Dial mode' on page 25), the phone can automatically insert pause after leading digit 8 using the auto prefix feature for dialing all numbers starting with 8. For example, if you want to dial the numbers like 8-495-1234567 with automatic pause insertion after leading 8, set the detect number as '8', and set the prefix number as '8 #'.

Note

- The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits.

Set auto prefix

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Services]** > **[Auto prefix]**, then press **OK** to confirm.

- 3 Enter the detect number; then press **OK** to confirm.
- 4 Enter the prefix number; then press **OK** to confirm.
↳ The setting is saved.

Note

- To enter a pause, press and hold **#**A**.
- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.
- The feature is unavailable if the dialed number starts with ***** and **#**.

Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[Short]**, **[Medium]** and **[Long]**. The number of available options varies with different countries. For details, consult your service provider.

- 1 Press **MENU**.
- 2 Select **[Services]** > **[Recall time]**, then press **OK** to confirm.
- 3 Select an option, then press **OK** to confirm.
↳ The setting is saved.

Dial mode

Note

- This feature is country dependent and only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

Set the dial mode

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Services]** > **[Dial mode]**, then press **OK** to confirm.
- 3 Select a dial mode, then press **OK** to confirm.
↳ The setting is saved.

Note

- If your phone is in pulse dial mode, press ***#*#** during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals.

Auto clock

Note

- This service is network dependent.
- Make sure you have subscribed to the caller ID service before you use this feature.

It synchronizes the date and time on your phone with the public switched telephone network (PSTN) automatically. For the date to be synchronized, make sure the current year is set.

- 1 Press **MENU**.
- 2 Press **▲** / **▼** to select **[Services]** > **[Auto clock]**, then press **OK** to confirm.
- 3 Select **[On]**/**[Off]**, then press **OK** to confirm.
↳ The setting is saved.

Register additional handsets

You can register additional cordless handsets to the base unit. The base unit can register up to 4 handsets.

- 1 Press **MENU** on the handset.

- 2 Press ▲ / ▼ to select **[Services]** > **[Register]**, then press **OK** to confirm.
- 3 Press and hold **(*)** on the base station for 5 seconds.
- 4 Enter the system PIN. Press **REDIAL/C** to make corrections. Then press **OK** to confirm the PIN.
 - ↳ Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset.

Note

- For models with an answering machine, you hear a confirmation beep.
- If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.
- The preset PIN is 0000. No change can be made on it.

Unregister the handsets

- 1 Press **MENU**.
- 2 Press ▲ / ▼ to select **[Services]** > **[Unregister]**, then press **OK** to confirm.
- 3 Enter the system PIN. (The preset PIN is 0000). Press **REDIAL/C** to remove the number.
- 4 Select the handset number to be unregistered.
- 5 Press **OK** to confirm.
 - ↳ The handset is unregistered.

Tip

- The handset number is displayed beside the handset name in standby mode. **Philips 6** is assigned on the base unit.

Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Press **MENU**.
- 2 Press ▲ / ▼ to select **[Services]** > **[Reset]**, then press **OK** to confirm.
 - ↳ A confirmation request is displayed.
- 3 Press **OK** to confirm.
 - ↳ All settings are reset.

13 Technical data

General specification and features

- Talk time: 16 hours
- Standby time: 250 hours
- Range indoor: 50 meters
- Range outdoor: 300 meters
- Phonebook list with 50 entries
- Redial list with 10 entries
- Call log with 20 entries
- Caller identification standard support: FSK, DTMF

Battery

- Philips: 2 x AAA Ni-MH 1.2V 550 mAh rechargeable batteries

Power adapter

Base and charger

- Philips: MN-A102-E130, input: 100-240 V~, 50/60 Hz 200 mA, output: 6 Vdc 400 mA
- Philips: S003IV0600040, input: 100-240 V~, 50/60 Hz 150 mA, output: 6 Vdc 400 mA

Power consumption

- Power consumption in idle mode: around 0.85 W

Weight and dimensions

- Corded handset: 170.2 grams
- 201 x 50 x 35 mm (H x W x D)
- Cordless handset: 142.6 grams
- 158.2 x 47 x 26.3mm (H x W x D)
- Base: 454 grams
- 214.1 x 169.1 x 50.2 mm (H x W x D)
- Charger: 74.6 grams
- 68 x 70.68 x 44.92 mm (H x W x D)

14 Notice

Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

Compliance with EMF

This product complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

15 Frequently asked questions

No signal bar is displayed on the cordless handset screen.

- The cordless handset is out of range. Move it closer to the base unit.
- If **[Unregistered]** is displayed on the cordless handset, register your cordless handset.



Tip

- For further information, see the chapter 'Services', section 'Register additional handsets'.

If I fail to pair (register) the additional cordless handsets to the base unit, what do I do?

Your base memory is full. Unregister the unused cordless handsets and try again.



Tip

- For further information, see the chapter 'Services', section 'Unregister the handsets'.

My handset is in searching status, what do I do?

- Make sure that the base unit has power supply.
- Register the cordless handset to the base unit.
- Move the cordless handset closer to the base unit.

The cordless handset loses connection with the base or the sound is distorted during a call.

Check if the **ECO+** mode is activated. Turn it off to increase the cordless handset range and enjoy the optimal call conditions.

No dialing tone

- Check your phone connections.
- The cordless handset is out of range. Move it closer to the base unit.

No docking tone

- The handset is not placed properly on the base unit/charger.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

The cordless handset on the charger does not charge.

- Make sure the batteries are inserted correctly.
- Make sure the cordless handset is placed properly on the charger. The battery icon animates when charging.
- Make sure the docking tone setting is turned on. When the cordless handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones from your dealer.

No display

- Make sure the batteries are charged.
- Make sure there is power and the phone is connected.

Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

The handset does not ring.

Make sure the handset ringtone is turned on.

The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.



Note

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

16 Appendix

Text and number input tables

Key	Upper case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish/Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian/Lithuanian/Estonian/ Latvian/Bulgarian)
0	Space . 0 , / ; " ' ! ; ? ; * + - % \ ^ ~
1	1 @ _ # = < > () & € £ \$ ¥ [] { } □ § ...
2	A B C 2 À Á Â Ã Ä Å Æ Ç Ć
3	D E F 3 È É Ê Ë Ì Í Î Ï Δ Φ
4	G H I 4 Ğ Ĩ Ĵ Ķ Ļ Γ
5	J K L 5 Λ
6	M N O 6 Ñ Ó Ô Õ Ö
7	P Q R S 7 Š Ś Π Θ Σ
8	T U V 8 Ù Ú Û Ü Ů Ÿ
9	W X Y Z 9 Ø Ω Ξ Ψ Ž

Key	Lower case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/Swedish)
0	Space . 0 , / ; " ' ! ; ? ; * + - % \ ^ ~
1	1 @ _ # = < > () & € £ \$ ¥ [] { } □ § ...
2	a b c 2 à á â ã ä å æ ç ĉ
3	d e f 3 è é ê ë ì í î ï ð ñ Δ Φ
4	g h i 4 ğ ħ ï ĵ ĳ Ķ Ļ Γ
5	j k l 5 λ
6	m n o 6 ñ ó ô õ ö ò
7	p q r s 7 š ś π θ σ
8	t u v 8 ù ú û ü ů Ÿ
9	w x y z 9 ø ω ξ ψ ž



2013 © WOOX Innovations Limited. All rights reserved.
Philips and the Philips' Shield Emblem are registered
trademarks of Koninklijke Philips N.V. and are used by WOOX
Innovations Limited under license from Koninklijke Philips N.V.

UM_X200_90_EN_V1.0
WK1404

