



AZ1308





PHILIPS

1 Choosing Power Supply

- a Connect the AC power cord to the **AC MAINS** inlet and the wall socket.

-OR-


- b Open the battery door and insert **6 x C batteries** (not included).

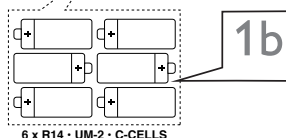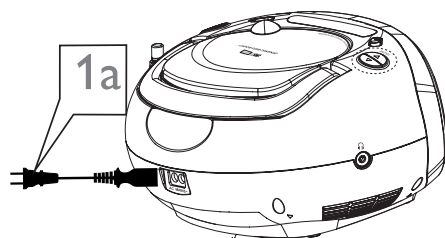

R-14, UM-2 or C-cells
(not included)

2 Listening to the Radio

- a Push the **source selector** to **TUNER**.
- b Push the **source selector** to **FM** or **AM**.
- c Press and hold **PROG** until *Auto* flashes.
- Available stations are programmed.
- d Press **ALB/PRE +/-** until the desired preset station is displayed.

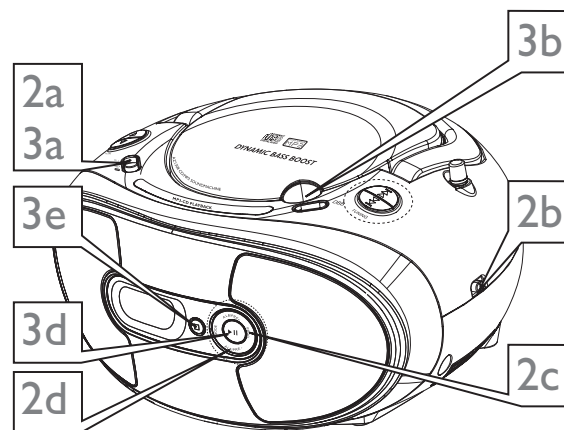

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW and MP3.

- a Adjust the **source selector** to **CD/MP3**.
- b Lift the disc door at **LIFT TO OPEN** to open.
- c Insert a disc with the printed side facing up and close the door.
- d Press **▶II** to start playback.
- e To stop disc playback, press **■**.

Source selector

Slide to select functions:
CD/MP3 or **TUNER**.

■
Press to stop disc playback or erase a disc program.

Display

Shows disc/tuner functions.

MODE

Press to select different play modes, such as REPEAT or SHUFFLE (random order).

PROG

Use to program disc tracks, or preset radio stations.

ALB/PRE +, -

Press to select an albuma, or preset radio station.

▶II

Press to start or pause disc playback.

AC MAINS

Inlet for power cord.

Battery door

LIFT TO OPEN

Lift to open the disc door.

Telescopic antenna

Improves FM reception.

TUNING ◀◀ ▶▶

Skips & searches disc tracks backwards/ forwards;
Tunes to radio stations.

BAND

Selects **FM** or **AM**.

DBB

Press to turn the bass enhancement on/off.

VOLUME ▲, ▼

Press to adjust volume level.

3.5mm stereo headphone jack.

