
# Connect to your PC

Connect Philips Wireless Music Center to your PC to perform the following:

- Access music files stored on your PC from the UPnP source of Philips Music Center.
- **Manage** the music content stored on Philips Music Center from your PC
- **Update** Gracenote® music recognition service database on the Center for the latest disc information
- Upgrade firmware of Philips Music Center

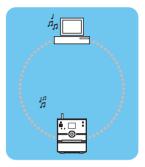




### Minimum PC requirements:

- Windows 2000 SP4 or above / XP (Home or Professional) / Vista
- Pentium III 500MHz processor or higher
- 256MB RAM
- CD-ROM Drive
- Ethernet Adapter (for wired connection)/ Wireless Network Adaptor 802.11 b/g (for wireless connection)
- 500MB free hard disk space








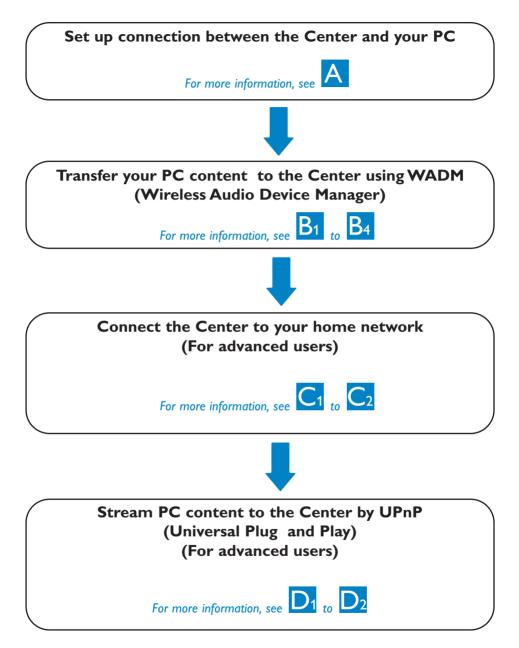



Connect Center to your PC directly with the supplied (orange) Ethernet cable

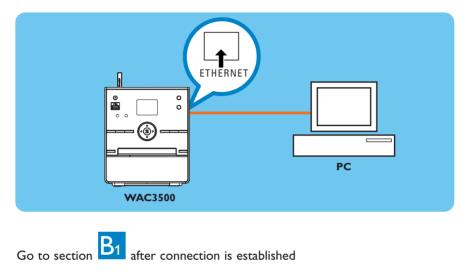

### Tip:

• Make sure that the Ethernet port on your PC is enabled to establish WADM connection.

## Install and launch WADM

- 1 Insert the PC Suite CD into your PC
- 2 Select desired language and accept license terms
- **3** Select 'WADM' and click **Next** to start installation
- 4 To launch WADM, double click WADM icon void on the PC desktop.
  - A list of discovered Centers appears
- 5 Select the desired Center, and then click

### Connect now

or

If the desired Center is not discovered, select

**Connection Wizard > Express mode > Next** to establish new connection

### Note:

If you have more than one network adapter in your PC, please select the Ethernet adapter that you have connected your Orange cable to.

- Log onto your PC with administrator's rights enabled.
- If the IP configuration of the Center is not in the default range (Subnet mask: 255.255.0.0; IP address: 172.31.x.x), select Connection Wizard > Custom Mode. Enter the current IP configuration of the Center as prompted. Press MENU and select Information > Wired to check IP configuration.
- For Windows XP SP2 users, the Windows Firewall must be turned off temporarily by selecting Start > Control Panel > Security Center > Windows Firewall > Off in order to use the WADM (Visit www.microsoft.com for more details).
- When WADM is running, Internet access of your PC may be disabled. Close WADM to restore access.
- If the operating system of your PC is Windows Vista, right click on WADM icon v, select Properties > Compatibility, and make sure the check-box under "Compatibility mode" and "Privilege level" is marked, then click OK. Otherwise you may not be able to launch WADM.

Philips Wireless Audio Device Manager	×
Found 1 Philips Wireless Audio Device(s)	
Please select the one you want to connect to:	
WAC3500(172.31.107.1)	
WAC3300(1/2.31.10/.1)	
Connection Wizard Connect Now Exit	
Connection Wizard Connect Now Exit	



Philips Wireless Audio Device Manager	
Wireless Audio Device Manager Device connected: Wireless Music Center WAC3500	PHILIPS
Content Management	Device Configuration
Backup Content	Restore Content

### Transfer music files from your PC to the Center

### 1 Click Content management

- A new window will be shown.
- 2 On **My Computer** panel, click to highlight a desired file/folder
- **3** Drag selection to **My Device** panel
- 4 While transferring, you can add more file/folder(s) to the transfer queue

Device connected: Wire	Device Manager Hess Music Center WAC3500				PHILIPS
My Computer	Name	Size	Туре	Date created	
Local Driver (C:\)	Always5onewhere.mp3	6963 KB	MP3 格式声音	2006-05-29 17:13	
Music	Big Big World.mp3	4820 KB	MP3 格式声音	2006-05-29 17:20	
Music of WMC	god is girl.mp3	4286 KB	MP3 格式声音	2006-05-29 17:31	
Program Files	Michael Jackson - Heal Th	. 5265 KB	NP3 格式声音	2007-04-10 15:32	
III RECVOLER	Michael Jackson - History	3377 KB	MP3 格式声音	2007-04-10 15:37	
System Volume Informati	00 Michael Jackson - I Just C	. 3452 KB	MP3 格式声音	2007-04-10 15:41	
test	Michael Jackson - Smooth .	. 4026 KB	MP3 格式声音	2007-04-10 15:44	
WAC5000_Backup conte	nt Michael Jackson - The Wa	. 4072 KB	NP3 格式声音	2007-04-10 15:49	
II WINDOWS	PrettyBoy.mp3	6536 KB	NP3 格式声音	2006-05-29 17:36	
WAC3500	Title	Artist	Album	Genre	
Al songs	<b>▲</b>				
Artists					
a Albums					
Genres Playlists					
00000DemoReylist					
Playlist 001					
Playlist_002					
Playlist_003					
	AlwaysSonewhere.mp3				
	Big Big World.mp3				

#### Tip:

• It is recommended to transfer less than 4G or 1000 songs at each attempt.



### To edit track information

- 1 On the device window, click to highlight the desired track
- 2 Right click on your mouse. Click Track info

1	
Title	Artist
for your heart only	BANDAR
Indian Ur Track info	BANDAR
love me t Delete	BANDAR
love of my life	BANDAR
Snow	BANDAR
the way of the wind	BANDAR

#### **Tips:**

- To select more than one file, press and hold <Ctrl> on your PC keyboard, and click the desired files.
- To playback tracks, double click on the track to start playing.
- Click "Title" or "Artist" to sort the music files by track name or by Artist
- In case the edited ID3 tags are not shown on WADM, go to File > Refresh Content to refresh the WADM. Otherwise, restart WADM.
- Always press and hold **STANDBY-ON** to switch the Center to ECO POWER (power-saving mode) before removing its power plug to avoid losing tracks.

## Backup the music library of the Center to your PC

- 1 Click Backup content
- 2 Follow the screen instructions to backup the music library of the Center to your PC. Backup files are named with current date

Look jn: 🗀	Backup	- + 🖻	) 💣 🗊 -
wac3500	_backup.bdt	_	
Electron	un 2000 kaskas kak		0
File parte:	wac3500_backup.bdt		<u>(</u> ]pen

- Make sure that you have adequate space to store the backup files.
- Do not delete the backup file using Windows Explorer. If the backup file is accidently deleted, please search for the file named **YOURMAC.inx** using Windows Explorer search tool and then delete it. You can only perform backup after that.



### **About Device Configuration**

In the sub-menu of Device configuration, you can view System information, manage the Network settings, upgrade Firmware, update CD Database and view connection of the device with the external network. For details, see the **User Manual**.

## Restore backup files on your PC to the Center

### 1 Click Restore content


2 Click to highlight the file to be restored, and then click **Open** 

V	Vireless Audio Device ·	Microsoft Internet Explorer
le	Edit View Favorites To	ols Help
)	6ade + 🕤 + 💌 🗟 🎸	🕯 🔎 Search 🤺 Favorites 🕢 🍰 🖉 🔹 📃 🛛 🗧
sk:	ress 🔊 http://172.31.107.1,1	ndex.ogi?0
	PHILIPS	
	Wireless Audio De	evice Manager
	System	System
	Wired Network	Device Name: WAC3500
	Wireless Network	
	Internet Setting	
	Firmware Upgrade	
	CD Database Update	
	Status	

Open			? ×
Look in: 📔	) Backup	- 🗢 🗈	💣 🔳 🔹
wac3500	)_backup.bdt		
-			
File game:	wac3500_backup.bdt		Open

- After changing network settings with WADM, press and hold **STANDBY-ON** to switch the Center to ECO Power (power-saving mode) to refresh IP update.
- If some of the WADM functions cannot be used, they might be blocked by your anti-virus software. It is recommended that you turn off your anti-virus software temporarily.

### Connecting to home wireless network

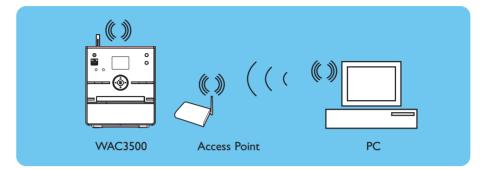

### To connect the Center to the wireless network:

- Press MENU
- Select Settings > Network > Wireless > (Select desired network SSID) > (Use the remote control to input the encryption key) > Press OK > Select Automatic > Apply Settings > Yes



	ПНD	Ψ
ſ	Artists	
ľ	WEP Key	_
	4 abcd	•




remote control

- Check that the wireless network adaptor of your PC is enabled.
- Position the Center closer to your wireless Access Point.
- Make sure that DHCP is enabled on your wireless Access Point. If it is not available, choose Static and key in IP configuration
- If you want to return to the original Center connection at factory default mode, please reset the Center to its default settings (see section 14 of the User Manual)
- In case you experience trouble setting up your WAC3500 with your home wireless network after you are done with the steps described above, please refer to section 18 on Troubleshooting of the User Manual.

### Connecting to home wired network

Connect the Center directly to the Router/Hub/Switch with the supplied (orange) Ethernet cable

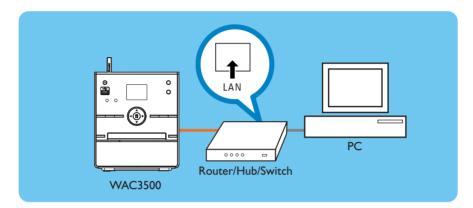

### Tip:

• If your home network is connected to Internet, you should be able to use Gracenote online queries after successfully connecting WAC3500 to your home wireless network. For details, please refer to section 12 of the User Manual.

# D1 Using UPnP (for Windows 2000)

- 1 Insert the PC suite CD into your PC.
- 2 Click "Install Philips Media Manager" to start the installation of PMM.
- **3** Follow the on-screen instructions for the installation.
- 4 To launch PMM, double click the icon PC desktop.
- 5 The first time you launch PMM, click Add Music > Add Files or Folders to specify music folders on your PC
- 6 On WAC3500, press HOME and use the navigation controls ▲ or ▼ and ► to enter UPnP mode. If you have successfully connected WAC3500 to the home network where your PC is also connected to, you should be able to see the Music Server on the screen of WAC3500

🚔 Philip	s Media	Manage	er
Music	Pictures	Movies	
MUSIC			
Add Music	Playlist		
Add File	s or Folder	s	All Music
Conference	ect media f	iles and fold	lers to add

d Station(x) Installation 📃 🖸 🔛
Software Installation
Please choose from the following installation options:
<section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><table-row><table-cell></table-cell></table-row></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header>

- UPnP server may not necessarily be a PC but any content serving device.
- If the PMM cannot be detected after 5 minutes, close the PMM application and then restart it.
- It is recommended that you do not set the PMM as an auto-startup application.

# D2 Using UPnP (for Windows XP/Vista)

- 1 Insert the PC suite CD into your PC.
- 2 Click "Install Windows Media Player 11" to start the installation of Windows Media Player.
- 3 On your PC, click Start > Programs > Windows Media Player
- 4 On the Windows Media Player interface, select **Tools** > **Options**
- **5** On the displayed interface, select the **Library** tab
- 6 Click Configure Sharing.
- 7 When your center is connected to your home network, it appears in the window. Click the WAC3500 icon, and then click **Allow**.
- 8 To change the default sharing options, click Settings
- 9 Edit your UPnP server name and select the check boxes as below, and then click **OK**
- **10** On the Library tab, click **Monitor Folders** to manage your share folders
- 11 On WAC3500, press HOME and use the navigation controls ▲ or ▼ and ► to enter UPnP mode. If you have successfully connected WAC3500 to the home network where your PC is also connected to, you should be able to see the Music Server on the screen of WAC3500

layer Rip Music			e DVD Performance	
Specify settings collection.	for organizing	and shari	ng your digital	Iriedia
Shering				
Share my media with o and devices on my net	ther compute work.	5	Configure She	ring
Update library by monit	oring folders			
Customers the folders monitors for digital me	the Player Sa files		Mgnitor Pold	r
🗟 Delete files from gr	inputer when	deleted fr	on Ibrary	
Automatic readia inform	ation updates	for files		
Retrieve additional	information §	on the In	ternet	
Only add miss	ing informatio	n		
C Overwrite all	veda informa	tion		
E Repare music files	using rip mus	c settings		
Rearrance music in			in music settin	~
Raintain my star ra				

hare ny nedia t	α			Sgittings
18				
VAC 3500				
	1.1		- 1	

WAC3500 Mus	d	
Default settings		
Media types:	Star ralege:	Parantal ratings:
🛛 Hunic	(* All ratings	(# All referge
Echanic Bichanics	C Dely	C Oply
∏ ⊻ideo		-
	Rated 1 star or higher 💌	River Unated
	P Include unvited files	Video: Uniated

### Tip:

• To download Microsoft Windows Media Player 11, use the following URL: http://www.microsoft.com/windows/windowsmedia/download.



### Need help? www.philips.com/support or call our helpdesk

Gracenote is a registered trademark of Gracenote. The Gracenote logo and logotype, and the "Powered by Gracenote" logo are trademarks of Gracenote.

Microsoft, Windows, Windows 2000, Windows XP, Windows Vista and Windows Media Player are either registered trademarks or trademarks of Microsoft Corporation.



© Royal Philips Electronics N.V. 2007 All rights reserved. 3141 075 21981

www.philips.com



