Quick Start Guide




What's in the Box?

You should find these items upon opening the box.




MW Antenna



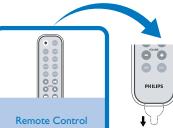



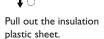




Step A Setup

Connection

- 1 For radio reception, connect the supplied MW antenna to the MW aerial terminal.
- 2 Connect the speaker wires to the **SPEAKERS** terminals.


3 Connect the power cord of the system to the AC power outlet.

TipIt is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.

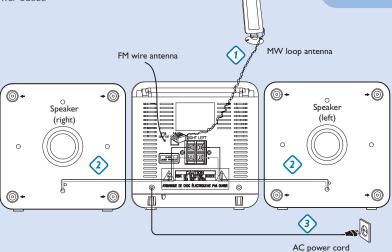

Setting the clock


- 1 In standby mode, press PROG/CLOCK button. The clock digits for the hours flash.
- Press ◄ / ▶ to set the hours.
- 3 Press PROG/CLOCK again. The clock digits for the minutes flash.
- 4 Press
- **5** Press **PROG/CLOCK** to confirm the time.

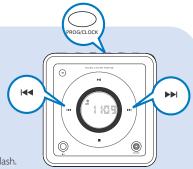

Step B Enjoy

Playing a disc

- 1 Select CD source.
- 2 Press **OPEN/CLOSE** on the top of the system to open the CD door.
- 3 Insert a disc with the printed side facing up and press down on **OPEN/CLOSE** to close the CD door.
- 4 Press ► II to start playback.
- 5 Press to stop playback.

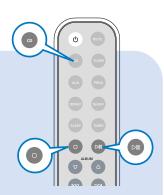

Listening to radio

- 1 Select TUNER source.
- 2 Press BAND (TUNER on the remote control) once or more to select your waveband.
- **3** Turn **TUNING** to tune to a station.

SOURCE BAND TUNING

Tip

Detailed playback features and additional functions are described in the accompanied owner's manual.

Notes for the remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).
- Then select the desired function (►II,
 I✓, ►I for example).



