www.philips.com/welcome

HTS8141



EN	User manual
ZH-CN	用户手册
ZH-TW	使用手冊
MS-MY	Manual pengguna

PHILIPS

Contents

1	Important	4
	Safety and important notice	4
	Trademark notice	5
2	Your product	6
	Features highlight Product overview	6 7
3	Connect	10
	Place the unit	10
	Connect video cables	11
	Connect subwoofer	13
	Connect radio antenna	14
	Connect audio cables/other devices	14
	Mount the DVD Home Theatre unit	17
4	Get started	18
	Prepare the remote control	18
	Find the correct viewing channel	19
	Start Ambisound setup	19
	Turn on Progressive Scan	21
	Activate EasyLink control	22
	Select a play source	23
<u> </u>	Play	24
	Play from disc	24
	Play video	25
	Play music	28
	Play photo	29
	Play from USB device	30
	Play from portable media player	31
	Play from iPod	31
	Play from radio	33

6	Adjust sound	35
	Control the volume	35
	Adjust Bass/Treble	35
	Select Ambisound	35
	Select a preset sound effect	36
7	Adjust settings	37
	General setup	37
	Audio setup	39
	Video setup	40
	Preference Setup	43
8	Additional information	45
	Update software	45
	Care	45
9	Specifications	46
10	Troubleshooting	47
10	Houbleshooting	7/
11	Glossary	49

1 Important

Safety and important notice

A

Warning

- Risk of overheating! Never install the Home Theater System in a confined space. Always leave a space of at least 4 inches around the Home Theater System for ventilation. Ensure curtains or other objects never cover the ventilation slots on the Home Theater System.
- Never place the Home Theater System, remote control or batteries near naked flames or other heat sources, including direct sunlight.
- Only use this Home Theater System indoors.
 Keep this Home Theater System away from water, moisture and liquid-filled objects.
- Never place this Home Theater System on other electrical equipment.
- Keep away from this Home Theater System during lightning storms.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Visible and invisible laser radiation when open. Avoid exposure to beam.

Recycle notice



This electronic equipment contains a large number of materials that can be recycled or reused if disassembled by a specialised company. If you are disposing of an old machine, please take it to a recycling centre. Please observe the local regulations regarding disposal of packaging materials, exhausted batteries and old equipment.

Copyright notice



The making of unauthorised copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Macrovision copyright

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

About Progressive Scan

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artefacts to be displayed on the picture. In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding our TV set compatibility with this model 525p and 625p DVD player, please contact our customer service centre.

Trademark notice



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.



DivX, DivX Ultra Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

Official DivX® Ultra Certified product.
Plays all versions of DivX® video (including DivX® 6) with enhanced playback of DivX® media files and the DivX® Media Format.
Plays DivX® video with menus, subtitles and audio tracks.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/ or other countries.



HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.



'DCDi' is a trademark of Faroudja, a division of Genesis Microchip, Inc.



iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

'Made for iPod' means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



2 Your product

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

The all-in-one SoundBar DVD Home Theatre is designed to complement your home perfectly. Enjoy the SoundBar DVD Home Theatre with state-of-the-art Ambisound surround sound and picture quality without the clutter of multiple speakers.

Features highlight

Video upscaling to 1080p

You can now watch the DVDs in the highest picture quality available for your HDTV. This DVD Home Theatre offers full high-definition video playback up to 1080p resolution for an amazing viewing experience. A highly detailed picture and increased sharpness delivers a more true-to-life picture.

EasyLink

EasyLink uses the HDMI CEC (Consumer Electronics Control) industry standard protocol to share functionality with all HDMI CEC compliant devices over HDMI. It enables the connected devices to control each other with a single remote control.



Note

 Philips does not guarantee 100% interoperability with all HDMI CEC devices.

Ambisound

Philips Ambisound technology reproduces multi-channel surround sound with fewer speakers to give an embracing surround experience without the hassle of setting up a full range of speaker systems.

USB direct and MP3 link

Simply plug your USB device into the USB socket to play your MP3/WMA/JPEG/DivX files; or plug your portable media player to the MP3 LINK socket to enjoy the music play in superb sound quality.

Sync the audio output with the video play

This DVD Home Theatre provides you the feature of delaying the audio output if the video signals that go directly to the TV is slower than the audio streams.

Region codes

DVD movies are usually not released at the same time in all regions of the world, thus all DVD players are programmed to a specific region code.

DVD region code Countries





Asia Pacific, Taiwan, Korea






Australia, New Zealand

Product overview

Main unit

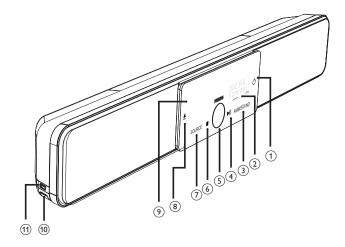



Note

 Control buttons on this DVD Home Theatre unit (SoundBar) are operated through touch screen display. The control displays will be dimly lit after one seconds of inactivity.

*

Tips

 To change the brightness of the touch screen display, see chapter 'Adjust settings' - [General Setup] > [Display Dim].

(1) (り

- Turn on this unit or turn off to standby mode.
- Press and hold to turn on this unit from a low power standby mode.
- ② Display panel
- 3 AMBISOUND
 - Select different surround sound output: auto, multi-channel or stereo.
- (4) II (Play/Pause)
 - Start or pause disc play.
 - RADIO: start auto radio installation (only available for first time setup).
- (5) Volume control
 - Adjust the volume level.
- **⑥ ■** (Stop)
 - Stop disc play.
 - RADIO: erase the current preset radio station.


(7) SOURCE

- Select a play media: DISC, USB, DOCK, RADIO FM, OPTICAL INPUT, DIGITAL INPUT, AUX SCART, AUX1 INPUT, AUX2 INPUT, AUX3 INPUT or MP3 LINK.
- - Open or close the disc compartment.
- 9 Disc compartment

The following connectors are located at the left side panel:

- (10) MP3 LINK socket
 - To connect portable audio player.
- (USB) socket
 - To connect USB flash drive, USB memory reader or digital camera.

Remote control

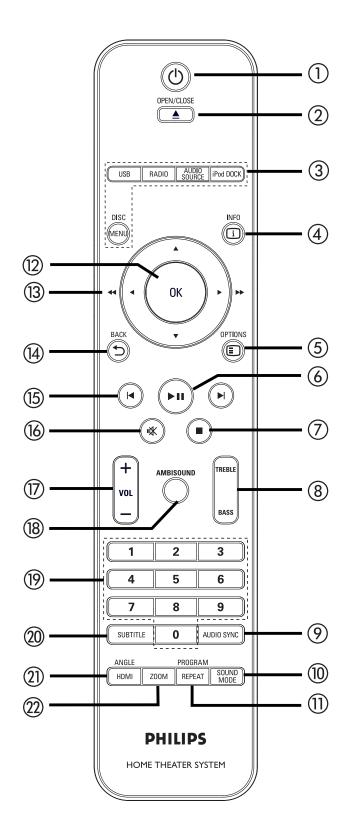

(1) (り

- Turn on this unit or turn off to standby mode.
- Press and hold to turn off this unit and all the HDMI CEC compliant TV/ devices (for EasyLink control only).

② OPEN/CLOSE ♠

• Open or close the disc compartment.

(3) Source buttons

- DISC MENU: switch to DISC mode.
 While in disc mode, access or exit disc menu.
- USB: switch to USB mode.
- RADIO: switch to FM band.
- AUDIO SOURCE: Select an audio input source.
- iPod DOCK: switch to the iPod in the dock.

(4) i INFO

- Display the current status or disc information.
- Display photo files in 12 thumbnails view.

(5) E OPTIONS

 Access or exit Options menu (this menu provides various setting options).

6 ► II (Play/Pause)

- Start or pause disc play.
- RADIO: start auto radio installation (only available for first time setup).

⑦ ■ (Stop)

- Stop disc play.
- RADIO: erase the current preset radio station.

(8) TREBLE / BASS

Switch to treble or bass mode. Then
press VOL + — to set its level setting.

(9) AUDIO SYNC

- Select an audio language/channel.
- Press and hold to access audio sync setting. Then press VOL + — to set the audio delay time.
- RADIO: toggle between FM stereo and mono mode.

(10) SOUND MODE

• Select a predefined sound effect.

(1) REPEAT / PROGRAM

- Select various repeat or shuffle modes; turns off repeat or shuffle mode.
- RADIO: press this button to start manual radio preset.
- **RADIO**: press and hold this button to start automatic radio preset.

(12) OK

• Confirm an entry or selection.

(13) Cursor buttons (▲▼◀ ▶)

- Navigate through the on-screen menu.
- Press left or right for fast backward or forward search.
- RADIO: press up or down to tune the radio frequency.
- RADIO: press left or right to start auto search.

⊕ SACK

• Return to the previous display menu.

- (5) I◀ / ▶I (Previous/Next)
 - Skip to the previous or next title/ chapter/track.
 - RADIO: select a preset radio station.

(6) ★ (Mute)

• Mute or restore the volume.

(17) VOL + -

• Adjust the volume level.

(18) AMBISOUND

• Select different surround sound output: auto, multi-channel or stereo.

(19) Numeric buttons

• Enter a preset number or item to play.

② SUBTITLE

• Select DVD or DivX subtitle language.

① HDMI / ANGLE

- Select a video resolution setting for HDMI output.
- Press and hold to select a different viewing angle of a DVD movie.

(2) ZOOM

• Zoom in or out the picture on the TV.

3 Connect

This section describes the basic connections required for this DVD Home Theatre unit before it can be used.

Basic connections:

- Place the unit
- Connect video cables
- Connect subwoofer
- Connect radio antenna

Optional connections:

- Connect audio cables/other devices
 - Connect audio from TV
 - Connect audio from cable box/ recorder/game console
 - Connect portable media player
 - Connect USB device
 - Connect iPod docking station
- Mount the DVD Home Theatre unit



Note

- Refer to the type plate at the rear or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all the devices are disconnected from the power outlet.




Гір

 Different types of connectors may be used to connect this product to your TV, depending on availability and your needs. A comprehensive interactive guide to help you connect your product is available at www.connectivityguide.philips.com.

Place the unit

- Place this unit on top of a table or mount it on the wall (see chapter 'Mount the DVD Home Theatre unit').
- Never place this unit in an enclosed cabinet.
- Install this unit near the AC outlet where the AC power plug can be easily reached.

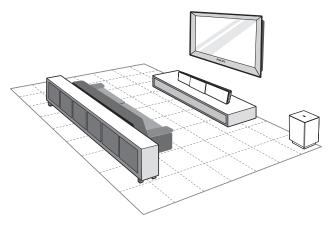

- 1 Place this DVD Home Theatre unit near to the TV.
 - Place it at a height that is closest to the listening ear-level.
- Position this DVD Home Theatre so that it is directly parallel to the listening area.





3 Place the subwoofer at the corner of the room or at least one metre away from the TV.



Note

 You may purchase a separate table top stand that can support both your Philips Plasma/LCD TV and this DVD Home Theatre unit from the nearest Philips retailers.

Connect video cables

This section describes how to connect this DVD Home Theatre unit to your TV so to enable viewing of disc play.

Select the best video connection that your TV can support.

- Option 1: Connect to HDMI socket (for a HDMI, DVI or HDCP-compliant TV).
- Option 2: Connect to component video socket (for a standard TV or Progressive Scan TV).
- Option 3: Connect to Video (CVBS) socket (for a standard TV).




Note


• You must connect this unit directly to a TV.

Before you connect

1 Pull up the catch to remove the rear cover.

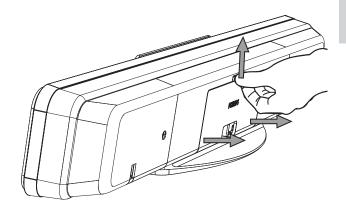

Connect the cables to the corresponding sockets and direct the cables to the CABLE OUT point.

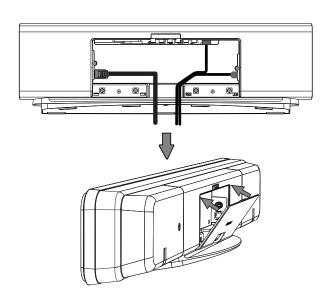


3 Once complete, close the rear cover.



Note

• All the cables must be placed properly inside the rear panel in order for the rear cover to close.

Option 1: Connect to HDMI socket

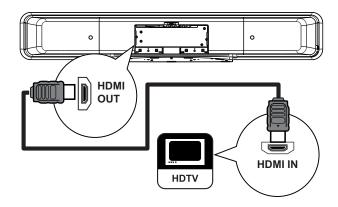

1 Connect a HDMI cable (supplied) from the HDMI OUT on this unit to the HDMI IN socket on your TV.



Note


 The HDMI connector is only compatible with HDMI compliant TVs and DVI-TVs.



Tips

- To optimise the video output, see chapter 'Adjust settings' > [Video Setup] > [Advanced Picture] for details.
- This unit is HDMI CEC compatible. It enables connected TV/device to control each other over HDMI, see chapter 'Activate EasyLink control' for details.
- Use a HDMI/DVI adaptor in case your TV has only a DVI connection. An extra audio connection is needed to complete this connection.
- To route the audio from your TV to this DVD Home Theatre unit, connect an audio cable from the audio input on this unit to the audio output on your TV.
- This type of connections provide best picture quality.

Option 2: Connect to component video socket

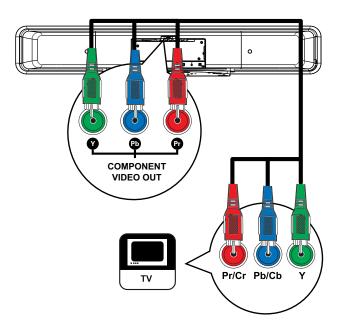


- 1 Connect the component video cables (not supplied) from the Y PB PR sockets on this unit to the component video input sockets on your TV.
 - If a progressive scan TV is used, you may turn on the progressive scan mode (see chapter 'Turn on Progressive Scan' for details).



Tips

- The component video input socket on your TV may be labelled as Y Pb/Cb Pr/Cr or YUV.
- This type of connections provide good picture quality.

Option 3: Connect to Video (CVBS) socket

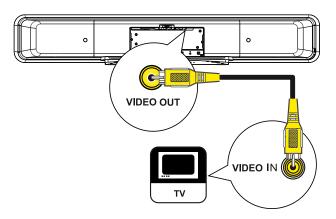


1 Connect a composite video cable (supplied) from the VIDEO OUT socket on this unit to the video input socket on your TV.



Tips


- The video input socket on your TV may be labelled as A/V IN, VIDEO IN, COMPOSITE or BASEBAND.
- This type of connections provide standard picture quality.

Connect subwoofer

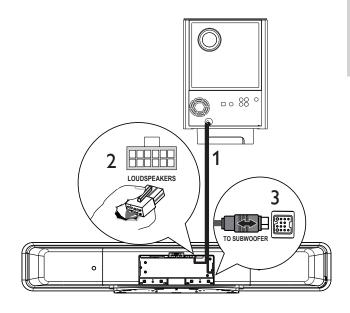

- 1 Unwind the subwoofer's interconnect cable at **TO MAIN UNIT**.
- 2 Connect the white end of the interconnect cable to the LOUDSPEAKERS socket on this unit.
- 3 Connect the grey end of the interconnect cable to the TO SUBWOOFER socket on this unit.

Connect radio antenna

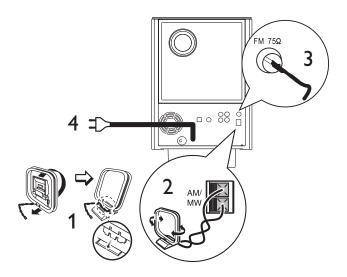

- 1 Stand the AM/MW loop antenna (supplied) upright to fix its claw into the slot.
- Connect the AM/MW loop antenna to the AM/MW socket. Then place the AM/MW loop antenna on a shelf, or attach it to a stand or wall.
- Gonnect the FM antenna (supplied) to the FM75 Ω socket on this unit (for some models, this cable has been connected). Extend the FM antenna and fix its ends to the wall.
- 4 Connect the power cord when all the required connections are complete and you are ready to enjoy this DVD Home Theatre unit.




Note

• Before connect to power outlet, ensure that the voltage selector (at the rear of this unit) is set to the local power line voltage.

Connect audio cables/other devices

This section describes how you can route the sound from other devices to this DVD Home Theatre unit in order to enjoy sound output or audio play with multi-channel surround capabilities.

Connect audio from TV (also used for EasyLink control)

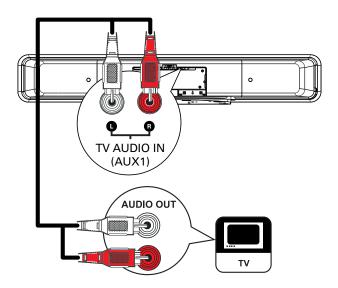

1 Connect an audio cable (not supplied) from the TV AUDIO IN (AUX1) sockets on this unit to the AUDIO OUT sockets on your TV.




Note

 To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'AUX1 INPUT' is displayed on the display panel.

Connect audio from cable box/ recorder/game console

You can choose to connect to analogue or digital socket depending on the device capabilities.

Connect to analogue sockets

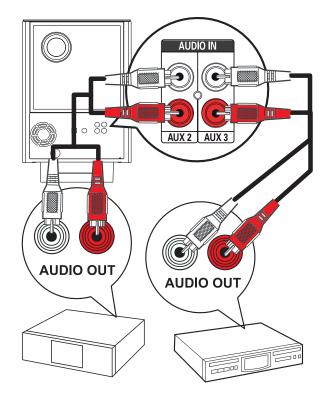


1 Connect an audio cable (not supplied) from the AUDIO IN-AUX2 or AUX3 sockets on the subwoofer to the AUDIO OUT sockets on the device.



Note

 To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'AUX2 INPUT' or 'AUX3 INPUT' is displayed on the display panel.

Connect to digital/optical socket

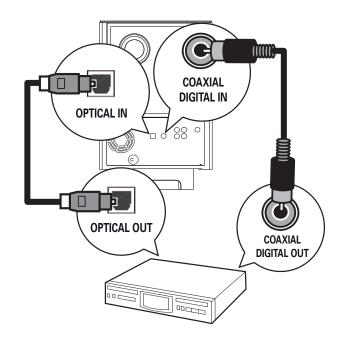

1 Connect a coaxial cable (not supplied) from the **DIGITAL IN-COAXIAL** socket on the subwoofer to the COAXIAL/DIGITAL OUT socket on the device.



Note

• To listen to the audio output from this connection, press **AUDIO SOURCE** repeatedly until 'DIGITAL INPUT' is displayed on the display panel.

or


1 Connect an optical cable (not supplied) from the **OPTICAL IN** socket on the subwoofer to the OPTICAL OUT socket on the device.



Note

 To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'OPTICAL INPUT' is displayed on the display panel.

Connect portable media player

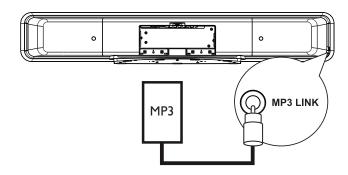


1 Connect a 3.5mm stereo audio cable (supplied) from the MP3 LINK socket on this unit to the phone socket on your portable media player (such as MP3 player).



Note

 To listen to the audio output from this connection, press AUDIO SOURCE repeatedly until 'MP3 LINK' is displayed on the display panel.

Connect USB device

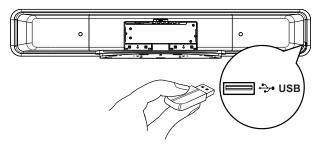


1 Connect the USB device to ⇔ (USB) socket on this unit.



Note

- This DVD Home Theatre unit can only play/view MP3, WMA/WMV, DivX (Ultra) or JPEG files that are stored on such devices.
- To listen to the audio output from this connection, press USB.

Connect iPod docking station

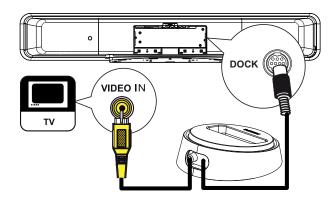

- 1 Connect the iPod docking station to DOCK socket on this unit.
- 2 To view videos/photos from iPod, connect the composite video cable from this docking station to your TV and switch to the corresponding channel on your TV.



Note


 To listen to the audio output from this connection, press iPod DOCK.

Mount the DVD Home Theatre unit


!

Caution!


- Risk of personal injury and damage to the unit.
- 1 Ensure all the required cables are connected to this unit.
- Remove the screws and detach the DVD Home Theatre stand, then close the rear cover.

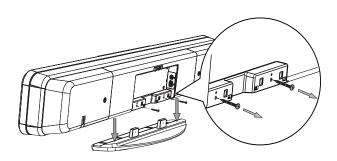

Attach the supplied knobs to the rear of this unit.

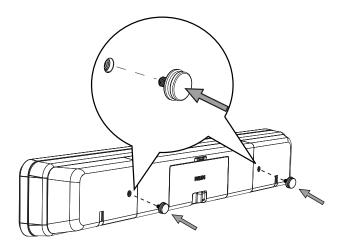


4 Position the supplied bracket on the wall, drill the screw holes and insert the rubber wall plugs (not supplied) into the holes.

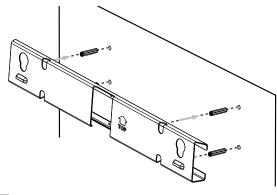




- Tips
- To mount this DVD Home Theatre unit below your TV, leave at least 10cm (4 inches) of space between the TV and the bracket.
- **5** Secure the bracket onto the wall with the screws (not supplied).

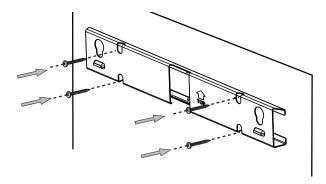


6 Hook the DVD Home Theatre unit firmly onto the mounted bracket. Slide the knobs through the key holes and lock into position.

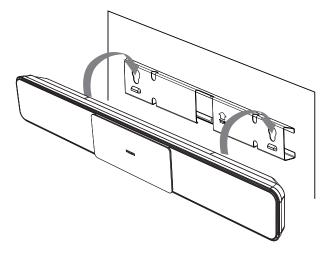

4 Get started

Prepare the remote control

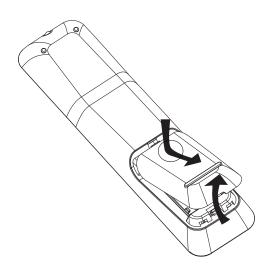

- 1 Push to open the battery compartment cover.
- Insert two batteries type R03 or AAA. Match the indications (+ -) inside the battery compartment.
- 3 Close the cover.



Note


- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed off properly.

Control a play source

- 1 Select the source you wish to control by pressing the DISC MENU, USB, RADIO or AUDIO SOURCE or iPod DOCK button.
- Then select the desired function (for example ◄, ►I).

Navigate through the menu

1 Point the remote control directly at the remote sensor on this unit and select the desired function.

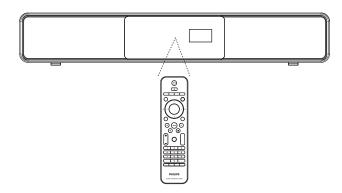

2 Use the following buttons on the remote control to navigate through the on-screen menus.

Button	Action
▲ ▼	Move up or down.
4 >	Move left or right.
ОК	Confirm a selection.
1 2 3 4 5 6 7 8 9	Enter numbers.

Find the correct viewing channel



Note

- Before you start, remove the door stop tag on top of the disc compartment door.
- 1 Press 0 to turn on the DVD Home Theatre unit.
- Press **DISC MENU** to switch to disc mode
- 3 Turn on the TV and switch it to the correct video-in channel.
 - You may go to the lowest channel on your TV, then press the Channel Down button on your TVs remote control until you see the Video In channel.
 - You may press button repeatedly on your TVs remote control.
 - Usually this channel is between the lowest and highest channels and may be called FRONT, A/V IN, VIDEO, etc..



Tips

• See TVs user manual on how to select the correct input on your TV.

Start Ambisound setup

When you turn on this unit for the first time, follow the instructions on the TV to complete the Ambisound setup in order to obtain the best possible surround sound effect.



Note

- Before you start, ensure that you have made all the required connections.
- Complete the Ambisound setup for this unit before you insert a disc to play.
- 1 Press **DISC MENU** to switch to disc mode
- 2 Turn on the TV and switch it to the correct video-in channel.
 - → Language menu is displayed.

OSD Language

Please choose your language:

- English
- 〇 中文
- 繁體中文
- Melayu
- О Русский
- ี ไทย



Stop: Exit



Change



Select


- 3 Select a language for on-screen display, then press ▶.
 - → A welcome message is displayed.
 - To skip the Ambisound setup, press to exit.
- 4 Press ▶ to continue.
 - A message on the unit orientation is displayed.

5 Press ▶ to continue. ☐ [Room Acoustics] menu is displayed.

Room Acoustics Please select the type of walls that surround your room: Hard (Concrete, wood) Soft (Curtains, open space) Back Change Select


Select the condition of the room, then press .

☐ [Room Placement] menu is displayed.

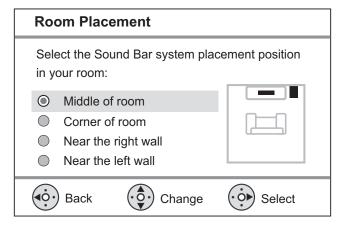


Select the DVD Home Theatre unit (SoundBar) placement in the room, then press .

→ [Height] menu is displayed.

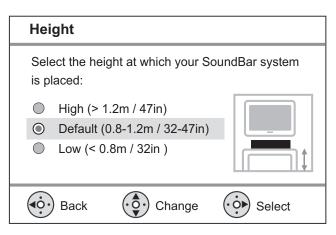

Select the height of which the DVD Home Theatre unit (SoundBar) is placed, then press .

Listening Position | menu is displayed.

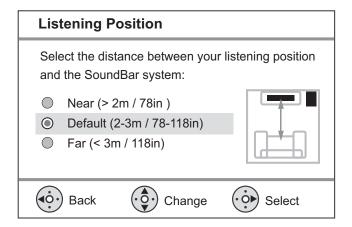

- Select the distance between the listening position and the speakers, then press ▶.
- 10 The speaker setting is complete, press ▶ to exit.

This DVD Home Theatre unit is now ready for use.



Tips

- To change the menu display language, see chapter 'Adjusting settings' - [General setup] > [OSD Language] for details.
- If you connect this unit to a HDMI CEC compliant TV using a HDMI cable, it switches automatically to the menu display language as per your TV setting.

Turn on Progressive Scan

If you connect this unit to TV with the component video connection (see chapter 'Connect video cables - Option 2: Connect to component video jack' for details), you can turn on the progressive scan output if your TV supports progressive scan.

- 1 Turn on the TV to the correct viewing channel for this unit.
- 2 Press DISC MENU.
- 3 Press © OPTIONS...
- 4 Press ▼ to select ☐ [Video Setup] in the menu, then press ▶.

	Video Setup	
97	TV Type	On
l VO	TV Display	Off
lщ]ν	Picture Settings	
المرادة	Advanced Picture	
	Closed Caption	
	Progressive	

- $\begin{array}{ll} & & \\ & &$
 - → A warning message is displayed.
- 6 To proceed, select [OK] in the menu and press OK.
 - → The progressive setup is complete.



Note

- If a blank/distorted screen is displayed, wait for 15 seconds for the auto recover.
- If no picture displayed, turn off the progressive scan mode as follows:
 - 1) Press \triangleq to open the disc compartment.
 - 2) Press ►.
 - 3) Press SUBTITLE.

- 7 To exit the menu, press **OPTIONS**.
- **8** You can now turn on the progressive scan mode on your TV (see the TV user manual).



Note

 There are some progressive scan TVs that are not fully compatible with this unit, resulting in an unnatural picture when playing back a DVD VIDEO disc in the progressive scan mode. In such case, turn off the progressive scan feature on this unit and your TV.

Activate EasyLink control

This feature is only applicable if this unit is connected to HDMI CEC compliant TV/device. It enables all the linked devices response or react to certain commands simultaneously with one touch control.

- 1 Turn on the HDMI CEC operations on your TV and other connected devices. See TVs/devices manual for details.
- 2 You can now enjoy the EasyLink controls.

One touch play [Auto Wake-up TV]

When you press PLAY button, this unit will wake- up from standby mode and start disc play (if a video disc is found in the disc compartment) and it will also turn on your TV and switch to the correct viewing channel.

One touch power off [System Standby]

When you press and hold 5 (STANDBY) button for at least three seconds, it will turn off this unit and all the linked devices to standby.

This unit also responses to standby command from other HDMI CEC devices.

One touch audio input switching [System Audio Control]

This unit is able to render the audio signals from the active source. It switches automatically to the corresponding audio input and output the sound from its speaker system.

- Before you can enjoy this function, you have to map the audio inputs to the connected devices.
- You can use any HDMI CEC TV/device remote control to adjust the volume.



Note

- To enable one touch play function, a video disc must be placed in the disc compartment before operation.
- Philips does not guarantee 100% interoperability with all HDMI CEC compliant devices.

Map the audio inputs to the connected devices



Note

- Before you start, ensure that an audio connection has been made between this unit and your TV/ devices.
- 1 Press DISC MENU.
- Press **OPTIONS**..

 General Setup] menu is displayed.
- **3** Press ▶.
- 4 Select [EasyLink], then press ▶.

	General Setup	
ψ ₁	EasyLink	Auto Wake-up TV
VO	Disc Lock	System Standby
ш ₁ »	Display Dim	System Audio Control
	OSD Language	Audio Input Mapping
	Screen Saver	
	Sleep Timer	
	Standby Mode	
	DivX(R) VOD Code	

- [Auto Wake-up TV] and [System Standby] functions are turned on by default in the factory.
- Select [System Audio Control] > [On], then press OK.
- 6 Select [Audio Input Mapping], then press OK.


- 7 Select [OK] in the menu, then press OK to start scanning of devices.
 - → Once complete, audio input mapping menu is displayed.

	Audio Input Mappir	ng
ω₽	AUX1 Input	TV
Yä	AUX2 Input	Other (non-HDMI)
lш]»	AUX3 Input	
197"	Digital Input	
\Box		

- 8 Select the audio input of this unit that is used to connect to other HDMI device (e.g. AUX1 Input, AUX2 Input), then press
- 9 Select the correct connected device, then press **OK**.
 - Repeat steps 8~9 to map other connected devices.
- **10** To exit the menu, press **OPTIONS**.


Select a play source

 On the main unit



1 Press SOURCE repeatedly to select:
DISC > USB > DOCK > RADIO FM >
RADIO AM/MW > OPTICAL INPUT >
DIGITAL INPUT > AUX1 INPUT >
AUX2 INPUT > AUX3 INPUT >
MP3 LINK > DISC ...

On the remote control

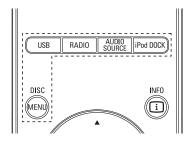

- Press DISC MENU to switch to DISC mode.
- Press **USB** to switch to USB mode.
- Press **RADIO** to switch to FM band.
- Press AUDIO SOURCE to select an audio input source.
- Press iPod DOCK switch to the iPod mode.

Display	Device connected to
AUX1 INPUT	TV AUDIO IN sockets.
AUX2 INPUT	AUDIO IN-AUX2 sockets.
AUX3 INPUT	AUDIO IN-AUX3 sockets.
OPTICAL INPUT	OPTICAL IN socket.
DIGITAL INPUT	COAXIAL DIGITAL IN socket.
MP3 LINK	MP3 LINK socket.

Play from disc



Note

- DVDs and DVD players are designed with regional restrictions. Ensure that the DVD video you play is for the same region zone as your player (indicated on its rear).
- This unit can support playback of the following file formats: MP3/WMA/JPEG/DivX/WMV 9.
- About WMV 9 this unit only supports Main Profile (low level) and Simple Profile. Advanced Profile and DRM-protected video files are not supported.

Play a disc



Caution!

- Never place any objects other than discs into the disc compartment.
- Never touch the disc optical lens inside the disc compartment.
- Press

 to open the disc compartment.
- Insert a disc with its label facing up.
 - For double-sided disc, load the side to play faces up.
- Press

 to close the disc compartment and start disc play.
 - To view disc play, turn on the TV to the correct viewing channel for this DVD Home Theatre unit.
- To stop disc play, press ■.



Tips

- If the password entry menu is displayed, you have to enter the 4-digit password before it can be played.
- Screen saver displays automatically if the disc play is stopped for about 15 minutes. To wake up from screen saver, press DISC MENU.
- This unit automatically switches to standby mode if you do not press any buttons within 30 minutes after a disc has stopped playing.

Play video



Note

Control a title

- 1 Play a title.
- 2 Use the remote control to control the title.


Button	Action
(FII)	Pause/ resume play.
	Stop play.
(A)	Jump to the next title/chapter.
4	Return to the beginning of the current title/chapter or jump to the previous title/chapter.
₩	Search backward/ forward. • To change search speed, press this button repeatedly.
A V	 Slow motion reverse/ forward play. To change play speed, press this button repeatedly. For VCD, only forward play is possible.

Change video play

- **1** Play a title.
- 2 Use the remote control to change the video play.

Button	Action
AUDIO SYNC	 Change audio language. Only applicable to discs with multiple audio language or channel.
SUBTITLE	Change subtitle language.Only applicable to discs with multiple subtitle language.
PROGRAM REPEAT	 Toggle through various repeat/ shuffle play mode; or turn off repeat mode. Repeat options vary depending on the disc type. For VCDs, repeat play is only possible when the PBC mode is turned off.
Z00M	Zoom in/out.To pan through the zoomed image, press the cursor buttons.
INFO	 Display current play status. You can change the video play options here without interrupting disc play.
ANGLE HDMI	Press and hold to view DVD play from different camera angles. • Only applicable to DVDs that contain sequences recorded from different camera angles.

Access DVD menu

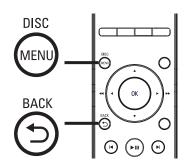

- 1 Press **DISC MENU** to access disc main menu.
- 2 Select a play option, then press **OK**.
 - In some menus, press number buttons to input your selection.
 - To return to the title menu during playback, press SACK.

Access VCD menu

The PBC (Playback Control) for VCD is turned on by default in the factory. When you load in a VCD, the contents menu is displayed.

- 1 Press ▲▼ to select a play option, then press OK to start play.
 - If PBC is off, it skips the menu and starts play from the first title.
 - During playback, you can press
 BACK to return to the menu (if the PBC mode is on).




Tips

 The default setting for PBC is on. To change the default setting, see chapter 'Adjust settings' -[Preference Setup] > [PBC] for details.

Sync audio output with video play

If the video play is slower than the audio output (sound does not match with the pictures,) you can delay the audio output to match the video.

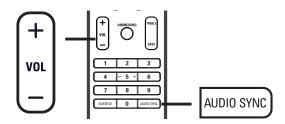


- 1 Press and hold AUDIO SYNC until 'AUDIO SYNC XXX' is displayed.
 - 'XXX' denotes the delay time.
- Within five seconds, press **VOL** + to set the delay time for audio output.



Note

 If the volume control is not used within 5 seconds, it resumes normal volume control function.

Quick skip play to a specific time

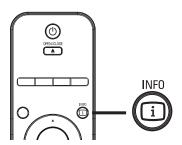

- 1 During playback, press i INFO.→ The disc status menu is displayed.
- 2 Select the current elapsed playing time in the menu, then press **OK**.
 - [TT Time] (title time)
 - [CH Time] (chapter time)
 - [Disc Time] (disc time)
 - [Track Time] (track time)
- Press the number buttons to change the time where you want to skip to, then press OK.

Play DivX® video

DivX video is a digital media format that retains high quality despite a high rate of compression. This unit is DivX® Certified that allows you to enjoy DivX video.

- 1 Insert a disc or USB that contains the DivX videos.
- Press **DISC MENU** or **USB**.

 → A contents menu is displayed.
- 3 Select a title to play, then press ►II.
- 4 Use the remote control to control the title.

Button	Action
SUBTITLE	Change subtitle language.
AUDIO SYNC	Change audio language/track.
	 Stop play. For DivX Ultra video, press this button again to display the contents menu.
INFO	Display DivX Ultra video information.



Note

- Only those DivX videos that were rented or purchased using the DivX registration code of this unit can be played (see chapter 'Adjust settings' > [General Setup] > [DivX(R) VOD Code] for details).
- If the subtitle does not appear correctly, change the subtitle language (see chapter 'Adjust settings' [Preference Setup] > [DivX Subtitle] for details).
- The subtitle can only be displayed up to an average of 45 characters.
- This unit can play DivX video files that are up to 4GB in size.

Play music



Note

• For some commercial audio disc, playback may resume from the point where it was last stopped. To start playback from first track, press ◄.

Control a track

- 1 Play a track.
- 2 Use the remote control to control the track.

Button	Action
I	Pause/ resume play.
	Stop play.
(F)	Jump to the next track.
4	Return to the beginning of the current track or jump to the previous track.
1 2 3 4 5 6 7 8 9	Direct enter the track number.
₩	Search backward/ forward. • To change search speed, press this button repeatedly.
PROGRAM REPEAT	Toggle through various repeat/ shuffle play mode; or turn off repeat mode. Repeat options vary depending on the disc type.

Play MP3/WMA music

MP3/WMA is a type of highly compressed audio file (files with .mp3 or .wma extensions).

- 1 Insert a disc or USB that contains the MP3/ WMA music.
- Press **DISC MENU** or **USB**.

 → A contents menu is displayed.
- 3 Select a folder, then press **OK**.
- 4 Select a track to play, then press ►II.
 - To return to the main menu, press ▲ until 'Previous' folder is selected, then press OK.



Note

- For CDs recorded in multiple sessions, only the first session is played.
- This unit does not support MP3PRO audio format.
- If any special characters are present in the MP3 track name (ID3) or album name, it might not be displayed correctly on the screen because these characters are not supported.
- Some WMA is protected by Digital Rights
 Management (DRM), it cannot be played on this unit.
- Folders/files exceed the supported file limit of this unit will not be displayed or played.



Tips

 To display the data disc contents without folders, see chapter 'Adjust settings' - [Preference Setup] > [MP3/JPEG Nav] for details.

Play photo

Play photos as slideshow

This unit can play JPEG photos (files with .jpeg or .jpg extensions).

- 1 Insert a disc or USB that contains the JPEG photos.
- 2 Press DISC MENU or USB.
 - → For a Kodak disc, the slideshow begins automatically.
 - For a JPEG disc, the photo menu is displayed.
- 3 Select the folder/album you want to play.
 - To preview the photos in the folder/ album, press i INFO.



- To go to previous or next screen
- To select a photo, press the cursor buttons.
- To display the selected photo only, press OK.
- 4 Press II to start slideshow play.

display, press ◀ / ►.

To return to the menu, press
 BACK.



Note

- It may require longer time to display the disc contents on the TV due to the large number of songs/photos compiled onto one disc.
- If the JPEG photo is not recorded with an 'exif' type file, the actual thumbnail picture will not be shown on the display. It will be replaced with a 'blue mountain' thumbnail picture.
- This unit can only display digital camera pictures according to the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG and pictures in formats other than JPEG, or sound clips associated with pictures.
- Folders/files exceed the supported file limit of this unit will not be displayed or played.

Control photo play

- 1 Play photo slideshow.
- 2 Use the remote control to control the photo.

Button	Action
◀	Skip to the previous photo.
>	Skip to the next photo.
A	Rotate the photo clockwise.
▼	Rotate the photo anti- clockwise.
Z00M	Zoom in/ out.Play will pause while in zoom mode.
•	Stop play.


Play musical slideshow

Play MP3/WMA music files and JPEG photo files simultaneously to create musical slideshow. The MP3/WMA and JPEG files must be stored on the same disc or USB device.

- 1 Play MP3/WMA music.
- Navigate to the photo folder/album and press ►II to start slideshow play.
 - Slideshow begins and continues till the end of the photo folder or album.
 - Audio continues to play till the end of the disc.
 - To return to the menu, press
 BACK.
- **3** To stop slideshow play, press ■.
- **4** To stop music play, press again.

Play from USB device

This unit can only play/view MP3, WMA/WMV, DivX (Ultra) or JPEG files that are stored on such devices.

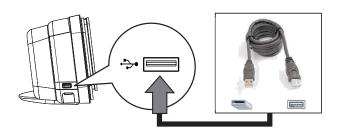

- 1 Connect a USB flash drive or USB memory card reader to the (USB) socket on this unit.
- 2 Press USB.→ A contents menu is displayed.
- 3 Select a file to play, then press ►II.
 - For more information, see chapters 'Play music, Play photo, Play video' for details.
- **4** To stop play, press or remove the USB device.




Tips

- If the device does not fit into the USB socket, connect it through a USB extension cable.
- If a multiple USB card reader is used, only one of the connected USB drive contents can be accessed.
- If a USB HDD is used, ensure that an auxiliary power cord connected to the USB HDD for proper operations.
- Digital cameras that use PTP protocol or require additional programme installation when connected to a PC are not supported.

Play from portable media player

Simply connect your portable media player (e.g. MP3 player) to this unit to enjoy superb sound quality from your music collections.

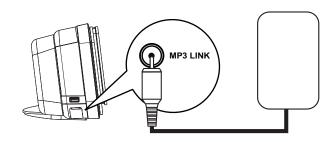

- 1 Connect a 3.5mm stereo audio cable (supplied) from the MP3 LINK socket on this unit to the 'headphone' socket on your portable media player.
- Press AUDIO SOURCE repeatedly until 'MP3 LINK' is displayed.
- 3 Start play on your portable media player.
 - See chapter 'Adjust Sound' to enhance the audio output.
- **4** To stop play, press STOP button on your portable media player.



Note

- Control playback is only possible on your portable media player.
- Stop play on the portable media player before you switch to other play media/source.

Play from iPod

Simply connect your iPod to the Philips universal docking station to enjoy your iPod play through this DVD Home Theatre unit.

List of supported iPod range:

iPod nano 1st gen
iPod nano 2nd gen
iPod nano 3rd gen
iPod nano 4th gen
iPod Touch 1st gen
iPod Touch 2nd gen




Note

• Refer to Philips website for latest updates on supported iPod range.


Prepare the docking station

If your iPod cannot be fit into the docking station, adjust the 'support' as below.

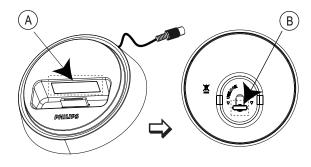

- A adjustable 'support'
- (B) knob
- 1 Turn the knob (B) at the bottom of the docking station anti-clockwise to loosen the adjustable 'support'.
- Adjust the 'support' (a) until it can fit your iPod.
- 3 Turn the knob clockwise to tighten it.

Control iPod music

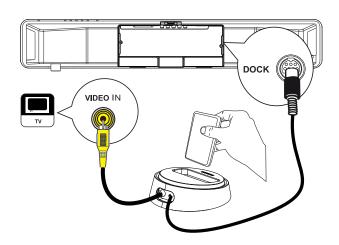

- 1 Connect the docking station to the **DOCK** socket on this unit.
- 2 Dock your iPod to the docking station and turn it on.
- 3 Press IPod DOCK.
 - It may require longer time to authenticate the compatibility of certain iPod range.
- 4 Start play on your iPod.
 - To view iPod video play, connect a video cable from the docking station to your TV and turn on 'TV ON' setting in your iPod.
- **5** During playback, you can use the remote control to control the music play.

Button	Action
+ vol -	Change the volume level.
SOUND MODE	Select a predefined sound effect.
AMBISOUND	Select an Ambisound effect.
(4) (F)	Go to the previous/ next track.
↔	Search backward/ forward.
▶ II	Pause/resume play.
INFO	Switch to 'Extended Control mode' to enable control of your iPod play through the contents displayed on TV. • Control buttons on iPod have no function in this mode. • Press this button again to return to simple play mode.
PROGRAM	Toggle through various repeat/shuffle play mode; or turn off repeat mode. • This option is only available in 'Extended Control mode'.




I ips

- While in iPod mode, the battery of your iPod will be charged.
- In extended play mode, control of iPod play is only possible through the contents displayed on your TV using this DVD Home Theatre's remote control.

Play from radio

Check if the FM antenna has been connected to the subwoofer. If not, connect the supplied FM antenna to the FM 75Ω socket and fix its ends to the wall.

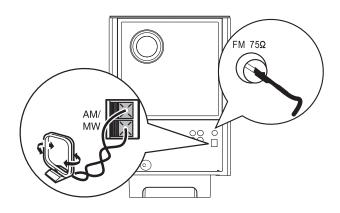



Note

 For China/Latin America region only, if you want to receive AM/MW radio band, connect the AM loop antenna (supplied) to the AM/MW sockets on this DVD Home Theatre unit.



Tips

- For better FM stereo reception, connect an external FM antenna (not supplied).
- Position the antenna as far away as possible from your TV, VCR or other radiation source to prevent unwanted interference.

First time tuning

The first time when you access 'RADIO' mode, follow the instructions to install the radio stations.

1 Press RADIO.

→ 'AUTO INSTALL ... PRESS PLAY' is displayed.

2 Press ►II.

- → All detected radio stations are stored.
- → Once complete, it tunes to the first preset radio station.
- To stop auto tuning, press ■.



Note

- This unit can store up to a maximum of 40 radio stations.
- If auto installation is not activated or less than 5 radio stations are stored, 'AUTO INSTALL' will be displayed again the next time you turn on to radio mode.

Listen to radio

- 1 Press RADIO repeatedly to select 'FM' or 'AM/MW' band.
- 2 Use the remote control to control the radio.

Button	Action
(4) (F)	Select a preset radio station.
↔	Tune the radio frequency backward/ forward.
AUDIO SYNC	Toggle between FM stereo and FM mono mode.
	Press and hold this button to delete the preset station from the preset list. The preset number for other radio stations remain unchanged.

Reinstall all the radio stations

- 1 Press **RADIO** repeatedly to select 'FM' or 'AM/MW' band.
- Press and hold **PROGRAM** until 'STARTING INSTALL' is displayed.
 - All previously stored radio stations will be replaced.



Note

 If no stereo signal is detected or less than 5 stations are detected during radio installation, 'CHECK ANTENNA' is displayed.

Search and store radio stations individually

- 1 Press RADIO repeatedly to select 'FM' or 'AM/MW' band.
- 2 Press **◄◄** ▶▶.
 - The radio frequency indication starts to change until a radio station is detected.
- Repeat step 2 until you tune to the radio station you wish to store.
 - To finetune the radio frequency, press
- 4 Press PROGRAM.
 - If no action is carried out within 20 seconds after the above step, it exits the preset mode.
- Press ► (or the number buttons) to select a preset number to store.
- 6 Press **PROGRAM** to confirm.

Change tuning grid

In some countries, the frequency step between adjacent channels in FM band is 50 kHz or 100 kHz (AM/MW band is 9 kHz or 10 kHz).



Note


- This feature only applicable for certain region.
- Change tuning grid erases all preset radio stations.
- 1 Press RADIO repeatedly to select 'FM' or 'AM/MW' band.
- **2** Press ■.
- 3 Press and hold ►II until 'GRID 9' or 'GRID 10' is displayed.
 - 'GRID 9' for FM 50 kHz (or AM 9 kHz) and 'GRID 10' for FM 100 kHz (or AM 10 kHz).

6 Adjust sound

Control the volume

- 1 Press VOL + to increase or decrease the volume level.
 - To mute the volume, press **\\$**.
 - To restore the volume, press **K** again or press the volume button.

Adjust Bass/Treble

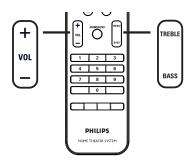


- 1 Press BASS / TREBLE.
- 2 Press VOL + repeatedly to set the level for low (BASS) or high (TREBLE) tone.



Note

• If the volume control is not used within 10 seconds, it resumes normal volume control function.


Select Ambisound

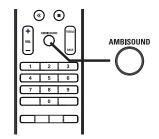

1 Press **AMBISOUND** repeatedly to select a best Ambisound output that most suits the video or music you play.

Options	Descriptions
AUTO	The surround output will be selected based on the audio
	stream of the played content.
MULTI- CHANNEL	Multi-channel surround sound.
STEREO	Stereo sound.

Select a preset sound effect

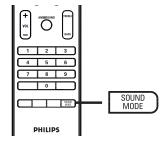

1 Press **SOUND MODE** repeatedly to select a sound effect that most suits the video or music you play.

Video / Music /	Descriptions
ACTION / ROCK /	Enhanced low and high range for great sounding movie effects and atmosphere. Great for action movies and rock/pop music.
DRAMA / JAZZ	Clear mid and high range. Recreates the atmosphere of a live club with the artist just in front of you. Good for Jazz music and watching dramas.
CONCERT / CLASSIC	Flat and pure sound mode. Ideal for listening to classical music and watching live concert DVDs.
GAMING / PARTY	Slightly enhanced low range and strong mid range ideal for party music and video gaming.
SPORTS	Moderate mid range and surround effects for clear vocals and the atmosphere of a live sports venue.
NEWS	Enhanced mid range for clear vocals/speech.

7 Adjust settings

This section describes the various setting options of this unit.

Symbol	Options
%	[General Setup]
()»	[Audio Setup]
\Box	[Video Setup]
	[Preference Setup]



Note

• Underlined options are the factory default settings

General setup

- 1 Press OPTIONS.
 General Setup] menu is displayed.
- 2 Press ►.
- 3 Select an option, then press OK.

	General Setup	
(U) F	EasyLink	
VO.	Disc Lock	
LL]))	Display Dim	
7,	OSD Language	
	Screen Saver	
	Sleep Timer	
	Standby Mode	
	DivX(R) VOD Code	

- See the explanations of the above options in the following pages.
- 4 Select a setting, then press **OK**.
 - To return to the previous menu, press
 BACK.
 - To exit the menu, press
 OPTIONS.

[EasyLink Setup]

This feature is only applicable if this unit is connected to HDMI CEC compliant TV/ device. It enables all the linked devices response or react to certain commands simultaneously with one touch control.

Options	Descriptions
[Auto Wake- up TV]	It wake-ups your TV automatically when you press PLAY to power up this unit and start disc play (if a video disc is found in the disc compartment). • To disable this feature, select [Off].
[System Standby]	Respond to standby command from other HDMI CEC compliant TV/devices. • To disable this feature, select [Decline].
[System Audio Control]	It enables this DVD Home Theatre unit to switch automatically to the audio input of the active device. • To enable this feature, select [On]. Then proceed to [Audio Input Mapping] to scan and map all the connected devices.

[Audio Input Mapping]

Map the audio input to the connected TV/ devices correctly to enable automatic switching of input source.

- **1.** Press **OK** to start scanning of devices.
- 2. Select the audio input to map (e.g. AUX1 Input, AUX2 Input), then press ▶.
- 3. Select the correct device that connected to this audio input, then press **OK**.



Note

- Your TV and other connected devices must be compliant with HDMI CEC.
- You must turn on the HDMI CEC operations on your TV/devices before you can enjoy the EasyLink controls. See your TVs/devices manual for details.
- Philips does not guarantee 100% interoperability with all HDMI CEC compliant devices.

[Disc Lock]

Set play restriction for a specific discs. Before you start, place the disc in the disc compartment (maximum 40 discs can be locked).

- [Lock] restrict access to the current disc. The next time you want to play this disc or unlock it, you need to enter the password.
- [<u>Unlock</u>] all discs can be played.



l iba

 To set or change your password, go to [Preference Setup] > [Password].

[Display Dim]

Change the brightness level of the display panel to suit the lighting in your room.

- [100%] normal brightness.
- [70%] medium brightness.
- [40%] dimmest display.

[OSD Language]

Select the default on-screen menu language.

[Screen Saver]

Turn off or on the screen saver mode. It helps to protect the TV screen from being damage due to over exposure to a static image for too long.

- [On] set the screen saver to appear after 15 minutes of inactivity (for example, in pause or stop mode).
- [Off] disable screen saver mode.

[Sleep Timer]

Switch to standby automatically after the preset time.

- [Off] disable sleep mode.
- [15, 30, 45, 60 mins] select the count down time before it switches to standby.

[Standby Mode]

Set the standby mode.

- [Normal] normal standby power consumption. Requires shorter time to power up.
- [Low Power] low standby power consumption. However, it requires longer time to power up.

[DivX(R) VOD Code]

Display the DivX® registration code.



Tips

 Enter this unit's DivX registration code when you rent or purchase video from www.divx.com/vod.
 The DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which it is registered.

Audio setup

- 1 Press OPTIONS.
 General Setup] menu is displayed.
- Press ▼ to select ♥ [Audio Setup], then press ▶.
- 3 Select an option, then press **OK**.

	Audio Setup	
(Y)H	Ambisound Setup	
ן עם	HDMI Audio	
\square	Night Mode	

- 4 Select a setting, then press **OK**.
 - To return to the previous menu, press
 BACK.
 - To exit the menu, press
 OPTIONS.

[Ambisound Setup]

Change the Ambisound setup.

Options	Descriptions
[Setup Guide]	Select this if you want to go through the complete Ambisound settings.
[Room Acoustics]	Select the type of walls that surround your room.
[Room Placement]	Select this unit placement in the room.
[Height]	Select the height at which this unit is placed.
[Listening Position]	Select the distance between your listening position and this unit.



Tips

 See chapter 'Get Started - Start Ambisound setup' for detailed information.

[HDMI Audio]

When you connect this unit and TV with HDMI cable, select the audio output setting for this connection.

- [On] the sound is output through both your TV and this speaker system. If the audio format on the disc is not supported, it will be downmixed to two-channel sound (linear-PCM).
- [Off] disable audio output from your TV. The sound is only output through this speaker system.

[Night Mode]

Make loud sound level softer and soft sound level louder so that you can watch the DVD movies at a low volume, without disturbing others.

- [On] for quiet viewing at night (DVDs only).
- [Off] enjoy surround sound with a full dynamic range.

Video setup

- 1 Press OPTIONS.☐ General Setup] menu is displayed.
- Press ▼ to select ☐ [Video Setup], then press ▶.
- 3 Select an option, then press **OK**.

	Video Setup	
YH	TV Type	
ן עם	TV Display	
ш ₁ »	Picture Settings	
	Advanced Picture	
	Closed Caption	
	Progressive	

- See the explanations of the above options in the following pages.
- 4 Select a setting, then press **OK**.
 - To return to the previous menu, press
 BACK.
 - To exit the menu, press
 OPTIONS.

 
[TV Type]

Change this setting only if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- [PAL] for PAL-system TV.
- [NTSC] for NTSC-system TV.
- [Multi] for TV that is compatible with both PAL and NTSC.

[TV Display]

Select the screen format according to how you want the picture to appear on your TV.



- [4:3 Pan Scan] for standard TV, a full-height screen display with the sides trimmed.
- [4:3 Letter Box] for standard TV, a 'wide-screen' display with black bars on the top and bottom.
- [<u>16:9 Wide Screen</u>] for wide-screen TV (frame ratio 16:9).

[Picture Settings]

Select a predefined set of picture colour settings or customise your personal setting.

- [Standard] original colour setting.
- [Bright] vibrant colour setting.
- [Soft] warm colour setting.
- [Personal] customise the colour setting. Set the level of brightness, contrast, tint and colour saturation in the menu, then press **OK**.

[Advanced Picture]

This is an advanced setting to optimise the video output. This option is only applicable for video connection through HDMI or Component Video with Progressive Scan output.

 [DCDi] — Turn on or off Directional Correlation Deinterlacing feature. It fills the missing lines to optimise video content. It is especially effective during slow motion play.



Note

- DCDi setting is only available for progressive scan output.
 - [Gamma] Adjust the colour of an image element (pixel) to produce a perfect and clear picture.
 - [Chroma Delay] Adjust the advance delay of chroma signals to produce a perfect and clear picture.
 - [True Life] Increase the contrast and colour intensity to produce a more dynamic picture.



Note

 To adjust the above settings, select an option and press OK. Then press cursor left or right to change the value/level setting and press OK to confirm. • [Wide Screen Format] – define the wide screen format for disc play.

Options	Descriptions
[Superwide]	Centre position of the screen is stretched less than the side. This setting is only applicable if the video resolution is set to 720p or 1080i/p.
[4:3 Pillar Box]	No stretching of the picture. Black bars are displayed on both sides of the screen.
[Off]	Picture will be displayed according to the format of the disc.



Note

- This setting is only available if you have set the [TV Display] setting to [16:9 Wide Screen].
 - [HDMI Video] select a video resolution that is compatible with your TV display capability.

Options	Descriptions		
[Auto]	It detects and selects the best supported video resolution automatically.		
[480p, 576p, 720p, 1080i, 1080p]	Select a video resolution that best supported by your TV. See your TVs manual for details.		



Note

 If the setting is not compatible with your TV, a blank screen appears. Press HDMI repeatedly until the picture appears.

[Closed Caption]

Turn on or off display captions.

- [On] show the sound effects in subtitle. Only applicable to disc with Closed Caption information included and your TV supports this feature.
- [Off] disable closed caption.

[Progressive]

If your TV can support progressive signals, you can activate the progressive scan mode of this unit.

- [On] turn on progressive scan mode.
- [Off] disable progressive scan mode.



Tips

• See chapter 'Get Started - Turn on Progressive Scan' for detailed information.

Preference Setup

- 1 Press OPTIONS.
 General Setup] menu is displayed.
- Press ▼ to select ☐ [Preference Setup], then press ▶.
- 3 Select an option, then press OK.

	Preference Setup	
(Y)H	Audio	
V 🛮	Subtitle	
ш <u>л</u> у	Disc Menu	
٦	Parental	
	PBC	
	MP3/JPEG Nav	
	Password	
	DivX Subtitle ▼	

- See the explanations of the above options in the following pages.
- 4 Select a setting, then press **OK**.
 - To return to the previous menu, press
 BACK.
 - To exit the menu, press **OPTIONS**.

[Audio]

Select the default audio language for DVDs.

[Subtitle]

Select the default subtitle language for DVDs.

[Disc Menu]

Select the menu language for DVDs.



Note

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some DVDs, the subtitle/audio language can only be changed from the disc menu.
- To select the languages that are not listed in the menu, select [Others]. Then check the Language Code list at the back of this user manual and enter the respective 4-digit language code.

[Parental]

Restrict access to DVDs that are unsuitable for your children. These types of DVDs must be recorded with ratings.

- 1. To start, press **OK**.
- 2. Select a rating level in the menu, then press **OK**.
- **3.** Press the **number buttons** to enter your 4-digit password.



Note

- Rated DVDs above the level you set in [Parental] require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select '8'.
- Some DVDs have ratings printed on them but are not recorded with ratings. This function has no effect on such DVDs.



Tips

 To set or change your password, go to [Preference Setup] > [Password].

[PBC]

For VCDs/SVCDs recorded with PBC (playback control,) you can access the disc contents through an interactive menu.

- [On] an index menu is displayed when you load a disc for play.
- [Off] skip the menu and start play from the first title.


[MP3/JPEG Nav]

Turn off or on MP3/WMA folder display when you play a media that contains MP3/WMA files.

- [With Menu] display the folders of MP3/WMA files.
- [Without Menu] display all the files.

[Password]

Follow the instructions on the TV to set or change the password for locked discs and play restricted DVDs.

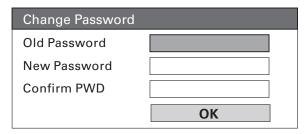

- 1. Press the number buttons to enter '0000' or your last set 4-digit password at [Old Password] field.
- Enter the new password at [New Password] field.
- Enter the new password again at [Confirm PWD] field.
- 4. Press **OK** to exit the menu.



Note

 If you forget your 4-digit password, enter '0000' before you set a new password.

[DivX Subtitle]

Select a character set that supports the DivX subtitle.

[Standard]	English
[Chinese]	Simplified Chinese
[Korean]	Korean



Note

• Ensure that the subtitle file has the exact same file name as the movie file. If for example the filename of the movie is 'Movie.avi', then you will need to name the text file 'Movie.sub' or 'Movie.srt'.

[Version Info]

Display the software version of this unit.



Tips

 This information is required when you want to find out if a newest software version is available at the Philips website that you may download and install on this unit.

[Default]

Reset all the settings of this unit to factory default, except for [Disc Lock], [Password] and [Parental] settings remain unchanged.

8 Additional information

Update software

Philips provides software updates to ensure that this unit is compatible with the newest formats.

To check the updates, compare the current software version of this unit with the latest software version available at the Philips website.

1 Press © OPTIONS.

	Preference Setup	
앳뷥	Disc Menu 🔺	
VO	Parental	
ш]»	PBC	
٦//	MP3/JPEG Nav	
	Password	
_	DivX Subtitle	
	Version Info	
	Default	

- 2 Select [Preference Setup] > [Version Info], then press OK.
- Write down the version number, then press OPTIONS to exit the menu.
- 4 Go to www.philips.com/support to check the latest software version available for this unit.
- If the latest software version is higher than the software version of this unit, download it and store onto a CD-R or USB flash drive

- 6 Insert the CD-R or USB flash drive to this unit.
- 7 Press **DISC MENU** or **USB**, then follow the instruction on the TV to confirm update operation.



Note

- Do not remove the CD-R or USB when software updating is in progress.
- 8 Once software update is complete, this unit turns off to standby automatically.



Note

• We recommend that you disconnect the power cord for a few seconds and connect again to reboot the system.

Care



Caution!

 Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.

Clean discs

Wipe the disc with a micro fibre cleaning cloth from the centre to the edge in a straight line movement.

Clean main unit screen

Wipe the screen surface with a micro fibre cleaning cloth.

9 Specifications



Note

• Specification and design are subject to change without notice.

Playback media

 DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture CD, MP3-CD, WMA-CD, DivX-CD, USB flash drive

Amplifier

• Total output power (Home Theatre): 500W

• Frequency response: 20 Hz - 20 kHz / ±3dB

Signal-to-noise ratio: > 65 dB (CCIR)

Input sensitivity

AUX 1: 500 mVMP3 LINK: 250 mV

Disc

• Laser Type: Semiconductor

• Disc diameter: 12cm / 8cm

 Video decording: MPEG1/ MPEG2 / DivX / DIvX Ultra / WMV9

• Video DAC: 12 bits, 148 MHz

Signal system: PAL / NTSC

Video S/N: 56 dB

Audio DAC: 24 bits / 192 kHz

Frequency response: 4 Hz - 20 kHz (44.1 kHz)
 4 Hz - 22 kHz (48 kHz)

4 Hz - 44 kHz (96 kHz)

PCM: IEC 60958

Dolby Digital, DTS: IEC60958, IEC61937

Radio

 Tuning range: FM 87.5-108 MHz (50/100 kHz), AM/MW 531-1602 kHz (9 kHz) AM/MW 530-1700 kHz (10 kHz)

• 26 dB quieting sensitivity: FM 20 dBf, AM 4μV/m

IF rejection ratio: FM 60 dB, AM 45 dB

Signal-to-noise ratio: FM 60 dB, AM 40 dB

• Harmonic distortion: FM 3%, AM 5%

Frequency response: FM 180 Hz~10 kHz / ±6dB

Stereo separation: FM 26 dB (1 kHz)

• Stereo Threshold: FM 23.5 dB

USB

• Compatibility: Hi-Speed USB (2.0)

• Class support: UMS (USB Mass Storage Class)

iPod docking station

• Dimensions (WxHxD): 34.5 x 104 (mm)

• Weight: 163.5 g

Power (Subwoofer)

Power supply: 110-127V / 220-240V, ~50-60 Hz

Power consumption: 120 W

Standby power consumption:

Normal: < 3.5 W

Low standby: < 0.3 W

• System: Bass Reflex System

• Impedance: 4 ohm

• Speaker drivers: 165 mm (6 1/2") woofer

• Frequency response: 35 Hz - 200 Hz

• Dimensions (WxHxD): 322 x 425 x 322 (mm)

• Weight: 12.7 kg

Main unit

Dimensions (WxHxD): 1028 x 167 x 155 (mm)

Weight: 8.9 kg

Centre speaker:

• Speaker impedance: 4 ohm

 Speaker drivers: 2 x 2.5" woofer + 2 x 1" Soft dome tweeter

• Frequency response: 200 Hz - 20 kHz

Left/Right surround speakers:

• Speaker impedance: 6 ohm

• Speaker drivers: 4 x 2.5" full range woofer

• Frequency response: 200 Hz - 20 kHz

Wall Mount Bracket

• Dimensions (WxHxD): 681.7 x 99 x 35 (mm)

Weight: 1.5 kg

Laser specification

Type: Semiconductor laser GaAlAs (CD)

Wave length: 645 - 660 nm (DVD),

770 - 800 nm (CD)

Output power: 6 mW (DVD),

7 mW (VCD/CD)

Beam divergence: 60 degrees.

10 Troubleshooting

↑ Warning

• Risk of electric shock. Never remove the casing of the Home Theater System.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the Home Theater System, check the following points before requesting service. If the problem remains unsolved, register your Home Theater System and get support at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of your Home Theater System. The model number and serial number are on the back or bottom of your Home Theater System. Write the numbers here:

Model No. _.		
Serial No		

Main unit

The buttons on this Home Theater System do not work.

- Disconnect this Home Theater System from the power outlet for a few minutes, then connect again.
- Ensure that the interconnect cable from the subwoofer is connected to the Home Theater System.

It takes a long time for the Home Theater System to power up.

- This green product has low standby power consumption which requires longer time to power up. For shorter power up time:
 - 1) Press **OPTIONS**.
 - 2) Press ▶, then select [Standby Mode] in the menu.
 - 3) Select [Normal].

Picture

No picture.

- See TVs manual for correct video input channel selection. Change the TV channel until you see the DVD screen.
- Press DISC MENU.
- If you have changed the TV type setting, switch back to default mode:
 - 1) Press ≜ to open the disc compartment.
 - 2) Press ◀.
 - 3) Press **SUBTITLE**.
- If you have changed the progressive scan setting, switch back to default mode:
 - 1) Press ≜ to open the disc compartment.
 - 2) Press ▶.
 - 3) Press **SUBTITLE**.

No picture on HDMI connection.

- Check if the HDMI cable is faulty. Replace a new HDMI cable.
- If this happens when you change the HDMI video resolution, press **HDMI** repeatedly until the picture appears.

Sound

Distorted sound or echo.

• Ensure that the TV volume is set to the minimum level if audio is output through the home theater.

No sound.

 Ensure that the audio cables are connected and press the correct input source (for example, AUDIO SOURCE, USB) to select the device you want to play.

No sound on HDMI connection.

- Sound cannot transmit through HDMI connection if the connected device is non-HDCP compliant or only DVIcompatible. Make an analog or digital audio connection.
- Ensure that the **[HDMI Audio]** setting is turned on.

No sound from TV program.

 Connect an audio cable from the AUDIO input on this Home Theater System to the AUDIO output on your TV. Then press AUDIO SOURCE repeatedly to select the corresponding audio input source.

Play

Audio is not synchronised with the video playback.

- To make adjustment:
 - 1) Press and hold **AUDIO SYNC** until 'AUDIO SYNC XXX' is displayed.
 - 2) Within five seconds, press VOL + -.

DivX video files cannot be played.

- Ensure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Ensure that the DivX video file is complete.

EasyLink feature does not work.

 Ensure that the home theater is connected to an HDMI CEC compliant TV with a HDMI CEC cable.

The aspect ratio of the screen is not aligned with the TV display setting.

• The aspect ratio is fixed on the disc.

DivX subtitle does not display correctly.

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set:
 - 1) Press **OPTIONS**.
 - 2) Press ▼ to select [Preference Setup], then press ►.
 - 3) Press ▶, then select [DivX Subtitle] in the menu.
 - 4) Select the character set that supports the subtitle.

The contents of the USB flash drive cannot be read.

- The USB flash drive format is not compatible with this Home Theater System.
- Drive is formatted with different file system which is not supported by this unit (e.g. NTFS).
- Maximum size of memory supported is 160GB.

The video (movies, photos, video clips, etc) contents of the iPod does not display in Extended Control mode.

 Video browsing is not supported in Extended Control mode, you can only browse the video contents on the iPod itself.

11 Glossary

A

Aspect ratio

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

D

DivX®

The DivX® codec is a patent-pending, MPEG-4 based video compression technology developed by DivX®, Inc. It can shrink the file size of digital video and still maintain the high visual quality.

Dolby Digital

A surround sound system developed by Dolby Laboratories that contains up to six channels of digital audio (front left and right, surround left and right, centre and subwoofer.)

DTS

Digital Theatre Systems. A surround sound system for providing 5.1 channels of discrete digital audio in consumer electronics products and software content. It is not developed by Dolby Digital.

Н

HDCP

High-bandwidth Digital Content Protection. This is a specification that provides a secure transmission of digital contents between different devices (to prevent unauthorised copyright.)

HDMI

High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality, completely free from noise. HDMI is fully backward-compatible with DVI.

As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (High-bandwidth Digital Content Protection) will result in no Video or Audio output.

IPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognised by their file extension '.jpg' or '.jpeg.'

M

MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

MPEG

Motion Picture Experts Group. A collection of compression systems for digital audio and video.

P

PBC

Playback Control. A system where you navigate through a Video CD/Super VCD with onscreen menus that are recorded onto the disc. You can enjoy interactive playback and search.

PCM

Pulse Code Modulation. A digital audio encoding system.

Progressive scan

The progressive scan displays twice the number of frames per second than in an ordinary TV system. It offers higher picture resolution and quality.



WMA

Windows Media[™] Audio. Refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded with Windows Media player version 9 or Windows Media player for Windows XP. Files are recognised by their file extension '. wma.'

WMV

Windows Media Video. Refers to a video compression technology developed by Microsoft Corporation. WMV content can be encoded by using Windows Media® Encoder 9 series. Files are recognised by their file extension '.wmv'.