

Register your product
and get support at
www.philips.com/welcome

SRP2006/55



EN User Manual

PHILIPS

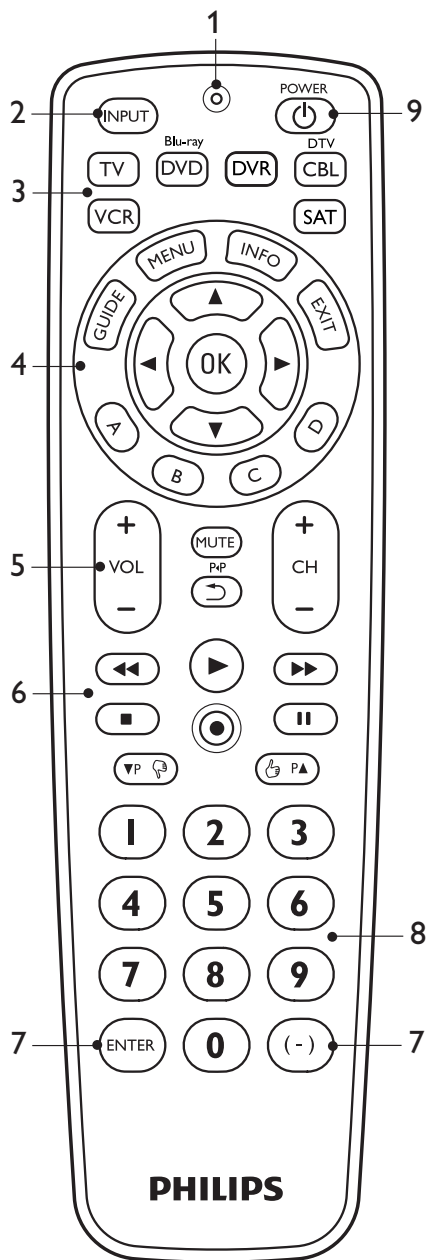 


Table of contents

1	Your SRP2006	3-4
2	Getting started	4-8
	2.1 Inserting the batteries.....	4
	2.2 Setting up the universal remote control.....	4-8
3	Using the universal remote control	9-1
	3.1 Buttons and functions.....	9-10
	3.2 Resetting a button to its original function.....	11
4	Service and support	12-15
	4.1 Frequently asked questions.....	12-14
	4.2 Need help?	14
	FCC Compliancy.....	15
	Helpline.....	16
	Brand list.....	17-29
	Information to the consumer	30
	Compliance with EMF.....	30
	Recycling and disposal.....	30

1 Your SRP2006

Congratulations on your purchase of the Philips SRP2006 universal remote control. After setting up the remote control you can operate up to 6 different devices with it.

Simple Setup

The universal remote control comes with the innovative Simple Setup technology. After setup, the SRP2006 can operate TV, DVD player / recorder (including Blu-ray player), VCR, DVR and all common Cable, Satellite, DTV and other set top boxes, such as DirecTV, Comcast, AT&T, Verizon, Time Warner, Scientific Atlanta, Tivo and many more.

Simply follow the instructions in chapter 2.2 to set up the remote controls for your devices.

Glow buttons

 
The SRP2006 glow buttons (ENTER, (-) and the numeric buttons) glow in the dark, enabling easy use of the remote control, even in a dimly lit room.

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

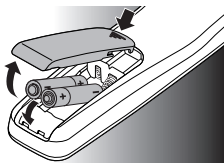

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

2.2 Setting up the universal remote control



The example below instructs you how to set up your universal remote control for your TV. You can repeat the same steps for other devices (DVD player / recorder, DTV, Cable / Satellite box, DVR and VCR) which you want to operate, using the universal remote control.

The remote control can be set up to operate any 6 of the following devices:

Device name	Description
TV	Traditional TV, LCD / Plasma TV and projection TV, TV part of TV / VCR, TV / VCR / DVD and TV / DVD combos

DVD	DVD player / recorder (DVDR), DVD / Hard Disk Drive combination (DVDR-HDD), Blu-Ray player; High Definition DVD player (HD-DVD), DVD part of TV / DVD, TV / VCR / DVD and VCR / DVD combos
CBL/SAT	Cable box, satellite receiver; Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV), Digital Television (DTV) and Tivo
VCR	Video cassette player / recorder; VCR part of TV/ VCR, TV/VCR/DVD and VCR/DVD combos
DVR	Digital / Personal Video Recorder (DVR / PVR) and Tivo


Example: setting up the universal remote control to operate your TV:

- Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.
- Press and hold** the  device selection button **for 5 seconds** until the red Setup light  blinks.
 - The remote control is now in setup mode.



- Look up the 4-digit code for your brand in the brand list at the back of this user manual. A 4-digit code is shown for each brand. Use the digit buttons to enter the code for your brand.



- If the red Setup light  turns off, an invalid code was entered. In this case, try again.



- 4 Aim the remote control at the TV.
Press and hold the **POWER** button. Release it **immediately** as soon as the TV switches off.



- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

- 5 **Switch ON** the TV.

Try out the buttons that you need for operating it. Try, for example, if the - CH + and digit buttons function properly.



- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.2.

- 6 Press the **TV** device selection button **twice** to finish setup.




- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.



Important

If you made a mistake:

- Press the device selection button **twice** to exit setup. The red Setup light  turns off.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.2.1 Setting up the remote control for other devices (DVD player / recorder, DTV, Cable / Satellite box, DVR and VCR)

- 1 Make sure the device is switched on and operational. E.g. insert a disc in the DVD player / recorder or a video cassette in the VCR.
- 2 Then follow steps 2 to 6 of 'Setting up the universal remote control to operate your TV'. Make sure to use the correct device selection button: **DVD**, **DVR**, **CBL**, **VCR** or **SAT**.

2.2.2 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected. In this case you can have the remote control search for alternatives.



Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').


During initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
 - 2 Press the button that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every button that does not function.
- If the button still does not function as expected, try pressing it again for a longer period of time.

After initial setup


- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player; make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.

 
- 2 Select the device that you wish to operate (e.g. DVD).

Press the  device selection button to select DVD.




- 3 Keep buttons ① and ④ pressed simultaneously for 5 seconds.

- The red Setup light  lights up. The remote control is now in setup mode.

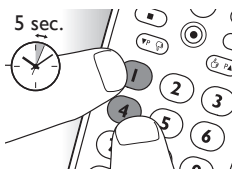

- 4 **Press and hold** the button that does not function and **immediately** release it when the device responds.

- If the button still does not function as expected, try pressing it again for a longer period of time.

- 5 Press the  device selection button **twice** to save your settings and exit setup mode.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.






3 Using the universal remote control


3.1 Buttons and functions







The illustrations on page 2 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.

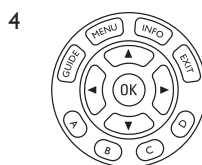 Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP2006 (e.g. Info / Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP2006.

- 1  Setup light. Lights up when a remote control command is being sent, when you just selected a device and when the remote control is in setup mode.
- 2  selects available source inputs (antenna, cable, etc.).
- 3  device selection buttons. Select the device to be operated.



- 4  electronic program guide.
-  menu on / off.
-  on-screen channel information.
-  exits / clears on-screen menu displays.
-  cursor up, down, left, right in a menu.
-  confirms your selection.

A, B, C, D..... Context sensitive buttons, ordered following the requirements for cable boxes.
A - Yellow, B - Blue, C - Red, D - Green.



+ VOL -..... adjusts TV volume.
MUTE mutes TV sound.
⏮ previous program / Last / Back.
+ CH -..... next / previous channel.



⏮..... rewind.
▶..... play.
⏩..... fast forward.
■..... stop.
●..... record.
⏸..... pause.
▼P ▲P..... previous (▼P) / next (▲P) page / track in various modes.

👍 / 👎 set your Thumb ratings.
7 **ENTER** used after direct channel selection. Some devices require ENTER to be pressed after channel selection.

(-) selects between one and two-figure channel numbers.

 
8 **1 2 3** digit buttons for direct channel / track selection.
4 5 6
7 8 9
0

9 **POWER** **⏻** switches the selected device on / off.

3.2 Resetting a button to its original function

If an improved button (see chapter 2.2.2) still does not function as expected, you can always reset the button to its original function.

- In the current device mode, keep digit buttons **1** and **6** **pressed simultaneously for 5 seconds**, until the red Setup light lights up.
 - The remote control is now in setup mode.
- Press digit buttons **9**, **9**, and **6**, in that order.
 - After each button press the red Setup light blinks once.
- Press the button that you wish to reset **twice**. E.g. the **▶▶** button.
 - After each button press the red Setup light blinks once.
 - The red Setup light will blink one more time to confirm that the button was successfully reset to its original function.

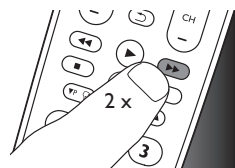

Note

For some TV brands / types, the **POWER** **⏻** button will only turn off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV, DVD, CBL/SAT, DVR and VCR brands.

- You will find a complete brand list on page 17-29 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list.
Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.2) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.2.

How do I set up the remote control for combo devices (TV / VCR, TV / DVD, DVD / VCR, etc)?

Some combo devices require you to set up two different device selection buttons to control both parts of the combo device. For example, if you have a TV / DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV / DVD combo.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The device I want to operate does not respond at all / does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.2.2.

Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory for 5 minutes.



Warning

The batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP2006, you can always contact us.

When calling our helpline, make sure to have the SRP2006 at hand when you call, so that our operators can help you determine whether the SRP2006 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP2006/55.

Date of purchase:

...../...../.....

(day/month/year)

For **online support** go to:

www.philips.com/welcome.

- Click 'Support' and follow the on-screen instructions.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.



Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Caution

User changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Country	Phone number
United States of America	001-888-744-5477

888.....	0006	(DB1)	Amplivision...	0138
			Ampro.....	0139
A			Amstrad	0140
A.R. Systems.	0012		AMTC	4015
ABC.....	0013		Amtron.....	0141
Abex.....	0014		AMW.....	0143
ABS	0016		Anam	0146
Accele Vision	4194		Anam National	
Access HD....	3554		0147
Accurian.....	0022		Anglo	0151
Acer	0028		Anitech	0154
Acura.....	0036		Ansonic.....	0156
ADC.....	0040	(DB1)	Antronix.....	0159
Addison.....	0043		AOC.....	0165
Adelphia.....	4195		Aolinpiya.....	4089
Admiral.....	0046		Apache.....	0169
Advent	0054		Apex	3691
Adventura.....	0055		Apex Digital.	0170
Adyson.....	0058		Apple.....	0172
Agashi.....	0063		Arcam.....	0179
Agazi.....	3522	(DB1)	Archer.....	0180
AGB.....	0064		Archos.....	0181
Aiko	0069		Ardem.....	0184
Aim	0070		Aristona.....	0192
Aiwa.....	0072		Arrgo	0197
Akai.....	0074		Arris.....	4931
Akiba.....	0078		Artec.....	4016
Akira.....	0079	(DB1)	Asberg.....	0205
Akito.....	0082		Asha.....	0209
Akura.....	0083		Aspire.....	4233
Alaron.....	0085		Astar.....	0218
Alba	0086		Asuka.....	0227
Albatron.....	0087		AT&T.....	3453
Alco	0092		Atlantic.....	0233
Alienware.....	0099		Atori.....	0237
Allegro.....	0103		Audio Dynamics	
Alleron.....	0104		0248
Allorgan.....	0105		Audiosonic...	0264
Allstar.....	0108		Audioton	0266
Alpha Digital	4014		Audiovox.....	0268
AlphaStar.....	0113		Autovox	0280
Alpine	0114		Aventura.....	0287
America Action			Awa	0296
.....	0123		Axion.....	0299
American High				
.....	0125			
Americast.....	0127			
Amphion Media				
Works.....	0135			

B	Bush.....0445	Citizen.....0567	Dansai.....0699
Baihua.....4092 (DB1)	Byd:sign.....0448	City.....0569	Dantax.....0702
Baird.....0311		Clarion.....0575	Davidson.....4202
Bang & Olufsen	C	Clarivox.....0576	Dawa.....0707
.....0314	Cable Star.....0454	Clatronic.....0581	Daytron.....0710
Baohuashi.....0316 (DB1)	Cabletenna.....0456	Clearmaster.....0583	DBX.....0712
Basic Line.....0325	Cableview.....0458	ClearMax.....0584	Decca.....0718
Bastide.....0327	Cablevision.....4238	CMS.....0590	Deitron.....0722
Baur.....0331	Caihong.....0462	CMS Hightec.....0591	Dell.....0725
Bazin.....0335	Caixing.....4093 (DB1)	Coby.....0597	Denon.....0731
BBT.....0338	California Audio	Colortyme.....0601	Denver.....0733
Beaumark.....0340	Labs.....0467	Colour Voice.....0602	Desay.....0737
Beijing.....0345	Calix.....0468	Colt.....0603	Desmet.....0738
Beko.....0346	Candle.....0480	Comcast.....3456	Diamant.....0746
Belcor.....0348	Canon.....0481	Commercial	Diamond.....0747
BELL.....4376 (DB1)	Capsonic.....0486 (DB1)	Solutions.....0615	Diamond Vision
Bell & Howell	Captive Works	Comtronics.....06230748
.....03500487	Concerto.....0625	Digatron.....0751
Bell ExpressVu	Carad.....0488	Concorde.....0626	Digi.....0754
.....0352 (DB1)	Carena.....0489	Condor.....0627	Digiline.....0759
Bell South.....0353	Carnivale.....0491	Conrowa.....0634	Digital Stream
BenQ.....0359	Carrefour.....0492	Contec.....06353809
Beon.....0361	Carver.....0494	Contec/Cony.....4199	Dimensia.....3569
Best.....0364	Cascade.....0496	Coolmax.....0642	Director.....0793
Bestar.....0368	Casio.....0499	Coolsat.....0643	DirecTV.....0794
Bestar-Daewoo	Catha.....4094	Coship.....0646	Dish Network
.....0369	Cathay.....0501	Cosmel.....0647	System.....0799
Binatone.....0378	CCE.....0504	COX.....4200	Dishpro.....0800
Black Star.....0386	Celebrity.....0509	Craig.....0650	Disney.....0803
Blacktron.....3526	Celera.....0510	Crosley.....0655	Dixi.....0807
Blackway.....0388	Centurion.....0520	Crossdigital.....0656	Dongda.....0820
Blaupunkt.....0390	Century.....0521	Crown.....0658	Donghai.....0821
Blue Parade.....0394	CGE.....0523	CS Electronics	Drake.....0825
Blue Sky.....0395	Changcheng.....05260663	Drean.....0832
Blue Star.....0396	Changfei.....0527	CTC.....0664	DSE.....0833
Bondstec.....0403	Changfeng.....0528 (DB1)	CTX.....0665	DTS.....0837
Boots.....0405	Changhai.....0529	Curtis Mathes	Dual.....0838
BOSS.....4197	Changhong.....05300667	Dual-Tec.....3528
BPL.....0413	Channel Master	CXC.....0670	Dumont.....0840
Bradford.....04140531	CyberHome.....0672	Durabrand.....0842
Brandt.....0416	Chaparral.....0533	Cybernex.....0673	Dux.....0843
Brilliant.....0422	Ching Tai.....0541	CyberPower.....0674	DVD2000.....0844
Brinkmann.....0423	Chun Yun.....0545	Cybertron.....0675	D-Vision.....0684
Brionvega.....0424	Chunfeng.....0546	Cytron.....0680	Dwin.....0848
Britannia.....0425	Chung Hsin.....0547		Dynatech.....0854
Brockwood.....0430	Chunlan.....4097 (DB1)	D	Dynatron.....0855
Broksonic.....0432	Chunsun.....0549	Daeryung.....0691	Dynex.....3476
BskyB.....0436	Cimline.....0552	Daewoo.....0692	
BTC.....0439	CineVision.....0562	Danichi.....3914	

E		
Eastern	0859	
ECHOSPHERE	4396	(DB1)
Echostar.....	0866	
Eclipse.....	0867	
Eiki.....	0874	
Elbe.....	0880	
Elbe-Sharp.....	3529	
Elcit.....	0883	
Electroband.....	0888	
Electrograph.....	0889	
Electrohome.....	0890	
Electrophonic	0893	
Elektra	0896	
Element	3477	
ELG.....	0900	
Elin.....	0902	
Elite	0903	
Elmak.....	0907	(DB1)
Elta.....	0910	
Emerson.....	0917	
Emperor.....	0921	
Emprex.....	0922	
Enterprise.....	0931	
Envision.....	0933	
Epson.....	0937	
Erres.....	0942	
ESA	0943	
ESC	0945	
Ether.....	0948	
Etron	0949	
Eurofeel.....	0954	
EuroLine.....	0955	(DB1)
Euroman.....	0956	
Europa.....	0957	
Europhon.....	0959	
Everquest.....	0971	
Expressvu.....	0977	
Exquisit.....	0978	
F		
Fagor Life.....	4102	
Feilang.....	0990	
Feilu	0991	
Feiyan.....	0992	(DB1)
Feiyue	0993	
Fenmenti.....	4103	
Fenner	0994	
Ferguson	0996	
Fidelity	0998	
Filsai	1000	
Finlandia.....	1003	
Finlux.....	1004	
Firstar.....	1007	
Firstline.....	1008	
Fisher.....	1009	
Flint.....	1014	
FNR.....	1016	
Focus.....	1017	
Formenti	1023	
Formenti-Phoenix	1024	
Fraba	1030	
Friac.....	1040	
Frontech.....	1042	
Fuji.....	1047	
Fujitsu.....	1052	
Fujitsu General	1053	
Funai.....	1056	
Furi.....	1057	
FUTEC.....	3960	(DB1)
Futuretech.....	1064	
G		
Galaxi.....	1068	
Galaxis.....	1069	
Garrard.....	1075	
Gateway.....	1076	
GBC.....	1078	
GC Electronics	1080	
GE.....	1081	
GEC.....	1083	
Gehua.....	1086	
Geloso.....	1087	
Gemini.....	1089	
General Instrument	1093	
General Technic	1095	
Genexxa	1097	
GFM.....	3820	
Giant.....	1113	
Gibraltar.....	1114	
Go Video.....	1126	
GOI.....	1130	
GoldHand	1136	
Goldline.....	1138	
GoldStar.....	1140	
Goodmans.....	1142	
Goodmind	1143	
GPM.....	1149	
Gradiente.....	1151	
Graetz.....	1152	
Granada.....	1154	
Grandin.....	1156	
Greenhill	1157	
Gronic	1160	
Grundig.....	1162	
Grunpy.....	1165	
H		
Haier	1175	
Haihong.....	1176	
Haiyan.....	1177	(DB1)
Halifax	1179	
Hallmark.....	1180	
Hamlin.....	1182	
Hampton	1183	
Hankook	1188	
Hanseatic.....	1190	
Hantarex.....	1192	
Hantor.....	1193	
Harley Davidson	1197	
Harman/Kardon	1198	
Harvard.....	1202	
Harwood.....	1204	
Hauppauge.....	1206	
Havermy.....	1208	
HCM.....	1210	
Headquarter.....	1214	
Hello Kitty	1221	
Hema.....	1222	
Hemmermann	1223	
Hewlett Packard	1229	
Higashi.....	1234	
Highline.....	1236	
Hikona.....	1237	
HiLine.....	3533	
Hinari.....	1243	
Hisawa.....	1247	
Hisense.....	1249	
Hitachi.....	1251	
Hitachi Fujian.....	1252	
Hiteker.....	1255	
Hitsu.....	1257	
Hoeher.....	1262	
Hongmei.....	1272	
Hongyan.....	1274	(DB1)
Hornophon.....	1277	
Hoshai.....	1278	
Howard	1281	
Computers.....	1281	
HP.....	1283	
HTS.....	1285	
Huafa.....	1287	
Huanghaimei.....	1288	
Huanghe.....	1289	
Huanglong.....	1290	
Huangshan	1291	
HuanYu	1292	
Huaqiang.....	1293	(DB1)
Huari	1294	
Hughes.....	4205	
Hughes Network	1296	
Systems.....	1296	
Humax	1298	
Hush.....	1304	
Hygashi.....	1308	
Hyper.....	1309	
Hypson	1312	
Hytex.....	1314	
Hyundai.....	1315	
I		
Iberia.....	1320	
iBUYPOWER	1322	
ICE.....	1324	
ICeS.....	1325	
Illico.....	4206	
iLo.....	1341	
iLuv.....	4234	
Ima.....	1342	
Imperial.....	1346	
Imperial Crown	1347	(DB1)
Indiana.....	1350	
Infinity	1352	

InFocus.....1353	Kanghua.....1477	LG/Goldstar..3536 (DB1)	Medison.....1788
Ingelen.....1354	Kangli.....1478 (DB1)	LiesenK.....3537 (DB1)	MegaCable....4211
Ingersol.....1355	Kangyi.....1479 (DB1)	LiesenK & Tter	Megapower...1791
Initial.....1356	Karcher.....14841630	Megatron.....1795
Inno Hit.....1358	Kawa.....1487	Liesenkotter..1631	MEI.....1796
Innova.....1359	Kawasaki.....1488	Life.....3538 (DB1)	Meile.....1797 (DB1)
Innovation.....1360	Kawasho.....1489	Lifetec.....1633	MeiShi.....4118 (DB1)
Insignia.....1368	Kaypani.....1490	Linksys.....1640	Meletronic...3654
Instant Replay	KEC.....1496	Linsay.....1642	Memorex.....1800
.....3580	Kendo.....1500	Liquid Video..1644	Memphis.....1802
Integra.....1370	Kenwood.....1507	LiteOn.....1645	Mercury.....1804
Inteq.....1373	KIC.....1512	Lloyd's.....1648	Metz.....1810
Interbuy.....1376	Kingsley.....1520	Local India TV	MGA.....1811
Interfunk.....1377	Kioto.....15231653	MGN Technology
Internal.....1379	Kiton.....1525	Loewe.....16601812
International..1380	KLH.....1529	Loewe Opta.3540	MicroGEM....4024
Intervision.....1386	Kloss Novabeam	Logik.....1661	Micromaxx....1822
IR.....41104210	Longjiang.....1664 (DB1)	Microsoft.....1826
Irradio.....1396	Kneissel.....1535	Luma.....1674	Microstar.....1827 (DB1)
Isukai.....1402	Kodak.....1540	Lumatron.....1676	Midland.....1831
iSymphony....3755	Kolin.....1541	Lux May.....1680	Minato.....1835
ITC.....1404	Kolster.....1543	Luxman.....1682	Mind.....1837
ITS.....1405	Kongque.....1545 (DB1)	Luxor.....1683	Minerva.....1838
ITT.....1406	Konig.....1547	LXI.....1686	Minoka.....1840
ITV.....1408	Konka.....1548		Minolta.....1841
	Korpel.....1552	M	Mintek.....1845
J	Korting.....1554	M & S.....1687	Minutz.....1847
Janeil.....1414	Kosmos.....1557	Madison.....1698	Mitsubishi.....1855
Jasco.....1415	Koss.....1558	Magnadyne....1702	Mivar.....1857
JBL.....1420	KTV.....1572	Magnafon.....1703	MoDeng.....4120 (DB1)
JC Penney.....4208	Kuaile.....1573 (DB1)	Magnasonic...1704	Monivision....1872
JCB.....1421	Kunlun.....1578 (DB1)	Magnavox.....1706	Montgomery
JCL.....4209	Kyoshu.....1583	Magnin.....1708	Ward.....4212
Jean.....1424	Kyoto.....1585	Magnum.....1709	Morgans.....3970
Jensen.....1429		Majestic.....1713	Motorola.....1878
Jerrold.....1431	L	Mandor.....1717 (DB1)	Movie Time...1880
Jiahua.....1435 (DB1)	L&S Electronic	Manesth.....1718	MTC.....1889
JiaLiCai.....1436 (DB1)1588	Manhattan.....1719	MTLogic.....1892
Jinque.....1440 (DB1)	Landel.....1593	Marantz.....1724	Mudan.....1896 (DB1)
Jinta.....1441 (DB1)	Lasonic.....1600	Mark.....1731	Multistandard
Jinxing.....1442	Layco.....4117	Marta.....17351904
Juhua.....1461 (DB1)	Lecson.....1606	Masuda.....1744	Multisystem...4121 (DB1)
JVC.....1464	Lenco.....1615	Matsui.....1750	Multitec.....1906
jWin.....1465	Lenoir.....1617	Matsushita...1751	Multitech.....1907
	Lenoxx.....1618	Maxent.....1757	MultiVision....1909
K	Lesä.....1622	Media Center PC	Murphy.....1911
Kaige.....1470 (DB1)	Lexicon.....16251777	Musikland.....1915
Kaisui.....1471	Leyco.....1627	Mediator.....1784	
Kamp.....1475	LG.....1628	Medion.....1787	

N

NAD1926
 Naiko1930
 Nakamichi1932
 Nakimura1933
 Nanbao1934 ^(DB1)
 Nansheng1935 ^(DB1)
 National Panasonic
4661
 NEC1950
 Neckermann1951
 NEI1952
 Nesa1959
 Nesco1960
 Net Brazil1962
 Netsat1966
 NetTV1967
 Neufunk1970
 New Tech1979
 New World1980
 Newave1981
 Next Base1983
 Next Level1984
 Nexus1989
 NexxTech1990
 Nicamagic1994
 Nikkai1998
 Nikko2000
 Niveus Media
2012
 Noblex2013
 Nobliko2014
 Nokia2017
 Norcent2020
 Nordic2021
 Nordmende2022
 Nordvision3543 ^(DB1)
 Normerel2024
 Northgate2027
 Noshi2030
 Nova Vision2032
 Novaplex2034
 Novatronix2035
 NSC2042
 NTC2045

O

Oak2059
 Okana4122
 Okano2065
 Olevia2067
 Olympus2071
 Onimax2082
 Onkyo2085
 Onwa2087
 Opera2090
 Oppo2092
 Optimus2095
 Optoma2097
 Optonica2099
 Orbit2103
 Orion2111
 Oritron2112
 Orline2113
 Ormond2114 ^(DB1)
 Orsowe2116
 Osaki2118
 Osio2121
 Oso2122
 Osume2123
 Otto Versand2126

P

Pace2134
 Pacific2135
 Pael2140
 Palladium2145
 Palsonic2147
 Panama2149
 Panasonic2153
 Panavision2154
 Panda2155
 Pansat2158
 Panther2160
 Paragon2161
 Pathe Cinema
2168
 Pausa2171
 Paysat2173
 PCT4213
 Penney2182
 Pentax2183
 Perdio2185
 Perfekt2186
 Philco2192

Philharmonic

.....2194
 Philips2195
 Philips Magnavox
3715
 Phoenix2199
 Phonola2201
 Phonotrend2202
 Pilot2207
 Pioneer2212
 Pionier2213
 Plantron2219
 Plasmsync4230
 Playsonic2224
 Polaroid2230
 Polk Audio2232
 Poppy2236
 Popular Mechanics
2237
 Portland2238
 Powerpoint2241
 Prandoni Prince
4125
 Precision2244
 Prelude2247
 Priceclub2252
 Prima2253
 Primestar2257
 Princeton2258
 Prinz2260
 Prism2261
 Proceed2267
 Profekt4126
 Profex2269
 Profilo2272 ^(DB1)
 Profitronic2273
 Proline2274
 Proscan2279
 Prosonic2282
 Protech2284
 Proton2288
 Protron2289
 Proview2290
 ProVision2291
 Pulsar2296
 Pye2302
 Pymi2304

Q

Qingdao2308 ^(DB1)
 Quarter2318
 Quartz2319
 Quasar2320
 Quelle2322
 Questa2324
 Qwestar2326

R

Radialva2329
 Radio4128
 Radio Shack/
 Realistic4214
 Radiola2330
 Radiomarelli2331
 RadioShack2333
 Radiotone2334
 Radix2335
 Randex2343
 RCA2351
 Realistic2354
 Recor2359
 Recoton2361
 Rectiligne2362
 Redstar2366
 Reflex2368
 Regal2370
 Regency2371
 Regent2372
 Rembrandt2375
 Reoc2379
 ReplayTV2380
 Revox2383
 Rex2385
 RFT2386
 Rhapsody2387
 Ricavision2388
 Rio2393
 R-Line2327
 Roadstar2398
 Rogers4215
 Rotel2414
 Rowa2416
 Runco2423

S			
Saba.....	2429		
SageTV.....	4981	(DB1)	
Saisho.....	2437		
Saivod.....	2439		
Salora.....	2443		
Sambers.....	2445		
Sampo.....	2446		
Samsung.....	2448		
Sandra.....	2454		
Sanjian.....	2455	(DB1)	
Sanky.....	2456		
Sansui.....	2458		
Sanyo.....	2462		
Sanyuan.....	2464		
SBR.....	2492		
Sceptre.....	2498		
Schaub Lorenz			
.....	2500		
Schneider.....	2501		
Scientific Atlanta			
.....	2503		
Scimitsu.....	2505		
Scotch.....	2506		
Scott.....	2508		
Sears.....	2514		
SEG.....	2522		
SEI.....	2524		
Sei-Sinudyne.....	2525		
Seleco.....	2528		
Sencora.....	2531		
Sensory Science			
.....	2533		
Sentra.....	2534		
Serino.....	2539		
Shancha.....	2546	(DB1)	
Shanghai.....	2547		
Shaofeng.....	2549		
Sharp.....	2550		
Sharper Image			
.....	2551		
Shen Ying.....	2552		
Shencai.....	2553		
Sheng Chai.....	3922		
Shenyang.....	2555		
Sherwood.....	2557		
Shinco.....	2560		
Shinsonic.....	2562		
Shintoshii.....	2564		
Shivaki.....	2567		
Shogun.....	2568		
Siam.....	2572		
Siarem.....	2573		
Siemens.....	2574		
Siera.....	2576		
Sierra.....	3549	(DB1)	
Sigma Designs			
.....	2579		
Signal.....	2581		
Signature.....	2582		
Silva.....	2591		
Silva Schneider			
.....	2592		
Silver.....	2594		
Simpson.....	2598		
Sindyne.....	4510		
Singer.....	2599		
Sinudyne.....	2601	(DB1)	
SKY.....	2610		
Skygiant.....	2618		
Skyworth.....	2631	(DB1)	
SL Marx.....	2633		
Sogera.....	2649		
Solavox.....	2654		
Sonawa.....	2663		
Sonic Blue.....	2667		
Sonicview.....	3954		
Soniko.....	2669		
Sonitron.....	2671		
Sonneclair.....	2673		
Sonoko.....	2675		
Sontec.....	2677		
Sony.....	2679		
Sound & Vision			
.....	2680		
Soundesign.....	2684		
Soundwave.....	2689		
Sowa.....	2691		
Squareview.....	2703		
Srypton.....	4138		
SSS.....	2708		
Stack.....	4218		
Standard.....	2713		
Standard			
Components.....	2714		
Star Choice.....	2716		
Starcom.....	2722		
Stargate.....	2723		
Starlite.....	2728		
Starquest.....	2732		
StarSight.....	2734		
Stenway.....	2739		
Strato.....	2745		
STS.....	2749		
STS1.....	4219		
STS2.....	4220		
STS3.....	4221		
STS4.....	4222		
Studio Experience			
.....	2750		
Stylandia.....	2752		
Sungale.....	2761		
Sunkai.....	2762		
Sunstar.....	2768		
Sunwood.....	2772		
Supercable.....	2778		
Superla.....	2782		
Supermax.....	2783		
Superscan.....	2786		
SuperTech.....	2789		
Supervision.....	2791		
Supra.....	2792		
Supre-Macy.....	2794		
Supreme.....	2795		
Sutron.....	2798		
SVA.....	2800		
Sydney.....	2808		
Sylvania.....	2809		
Symphonic.....	2810		
Synco.....	2811		
Syntax.....	2814		
Syntax-Brillian			
.....	4231		
Sysline.....	2815		
Systemax.....	2817		
Sytong.....	2820		
T			
Tacico.....	2823		
Tagar Systems			
.....	2831		
Tai Wah.....	4139	(DB1)	
Taishan.....	2835		
Tandy.....	2843		
Tashiko.....	2850		
Tatung.....	2852		
TCL.....	2856	(DB1)	
TCM.....	2857	(DB1)	
Teac.....	2860		
Teachimagen.....	4140		
Tec.....	2861		
Tech Line.....	2863		
Technema.....	2866		
Technica.....	2868		
Technics.....	2869		
Technika.....	2870		
Techview.....	2883		
Techwood.....	2884		
Teco.....	2886		
Tedex.....	2889		
Teknika.....	2895		
TeleCaption.....	2902		
Telecor.....	2910		
Telefunken.....	2914		
Telefusion.....	2915		
Telegazi.....	2917		
Telemaster.....	2924		
Telesonic.....	2930		
Telestar.....	2931		
Teletech.....	2934		
Teleton.....	2935		
Televideon.....	2938		
Televue.....	2939		
Tennessee.....	2952		
Tensai.....	2954		
Tenson.....	2955		
Terapin.....	2958		
Tevion.....	2962		
Texet.....	2963		
Texscan.....	2965		
TFC.....	2967		
Theta Digital.....	2970		
Thomas.....	2971		
Thomson.....	2972		
Thorn.....	2974		
Thorn-Ferguson			
.....	2976	(DB1)	
Time Warner.....	3518		
Timeless.....	2985		
Tivax.....	3956		
Tivo.....	2991		
TMK.....	2994		
TNCi.....	2996		
Tobo.....	2999	(DB1)	
Tocom.....	3000		
Tokai.....	3001		

Tokyo3004
Tomashi3006
Tongguang3008 ^(DB1)
Torx3020
Toshiba3021
Totevision3024
Touch3025
Towada3028
Toyoda3030
Trakton3036
Trans Continens
.....3037
Trans PX3038
Transfec4143
Transonic3041
Transtec3042
Tredex3045
Trident3054
Tristar3057
Triumph3058
TruTech3467
TS3063
Tuntex3069
Tusa3073
TV863076
TView3079
TVS3081

U
Uher3089
UltimateTV3091
Ultravox3095
Unic Line3100
Uniden3101
Unika3102
Unitech3105
United3106
United Artists
.....3107
United Cable 3108
Universal3113
Universum3115
Univox3116
Urban Concepts
.....3121
US Digital3122
US Electronics
.....3123
US Logic3124

V
V23128
Vector3136
Vector Research
.....3137
Venturer3143
Verizon3146
Vestel3148
Vexa3149
Victor3155
Video Concepts
.....3157
Videologic3165
Videologique 3166
Videosonic3171
VideoSystem 3172
Videotechnic 3173
Videotron3175
Vidikron3178
Vidtech3179
Viewmaster ...3182
ViewSat3185
Viewsonic3186
Viewstar3187
Viking3188
Villain3189
Viore3192
Visco4232
Visiola3197
Vision3198
Vizio3211
Vocopro3213
Voodoo3215
Voom3216
Vortec3217
Vortex View ..3218
Voxson3220

W
Waltham3230
Wards3231
Watson3233
Watt Radio ...3234
Waycon3237
Wega3238
Wegavox3239
Weltblick3245
Westinghouse
.....3249

Wharfedale....3255
White Westinghouse
.....3258
Windstar3266
Winegard3268

X
Xbox3295
Xiahua3299
Xiangyang3301 ^(DB1)
Xiangyu3302
Xihu3303 ^(DB1)
Xinaghai3304 ^(DB1)
Xingfu3305
Xinghai3306
XR-10003316
Xrypton3317
Xuelian3320 ^(DB1)

Y
Yamaha3326
Yamishi3328
Yapshe3329
Yokan3335
Yoko3336
Yorx3340
Yuhang3345

Z
Zanussi3349
Zenith3356
Zentech4031
Zentek3361
ZhuHai3364
ZT Group3370

^(DB1) Brands only available from version DB1 onwards. You can find the DB version on the sticker inside the battery compartment.



EN Information to the consumer

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects.

Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.



Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

© 2011 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5312 4

December 2011

www.philips.com

RTD/4911