









EN Short User Manual CN 简明用户手册

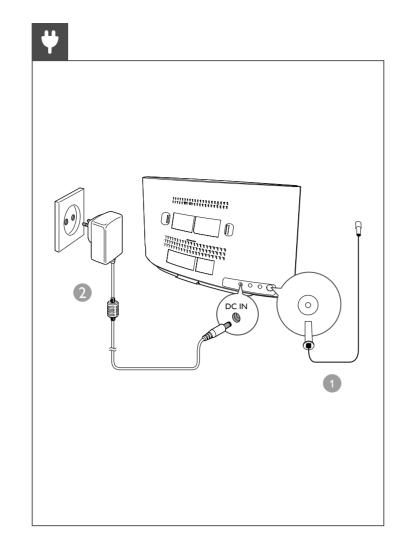




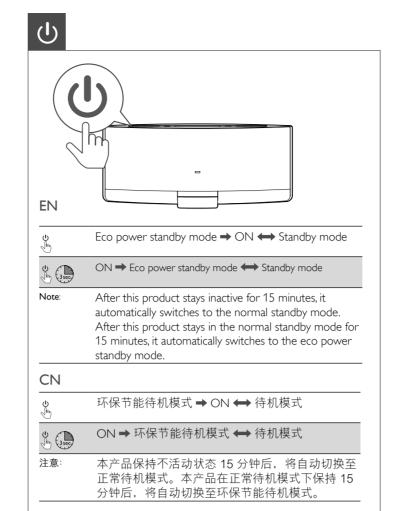

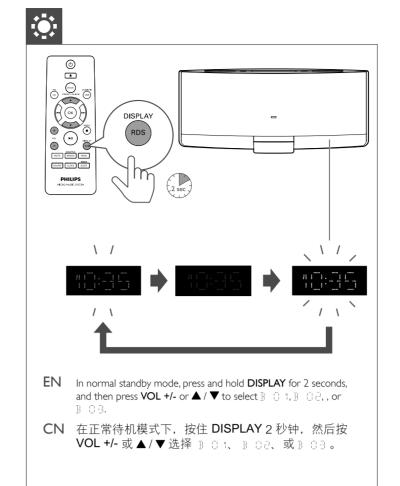


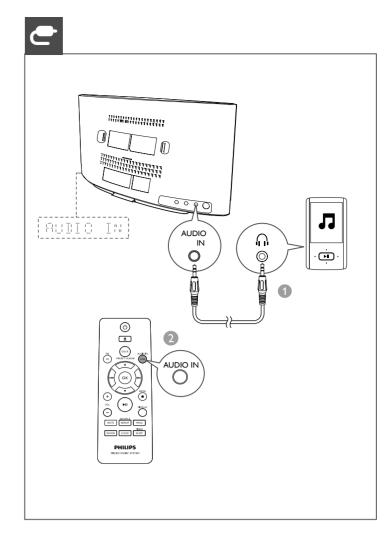

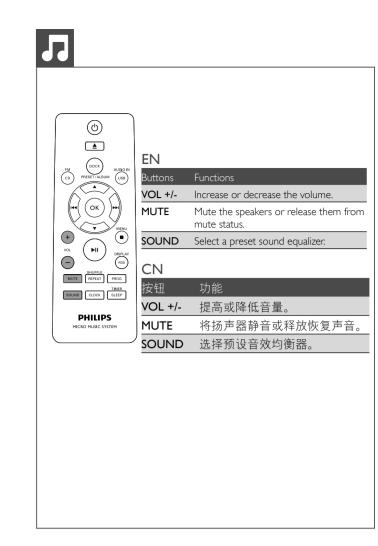





DCM3260

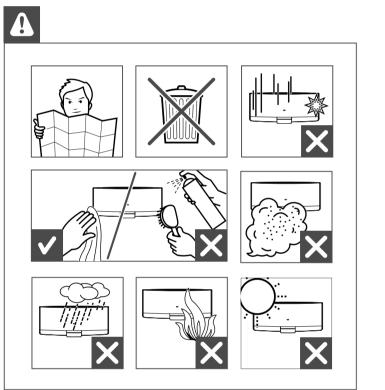





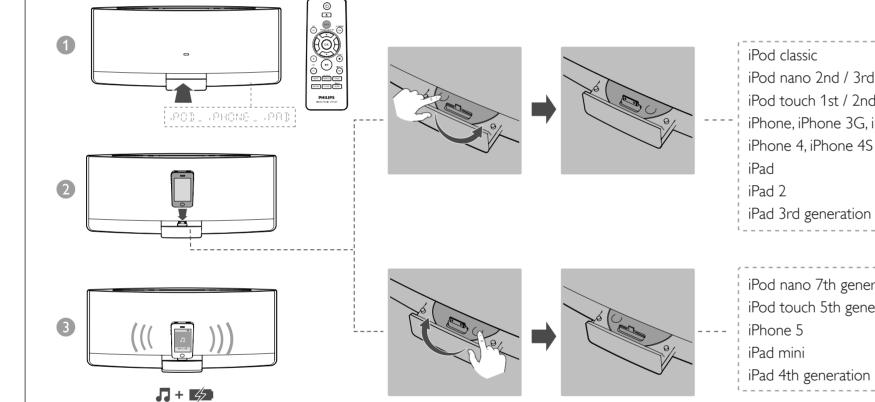

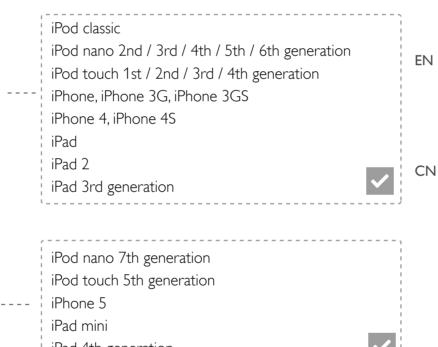





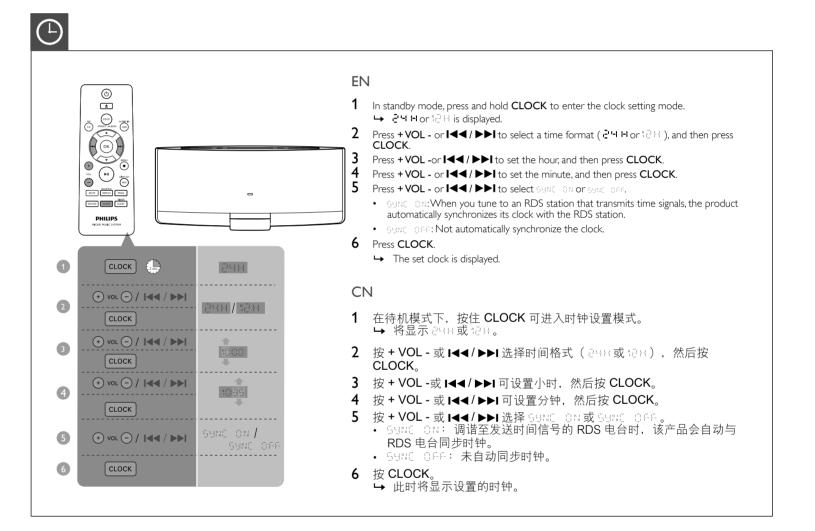


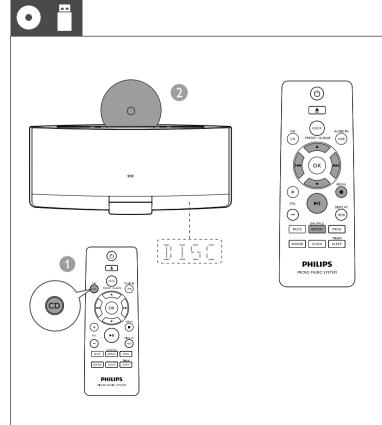

OSG MPACT PLAYBACK

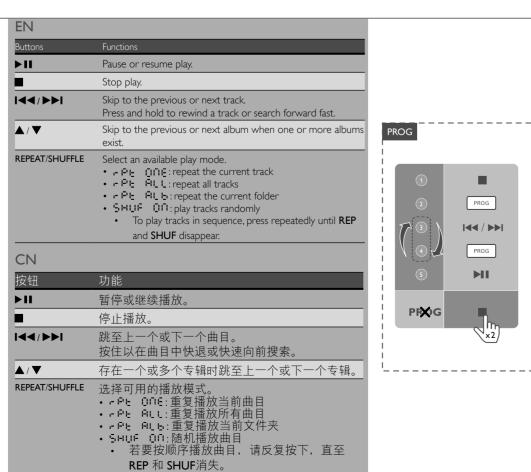

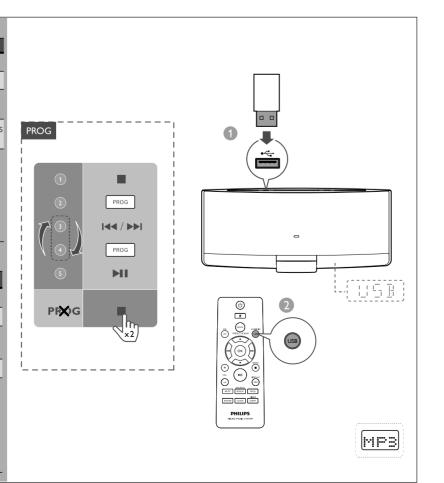

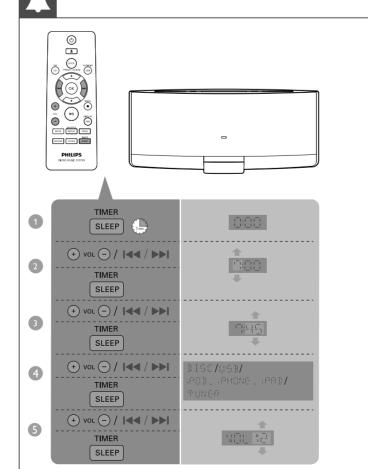

EN Make sure that you have set the clock correctly. If the selected alarm source is unavailable, this product switches to

- 1 In normal standby mode, press and hold SLEEP/TIMER to access the alarm
- 2 Press + VOL or I◀◀ / ▶▶I to set the hour, and then press SLEEP/TIMER 3 Press + VOL - or I◀◀ / ▶▶I to set the minute, and then press

FM mode automatically.


- SLEEP/TIMER to confirm.

 → The alarm source name blinks.
- 4 Press + VOL or I◀◀ / ▶▶I to select an alarm source, and then press SLEEP/TIMER to confirm.
- 5 Press + VOL to set the alarm volume, and then press SLEEP/TIMER to To deactivate the alarm timer, press SLEEP/TIMER repeatedly until TIMER
- To re-activate the alarm timer, press SLEEP/TIMER repeatedly until TIMER
- is displayed on the LCD screen.

CN

注意: 确保您已正确设置时钟。 如果选定的闹钟来源不可用,本产品将自动切换到 FM 模式。

- 1 在正常待机模式下,按住 SLEEP/TIMER 可进入闹钟设置模
- 2 按 + VOL 或 I◀◀ / ▶▶I 设置小时,然后按 SLEEP/TIMER
- 3 按 + VOL 或 I◀◀ / ▶▶I 设置分钟,然后按 SLEEP/TIMER
- → 闹钟来源名称闪烁。 **4** 按 + VOL - 或 **| ◀ ◀ / ▶ ▶ |** 选择闹钟来源,然后按
- SLEEP/TIMER 确认。
- 按 + VOL 设置闹钟音量,然后按 SLEEP/TIMER 确认。 要禁用闹钟定时,请反复按 SLEEP/TIMER,直至 TIMER 在 液晶显示屏上消失。
- 要重新激活闹钟定时,请反复按 SLEEP/TIMER,直至 TIMER 在液晶显示屏上显示。

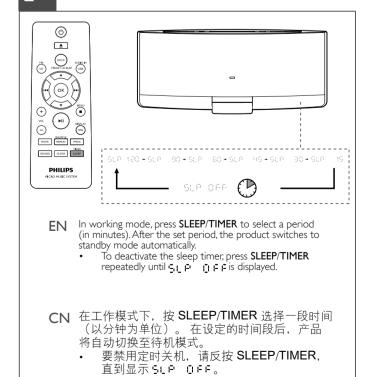



DCM3260_93_Short UM_V1.0.indd 1



Specifications

AC power adaptor

Operation power

Dimensions: Main unit

Maximum output power

Frequency response

Signal-to-noise ratio

AUDIO INPUT

Disc

Laser type

Disc diameter

Support discs

Audio DAC

Tuner (FM)

Tuning range

Tuning grid

- Mono, 26dB S/N Ratio

- Stereo, 46dB S/N Ratio

Total harmonic distortion < 3%

Search selectivity

Signal-to-noise ratio

Speaker impedance

Speakers

Speaker driver

Sensitivity

consumption

USB Direct


 $(W \times H \times D)$

- With packing

- Main unit

Amplifier

General information

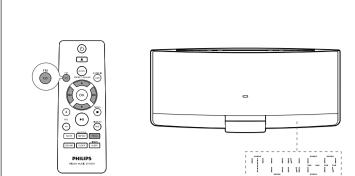

80,90 89.66 90,55

Model: GFP451C-1530BX-1 (Philips)

Input: 100 - 240 V ~,

Output: 15 V === 3.0 A

Safety standard: GB8898-2011

50-60 Hz. 1.2 A

Version 1.1, 2.0

 $520 \times 223 \times 101 \text{ mm}$

25 W

4.1 kg 2.7 kg

 $2 \times 20 W$

≥ 60 dB

60 Hz - 16 kHz

Semiconductor

24 Bits, 44.1 kHz

87.5 - 108 MHz

50 kHz

< 22 dBf < 43 dBf

> 28 dBf

> 55 dB

6 Ohm

2.5" full range X 2

 $> 82 \, dB/m/W$

650 mV RMS 20 kOhm

CD-DA, CD-R, CD-RW, MP3-CD

60 Hz - 16 kHz (44.1 kHz)

Max. loading of USB output $5 \lor = 500 \text{ mA}$

Total harmonic distortion < 1.5% (1 kHz)

Tune to an FM radio station

- To tune to the previous or next strong station, press and hold | ◀ / ▶ until the frequency starts to change.
- To tune to a station at a specific frequency, press I◀◀ / ▶▶I repeatedly until its frequency is displayed.

调谐至 FM 电台

CN

规格

一般信息

操作功耗

USB 直放

重量

- 含包装

主装置

功放器

频率响应

信噪比

光盘

激光类型

光盘直径

支持光盘

音频 DAC

频率响应

调谐范围

调谐栅

灵敏度

叟索选择

总谐波失真

信噪比

扬声器

灵敏度

扬声器阻抗

扬声器驱动器

信噪比

总谐波失真

调谐器 (FM)

- 单声道, 26dB 信噪比 <22 dBf

· 立体声, 46dB 信噪比 < 43 dBf

最大输出功率

AUDIO INPUT

尺寸: 主装置

(宽 x 高 x 厚)

交流电源适配器

• 若要调到上一个或下一个信号较强的电台,请按住 **◄ / ▶ ▶ ,** 直到频率开始变动。

型号: GFP451C-1530BX-1

输入:约 100 - 240 伏,50-60 赫

(飞利浦)

输出: 15 伏 == 3.0 安

520 x 223 x 101 毫米

安全标准: GB8898-2011

兹,1.2 安

版本 1.1、2.0

25 瓦

4.1 千克

2.7 千克

2个20瓦

≥ 60 dB

半异体

12 厘米

> 55 dB

50 千赫

> 28 dBf

< 3%

6 欧姆

2 个 2.5 英寸全频

> 82 dB/m/W

> 55 dB

24 位, 44.1 千赫

<1.5%(1 千赫)

87.5 - 108 兆赫

60 赫兹 - 16 千赫

650 毫伏 RMS 20 千欧

CD-DA、CD-R、CD-RW 和 MP3-

60 赫兹 - 16 千赫(44.1 千赫)

最大 USB 输出负载 5 伏 == 500 毫安

若要调到具体频率的电台,请反复按 ◄ / ▶▶ Ⅰ, 直至其频率显示。

PROG 2 sec

Store radio stations automatically

- 1 Press and hold **PROG** until the frequency starts to change.
- 2 After available radio stations are stored, press ▲ / ▼ to tune to one of

89,50

0 1 89.65

08 9 1,86


20 109.6

Note: This product can store a maximum of 20 radio stations.

CN

自动存储电台

- 1 按住 PROG 直至频率开始改变。
- 2 存储可用的电台后,按▲/▼调到其中一个电台。
- 注意: 本产品最多可存储 20 个电台。

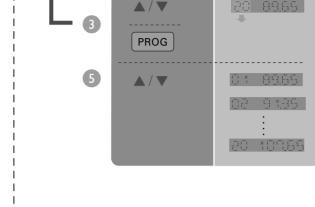

Using headphones at a high volume can impair your hearing. This product can produce

exposure less than a minute. The higher decibel ranges are offered for those that may

sounds in decibel ranges that may cause hearing loss for a normal person, even for

volumes of sound. So after prolonged listening, what sounds 'normal' can actually be

loud and harmful to your hearing. To guard against this, set your volume to a safe level

• Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher

Slowly increase the sound until you can hear it comfortably and clearly, without

Be sure to use your equipment reasonably and take appropriate breaks.

• Do not turn up the volume so high that you can't hear what's around you.

You should use caution or temporarily discontinue use in potentially hazardous

Any changes or modifications made to this device that are not expressly approved by

WOOX Innovations may void the user's authority to operate the equipment.

CLASS II apparatus with double insulation, and no protective earth provided.

Your product is designed and manufactured with high quality materials and components,

Never dispose of your product with other household waste. Please inform yourself about the

local rules on the separate collection of electrical and electronic products and batteries. The

Your product contains batteries, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on separate collection of batteries. The correct

disposal of batteries helps prevent potentially negative consequences on the environment

Please visit www.recycle.philips.com for additional information on a recycling center in your

All unnecessary packaging has been omitted. We have tried to make the packaging easy to

separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene

Your system consists of materials which can be recycled and reused if disassembled by a

correct disposal of these products helps prevent potentially negative consequences on the

Be sure to observe the following guidelines when using your headphones.

Listen at reasonable volumes for reasonable periods of time.

Be careful not to adjust the volume as your hearing adapts.

Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss

Listen at a moderate volume

To establish a safe volume level:

Listen for reasonable periods of time:

The type plate is located on the back of the product

2 Notice

Compliance

This apparatus includes this label

CLASS 1

LASER PRODUCT

Care of the environment

which can be recycled and reused.

environment and human health.

Environmental information

(bags, protective foam sheet.)

Trademark notice

 □iPod
 □iPhone
 □iPad

and human health.

Class II equipment symbol:

have already experienced some hearing loss.

before your hearing adapts and leave it there.

Set your volume control at a low setting.

PROG

EN

Store radio stations manually

- 1 Tune to a radio station.
- 2 Press **PROG** to activate programming.
- 3 Press ▲ / ▼ to allocate a sequence number from 1 to 20 to this radio station, and then press PROG to confirm.
- 4 Repeat steps 1-3 to program more stations.
- 5 Press ▲ / ▼ to tune to a stored radio station.

Note: You can program a maximum of 20 preset radio stations. To overwrite a programmed radio station, store another one with its sequence number.

手动存储电台

- 1 调谐至电台。
- 按 PROG 以激活设定。
- 3 按▲/▼为该电台分配1至20之间的一个序号,然后按 PROG 确认。
- 4 重复步骤 1-3 可设定更多电台。
- 5 按 ▲ / ▼ 调至存储的电台。

is a trademark of Apple Inc.

Copyright

1 安全

造成的损坏不在保修范围内。

每个人的安全,请勿卸下产品外盖。

有液体的物体(如花瓶)放在此设备上。

为防止触电, 请将宽插片插入宽插槽。

书以防止出现操作和维护问题。

重要安全说明

小心短路或起火!

致起火。

小心污染!

小心受伤或损坏本产品!

• 仅使用用户手册中列出的电源。

英寸的空间以便通风。

• 切勿触摸光盘仓内的光盘光学镜头。

小心触电或发生火灾!

了解这些安全标志

您最多可设定 20 个预设电台。

要覆盖设定的电台,请用其序号存储另一电台。

2014 © WOOX Innovations Limited. All rights reserved.

Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and

are used by WOOX Innovations Limited under license from Koninklijke Philips N.V."

products at any time without being obliged to adjust earlier supplies accordingly.

Specifications are subject to change without notice. WOOX reserves the right to change

请在使用本微型音乐系统之前阅读并理解所有说明。 因未遵守说明而

此"闪电标志"表示设备中的未绝缘材料可能导致触电。 为了您家中

"惊叹号"表示需要对某些功能多加注意,您应仔细阅读附带的说明

警告: 为减少火灾或触电危险, 此设备应避免淋雨或受潮, 不得将装

注意: 为防止触电, 请完成插入插头。 (对于具有极化插头的区域:

• 切勿让本产品及附件与雨或水接触。 切勿将液体容器(如花瓶)

其电源。 请与客户服务联系,对产品进行检查后再行使用。

• 切勿将本产品和附件放置在靠近明火或其它热源的地方,包括阳

• 将电源插头或设备耦合器用作断电设备时,该断电设备应可以随

在将本产品连接到电源插座之前,请确保电源电压与产品背面印

• 切勿将遥控器或电池暴露在雨中、水中、阳光直射处或过热的环

• 请避免电源插头产生拉力。 松动的电源插头可能产生火花或者导

• 该设备打开时,存在可见及不可见的激光辐射。避免直视激光

• 如果在低于 5°C 的温度下运送了本产品,请先拆开产品的包装

• 切勿将本产品安装在封闭的空间内。 务必在产品周围留出至少 4

• 切勿将本产品或任何物体放在电源线或其它电子设备上面。

并等待其温度达到室温, 再将其连接至电源插座。

• 如果电池电量耗尽或遥控器长时间不用,请取下电池。

• 确保窗帘或其它物体不会遮挡产品上的通风槽。

• 电池含有化学物质,因此应适当地进行处理。

刷的电压值相匹配。 如果电压不同,切勿将产品连接到电源插座

切勿将物体插入本产品的通风槽或其它开口。

• 断开电源线时,应始终握住插头,而不能拉电缆。

• 在雷电天气之前,应断开本产品的电源。

置于产品旁边。 如果有液体溅到本产品表面或内部,请立即断开

仅于海拔2000米以下地区使用该产品。 iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad

- 切勿拆下本产品的外壳。
- 切勿润滑本装置的任何部件。 切勿将本装置放在其它电器设备上面。
- 应让本装置远离阳光直射、明火或高温。
- 切勿直视本装置内部的激光束。
- 确保始终可轻易地接触到电源线、电源插头或适配器,以便于将

1

) 5V == 0.5 A

EN Connect your USB device to this product with USB cable

CN 通过 USB 电缆将 USB 设备连接到本产品进行

本装置从电源上断开。

听力安全



以中等音量收听。

- 以高音量使用耳机会损坏您的听力。 此产品产生的声音分贝范围 可能导致正常人丧失听力,即使收听不到一分钟。 较高的分贝范 围适用于已经丧失了部分听力的人
- 声音是具有欺骗性的。 随着时间的过去,您听力的"舒适级别" 会要求较高的音量。 因此,较长时间的收听之后,"正常"的音 量实际上可能很大声,对您的听力有害。 要防止此情況发生,请 在您的听力适应之前,将音量设置到安全级别并保持不变。

要设置安全的音量级别

- 将音量控制设置为较低设置。
- 慢慢调高声音,直到可以舒适、清晰地听见而不失真即可。 合理的收听时间:
- 较长时间的收听,即使是正常的"安全"级别,也同样会导致听 力受损。
- 请确保合理使用设备,并进行适当的休息。
- 使用耳机时请确保遵循以下准则。
- 在合理时间内以合理音量收听。 听力适应后,请勿调节音量。
- 不要将音量调得太高,以致于听不到周围的声音。

• 在有潜在危险的情況下应谨慎使用或暂停使用。

• 铭牌(铭牌上的信息包括工作电压, 消耗功率)位于主机背部, 使用前请先了解铭牌上的相关信息。

2 注意

如果用户未经 WOOX Innovations 的明确许可而擅自对此设备进行更 改或修改,则可能导致其无权操作此设备。

合规性

本装置包括此标签:

CLASS 1 LASER PRODUC

Ⅱ 类设备符号:

具有双重绝缘的Ⅱ类设备,不提供保护接地。

爱护环境

support.

本产品采用可回收利用的高性能材料和组件制造而成。 切勿将本产品与其它生活垃圾一起处理。 请自行了解当地关于分类 收集电子、电气产品及电池的规定。 正确弃置这些产品有助于避免 对环境和人体健康造成潜在的负面影响 本产品所含的电池不能与一般的生活垃圾一同弃置。

EN To download the full user manual, visit www.philips.com/support.

CN 要下载完整用户手册,请访问 www.philips.com/

请自行了解当地关于分类收集电池的规定。 正确弃置电池有助于避

免对环境和人类健康造成潜在的负面影响。

关于您所在地区回收中心的更多信息,请访问 www.recycle. philips.com.

环境信息 已省去所有不必要的包装。 我们努力使包装易于分为三种材料: 纸 板(盒)、泡沫塑料(缓冲物)和聚乙烯(袋、保护性泡沫片)。

您的系统包含可回收利用的材料(如果由专业公司拆卸)。 请遵守 当地有关包装材料、废电池和旧设备的处理的规定。

商标声明

□iPod □iPhone □iPad

"Made for iPod"、"Made for iPhone"和"Made for iPad"表 示电子附件专为连接 iPod、iPhone 或 iPad 而设计,并经开发人员 认证,符合 Apple 性能标准。 Apple 对该设备的操作及其是否符 合安全和法规标准不负任何责任。 请注意,通过 iPod、iPhone 或 iPad 使用该配件可能影响无线性能。

iPod 和 iPhone 是 Apple Inc. 在美国 和其它国家/地区注册的商 标。 iPad 是 Apple Inc. 的商标。

电路板组件

(Power cord &

) 附件(电源线,连接

2014 © WOOX Innovations Limited. 保留所有权利。 飞利浦及飞利浦盾牌标志是 Koninklijke Philips N.V. 的注册商标 经 Koninklijke Philips N.V. 许可,由 WOOX Innovations Limited 使

规格如有更改,恕不另行通知。 WOOX 保留随时更改产品的权 利,而且没有义务对较早前提供的产品进行相应的调整。

有毒有害物质或元素 、价铬(Chromium | 多溴联苯 | 多溴二苯醚 VD/CD 光盒 喇叭单元

〇:表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 - 2006标准规定的限量要求以下。 part is below the limit requirement in SJ/T11363 - 2006.

×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363 - 2006 标准规定的限量要

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.

环保使用期限 Environmental Protection Use Period

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变,电子信息产品用户使 用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

caused by failure to follow the instructions, the warranty does not apply.



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electric shock. For the safety of everyone in your household, please do not remove product covering. The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

Important safety instructions

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact the Consumer Care to have the product checked before use.
- including direct sunlight. Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the
- matches the value printed on the back of the product. Never connect the product to the power outlet if the voltage is different. Never expose the remote control or batteries to rain, water, sunshine, or excessive
- Use only power supplies listed in the user manual.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.

inches around the product for ventilation.

until its temperature matches room temperature before connecting it to the power

Risk of contamination!

Remove the battery if it is exhausted or if the remote control is not to be used for an

Warning

Never remove the casing of this apparatus.

- Never place this apparatus on other electrical equipmer
- Keep this apparatus away from direct sunlight, naked flames or heat.
 Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from

Hearing safety



Read and understand all instructions before you use this micro music system. If damage is

Know these safety symbols



WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this CAUTION:To prevent electric shock, fully insert the plug. (For regions with polarized plugs:

To prevent electric shock, match wide blade to wide slot.)

- Never place the product and accessories near naked flames or other heat sources,
- disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms When you disconnect the power cord, always pull the plug, never the cable. Risk of short circuit or fire! Before you connect the product to the power outlet, make sure that the power voltage
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire. Risk of injury or damage to the product!
- Never place the product or any objects on power cords or on other electrical If the product is transported in temperatures below 5°C, unpack the product and wait

Risk of overheating!

Never install this product in a confined space. Always leave a space of at least four

Make sure that curtains or other objects never cover the ventilation slots on the

extended period of time Batteries contain chemical substances, they should be disposed of properly.

specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

"Made for iPod." "Made for iPhone." and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

DCM3260 93 Short UM V1.0.indd 2